

CP337 Series

System Board User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

© 2011. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Copyright.....	2
Trademarks.....	2
FCC and DOC Statement on Class B.....	3
About this Manual.....	6
Warranty	6
Static Electricity Precautions.....	7
Safety Measures.....	7
About the Package.....	8
Before Using the System Board.....	8
Chapter 1 - Introduction	9
Specifications.....	9
Features	12
Chapter 2 - Hardware Installation.....	16
System Board Layout	16
System Memory	17
Installing the DIMM Module.....	18
Jumper Settings.....	20
Clear CMOS Data	20
PS/2 Power Select.....	21
USB Power Select.....	22
Panel Power Select.....	23
COM 3 RS232/RS422/RS485 Select.....	24
COM 2 RS232/Power Select.....	25
Power-on Select.....	26
CompactFlash Card Setting	27
Rear Panel I/O Ports.....	28
PS/2 Mouse and PS/2 Keyboard Ports.....	29
COM (Serial) Ports	30
VGA Port.....	32
DVI-I Port	33
RJ45 LAN Port	34
USB Ports.....	35
Audio	37

I/O Connectors.....	39
CD-in Internal Audio Connector	39
S/PDIF Connector.....	40
LVDS LCD Panel and LCD/Inverter Power Connector	41
Digital I/O Connector.....	43
SATA (Serial ATA) Connectors	44
IDE Connector	45
FDD Connector	47
Cooling Fan Connectors.....	48
Chassis Intrusion Connector	49
Power Connector.....	50
Standby Power LED	51
Front Panel Connectors	52
Expansion Slots	53
Battery	54
CompactFlash Socket.....	55
 Chapter 3 - BIOS Setup	 56
Overview	56
AMI BIOS Setup Utility	58
Main	58
Advanced	59
Chipset.....	77
Boot.....	82
Security	83
Save & Exit	84
Updating the BIOS.....	85
 Chapter 4 - Supported Software	 86
 Chapter 5 - RAID	 111
 Chapter 6 - Intel AMT Settings	 117
 Appendix A - NLITE and AHCI Installation Guide	 152
 Appendix B - Watchdog Sample Code	 164
 Appendix C - System Error Message.....	 165
 Appendix D - Troubleshooting.....	 167

About this Manual

An electronic file of this manual is included in the CD. To view the user's manual in the CD, insert the CD into a CD-ROM drive. The autorun screen (Main Board Utility CD) will appear. Click "User's Manual" on the main menu.

Warranty

1. Warranty does not cover damages or failures that arised from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

To avoid damage to the system:

- Use the correct AC input voltage range.

To reduce the risk of electric shock:

- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

Battery:

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

About the Package

The system board package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- ☑ One system board
- ☑ One IDE cable
- ☑ Two USB cables
- ☑ Two Serial ATA data cables
- ☑ Two Serial ATA power cables
- ☑ One I/O shield
- ☑ One CD
- ☑ One QR (Quick Reference)

The system board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

Before using the system board, prepare basic system components.

If you are installing the system board in a new system, you will need at least the following internal components.

- A CPU
- Memory module
- Storage devices such as hard disk drive, CD-ROM, etc.

You will also need external system peripherals you intend to use which will normally include at least a keyboard, a mouse and a video display monitor.

Chapter I - Introduction

Specifications

Processor	<ul style="list-style-type: none">• Intel® Core™ i7-610E (SV) : CP337-NRM610E• Intel® Core™ i7-620LE (LV) : CP337-NRM620L• Intel® Core™ i7-620UE (ULV) : CP337-NRM620U• Intel® Core™ i7-660UE (ULV) : CP337-NRM660U• Intel® Core™ i5-520E (SV) : CP337-NRM520E• Intel® Core™ i3-330E (SV) : CP337-NRM330E• Intel® Celeron P4505 (SV) : CP337-NR4505• Intel® Celeron U3405 (ULV) : CP337-NR3405• Processor package: BGA1288
Chipset	<ul style="list-style-type: none">• Intel® QM57 PCH (Platform Controller Hub)
System Memory	<ul style="list-style-type: none">• Two 240-pin DIMM sockets• Supports DDR3 800/1066MHz with ECC (PC3-6400/PC3-8500)• Supports dual channel memory interface• Supports up to 8GB system memory• DRAM device technologies: 1Gb and 2Gb DDR3 DRAM technologies are supported for x8 and x16 devices, unbuffered, with ECC
Expansion Slots	<ul style="list-style-type: none">• 1 PCI Express x16 slot• 1 PCI Express x4 slot• 2 PCI slots• 1 CompactFlash socket
Graphics	<ul style="list-style-type: none">• Intel® HD Graphics• Display ports: DVI-I (Chrontel CH7318), LVDS and VGA• LVDS: Single Channel - 18/24-bit; Dual Channel: 36/48-bit• Intel® Clear Video technology• Intel® Dynamic Video Memory Technology (Intel® DVMT)• Intel® Smart 2D Display Technology (Intel® S2DDT)
Audio	<ul style="list-style-type: none">• Realtek ALC262 2-channel High Definition Audio• High performance DACs with 100dB SNR• ADCs with 90dB SNR• Two stereo DACs support 24-bit PCM format for stereo audio playback• Three stereo ADCs support 20-bit PCM format for multiple input streaming• S/PDIF audio interface
LAN	<ul style="list-style-type: none">• Intel 82577LM with iAMT6.0 Gigabit Ethernet Phy• Realtek RTL8111C PCI Express Gigabit Ethernet controller• Integrated 10/100/1000 transceiver• Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab• Supports wire management

Serial ATA	<ul style="list-style-type: none"> • 6 Serial ATA ports compliant with SATA 1.0a specification • SATA speed up to 3Gb/s (SATA 2.0) • Integrated Advanced Host Controller Interface (AHCI) controller • Supports RAID 0/1/5/10
IDE	<ul style="list-style-type: none"> • JMicron JMB368 PCI Express to PATA host controller • DMA mode: Ultra ATA up to 100MB/s • PIO mode: up to 16MB/s
AMT (-NRM only)	<ul style="list-style-type: none"> • Supports iAMT6.0 • Out-of-band system access • Remote troubleshooting and recovery • Hardware-based agent presence checking • Proactive alerting • Remote hardware and software asset tracking
TPM (optional)	<ul style="list-style-type: none"> • TPM - Trusted Platform Module • Provides a Trusted PC for secure transactions • Provides software license protection, enforcement and password protection
Rear Panel I/O Ports	<ul style="list-style-type: none"> • 1 mini-DIN-6 PS/2 mouse port • 1 mini-DIN-6 PS/2 keyboard port • 2 DB-9 RS232 serial ports <ul style="list-style-type: none"> - Pins 1 and 9 of COM 2 functions as RS232 signal or power (selectable via jumper) • 1 DB-15 VGA port • 1 DVI-I port (DVI-D signal only) • 2 RJ45 LAN ports • 4 USB 2.0/1.1 ports • Mic-in, line-in and line out jacks
I/O Connector	<ul style="list-style-type: none"> • 4 connectors for 8 external USB 2.0/1.1 ports • 2 connectors for 2 external serial ports <ul style="list-style-type: none"> - COM 3 supports RS232/422/485 • 1 LVDS LCD panel connector • 1 LCD/inverter power connector • 1 8-bit Digital I/O connector • 1 front audio connector for line-out and mic-in jacks • 1 CD-in connector • 1 S/PDIF connector • 6 Serial ATA connectors • 1 34-pin FDD connector • 1 40-pin IDE connector • 1 24-pin ATX power connector • 1 front panel connector • 3 fan connectors

BIOS	<ul style="list-style-type: none"> • AMI BIOS • 64Mbit SPI BIOS
Energy Efficient Design	<ul style="list-style-type: none"> • Supports ACPI v2.0 specification • System Power Management • Wake-On-Events include: <ul style="list-style-type: none"> - Wake-On-PS/2 KB/Mouse and Wake-On-USB KB/Mouse - Wake-On-LAN and Wake-On-Ring - RTC timer to power-on the system • CPU stopped clock control • AC power failure recovery
Damage Free Intelligence	<ul style="list-style-type: none"> • Monitors CPU/system temperature and overheat alarm • Monitors Vcore/12V/1.5V/1.05V/5V/3VSB voltages and failure alarm • Monitors CPU/chassis/2nd fan speed and failure alarm • Read back capability that displays temperature, voltage and fan speed • Watchdog timer function
Temperature	<ul style="list-style-type: none"> • 0°C to 60°C
Humidity	<ul style="list-style-type: none"> • 10% to 90%
PCB	<ul style="list-style-type: none"> • MicroATX form factor • 244mm (9.6") x 244mm (9.6")

Features

Watchdog Timer

The Watchdog Timer function allows your application to regularly “clear” the system at the set time interval. If the system hangs or fails to function, it will reset at the set time interval so that your system will continue to operate.

DDR3

DDR3 delivers increased system bandwidth and improved performance. It offers peak data transfer rate of up to 21 Gb/s bandwidth. The advantages of DDR3 are its higher bandwidth and its increase in performance at a lower power than DDR2.

Graphics

The integrated Intel Gen5.75 graphics engine delivers an excellent blend of graphics performance and features to meet business needs. With support for Intel Clear Video technology, Intel DVMT and Intel S2DDT, Intel Gen5.75 provides excellent video and 3D graphics with outstanding graphics responsiveness. These enhancements deliver the performance and compatibility needed for today’s and tomorrow’s business applications.

DVI

DVI (Digital Visual Interface) is a form of video interface technology made to maximize the quality of flat panel LCD monitors and modern video graphics cards. Data is transmitted using the TMDS (Transition Minimized Differential Signaling) protocol, providing a digital signal from the PC’s graphics subsystem to the display.

LVDS

The Low-Voltage Differential Signaling (LVDS) interface allows the Intel Graphics Media Adapter to communicate directly to the flat-panel display. The LVDS interface supports pixel color depths of 18 and 24 bits.

PCI Express

PCI Express is a high bandwidth I/O infrastructure that possesses the ability to scale speeds by forming multiple lanes. The x4 PCI Express lane supports transfer rate of 1 Gigabyte per second. The PCI Express architecture also provides a high performance graphics infrastructure by enhancing the capability of a x16 PCI Express lane to provide 4 Gigabytes per second transfer rate.

Intel Active Management Technology (AMT)

Intel Active Management Technology (Intel® AMT) allows remote access and management of networked systems even while PCs are powered off, remotely repair systems after OS failures and has the capability to remotely update all systems with the latest security software.

S/PDIF

S/PDIF is a standard audio file transfer format that transfers digital audio signals to a device without having to be converted first to an analog format. This prevents the quality of the audio signal from degrading whenever it is converted to analog. S/PDIF is usually found on digital audio equipment such as a DAT machine or audio processing device. The S/PDIF connector on the system board sends surround sound and 3D audio signal outputs to amplifiers and speakers and to digital recording devices like CD recorders.

Serial ATA

Serial ATA is a storage interface that is compliant with SATA 1.0a specification. With speed of up to 3Gbps, it improves hard drive performance faster than the standard parallel ATA whose data transfer rate is 100MB/s. The system board supports RAID 0, RAID 1, RAID 5 and RAID 10.

Gigabit LAN

The Intel 82577LM Gigabit LAN Phy supports iAMT6.0 while the Realtek RTL8111C PCI Express Gigabit controller supports up to 1Gbps data transmission.

USB

The system board supports USB 2.0 and USB 1.1 ports. USB 1.1 supports 12Mb/second bandwidth while USB 2.0 supports 480Mb/second bandwidth providing a marked improvement in device transfer speeds between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

CompactFlash

The system board is equipped with the CompactFlash™ socket for inserting a CompactFlash™ card. CompactFlash™ card is a small removable mass storage device designed with flash technology - a non-volatile storage solution that does not require a battery to retain data indefinitely. The CompactFlash™ technology is widely used in products such as portable and desktop computers, digital cameras, handheld data collection scanners, PDAs, Pocket PCs, handy terminals and personal communicators.

Wake-On-Ring

This feature allows the system that is in the Suspend mode or Soft Power Off mode to wake-up/power-on to respond to calls coming from an external modem or respond to calls from a modem PCI card that uses the PCI PME (Power Management Event) signal to remotely wake up the PC.

**Important:**

The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

Wake-On-LAN

This feature allows the network to remotely wake up a Soft Power Down (Soft-Off) PC. It is supported via the onboard LAN port or via a PCI LAN card that uses the PCI PME (Power Management Event) signal. However, if your system is in the Suspend mode, you can power-on the system only through an IRQ or DMA interrupt.

**Important:**

The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

Wake-On-PS/2

This function allows you to use the PS/2 keyboard or PS/2 mouse to power-on the system.

**Important:**

The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

Wake-On-USB

This function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.

**Important:**

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the 5V_standby power source of your power supply must support $\geq 1.5\text{A}$. For 3 or more USB ports, the 5V_standby power source of your power supply must support $\geq 2\text{A}$.

RTC Timer

The RTC installed on the system board allows your system to automatically power-on on the set date and time.

ACPI STR

The system board is designed to meet the ACPI (Advanced Configuration and Power Interface) specification. ACPI has energy saving features that enables PCs to implement Power Management and Plug-and-Play with operating systems that support OS Direct Power Management. ACPI when enabled in the Power Management Setup will allow you to use the Suspend to RAM function.

With the Suspend to RAM function enabled, you can power-off the system at once by pressing the power button or selecting "Standby" when you shut down Windows® without having to go through the sometimes tiresome process of closing files, applications and operating system. This is because the system is capable of storing all programs and data files during the entire operating session into RAM (Random Access Memory) when it powers-off. The operating session will resume exactly where you left off the next time you power-on the system.

**Important:**


The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

Power Failure Recovery

When power returns after an AC power failure, you may choose to either power-on the system manually or let the system power-on automatically.

Chapter 2 - Hardware Installation

System Board Layout

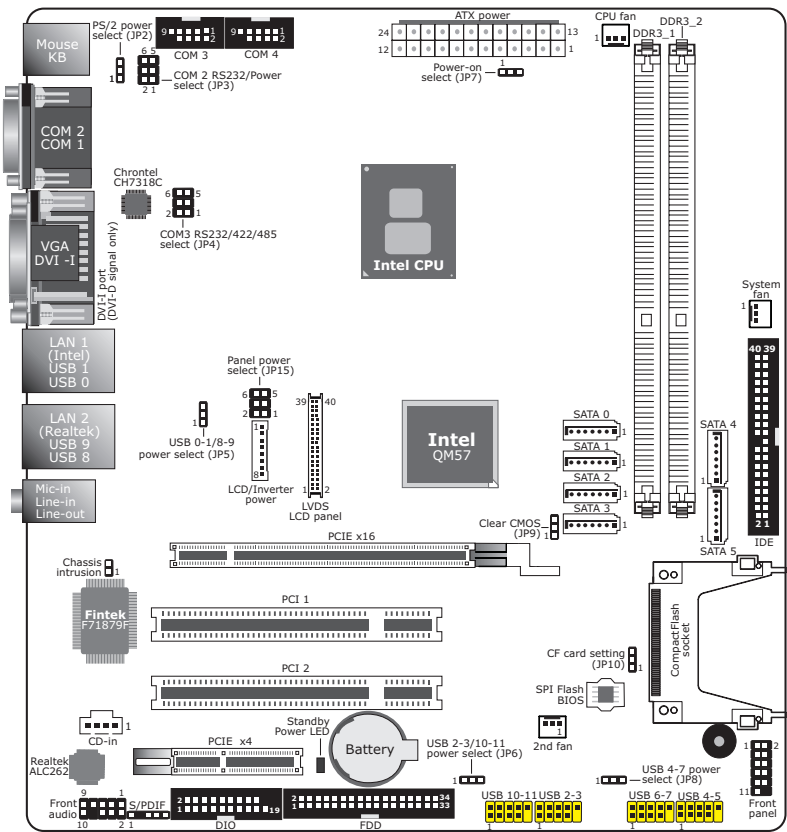


**Important:**

Electrostatic discharge (ESD) can damage your system board, processor, disk drives, add-in boards, and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

System Memory

**Important:**

When the Standby Power LED lit red, it indicates that there is power on the system board. Power-off the PC then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

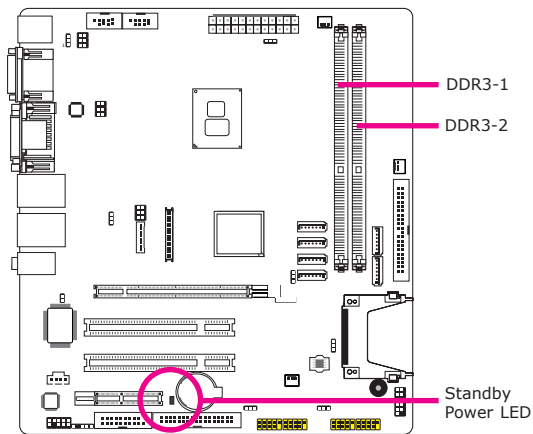

The system board is equipped with two 240-pin SODIMM sockets that support DDR3 memory modules.

The system board supports the following memory interface.

Single Channel (SC)

Data will be accessed in chunks of 64 bits from the memory channels.

Dual Channel (DC)

Data will be accessed in chunks of 128 bits from the memory channels. Dual channel provides better system performance because it doubles the data transfer rate.


Installing the DIMM Module

**Note:**

The system board used in the following illustrations may not resemble the actual board. These illustrations are for reference only.


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the DIMM socket on the system board.
4. Push the "ejector tabs" which are at the ends of the socket to the side.

Ejector tab

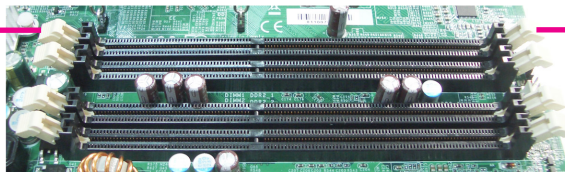


Ejector tab

5. Note how the module is keyed to the socket.




Notch


Key

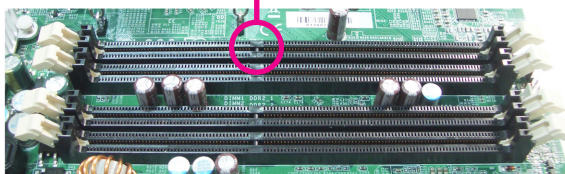


6. Grasping the module by its edges, position the module above the socket with the “notch” in the module aligned with the “key” on the socket. The keying mechanism ensures the module can be plugged into the socket in only one way.

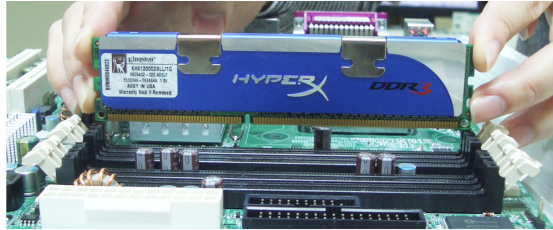

7. Seat the module vertically, pressing it down firmly until it is completely seated in the socket.

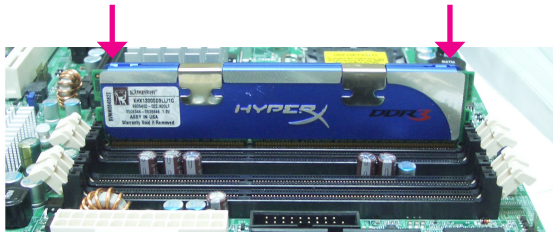


8. The ejector tabs at the ends of the socket will automatically snap into the locked position to hold the module in place.

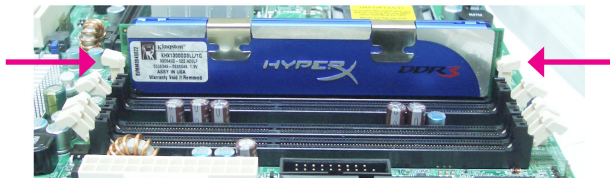

Jumper Settings

Clear CMOS Data

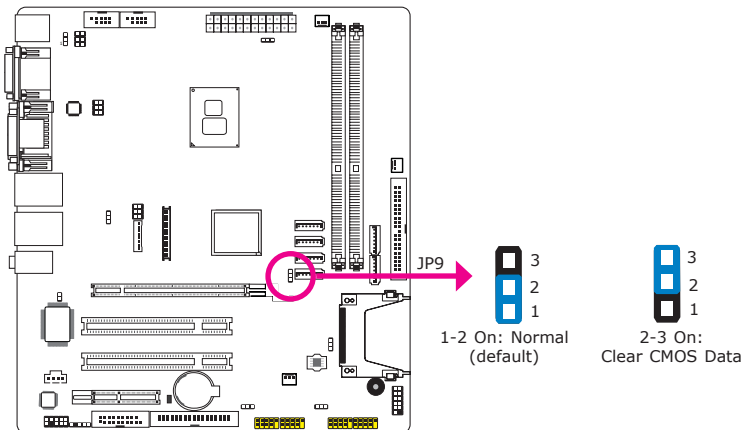

If you encounter the following,


- a) CMOS data becomes corrupted.
- b) You forgot the supervisor or user password.

you can reconfigure the system with the default values stored in the ROM BIOS.

To load the default values stored in the ROM BIOS, please follow the steps below.

1. Power-off the system and unplug the power cord.
2. Set JP9 pins 2 and 3 to On. Wait for a few seconds and set JP9 back to its default setting, pins 1 and 2 On.
3. Now plug the power cord and power-on the system.

PS/2 Power Select

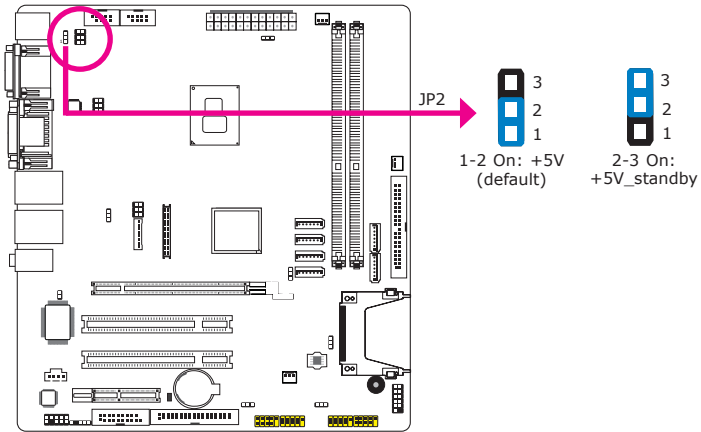

JP2 is used to select the power of the PS/2 keyboard/mouse port. Selecting +5V_standby will allow you to use the PS/2 keyboard or PS/2 mouse to wake up the system.

BIOS Setting


Configure the PS/2 keyboard/mouse wake up function in the Advanced menu ("ACPI Power Management Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.



Important:

The +5VSB power source of your power supply must support $\geq 720\text{mA}$.

USB Power Select

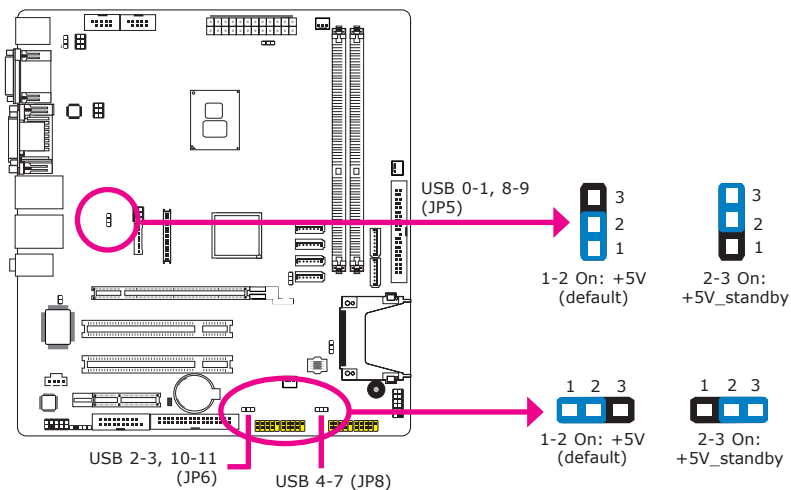


JP5 (for USB 0-1 and USB 8-9), JP6 (for USB 2-3, 10-11) and JP8 (for USB 4-7) are used to select the power of the USB ports. Selecting +5V_standby will allow you to use a USB device to wake up the system.

**Important:**

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

Panel Power Select

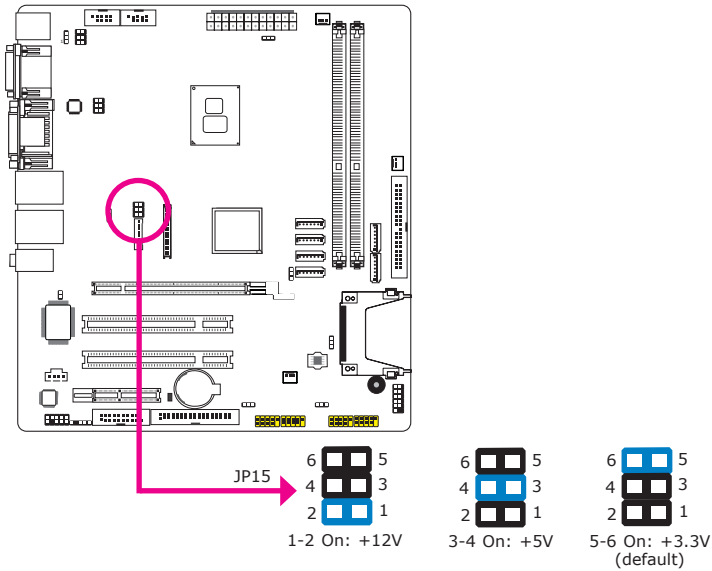


JP15 is used to select the power supplied to the LCD panel.



Important:


Before powering-on the system, make sure JP15's setting matches the LCD panel's specification. Selecting the incorrect voltage will seriously damage the LCD panel.

COM 3 RS232/RS422/RS485 Select

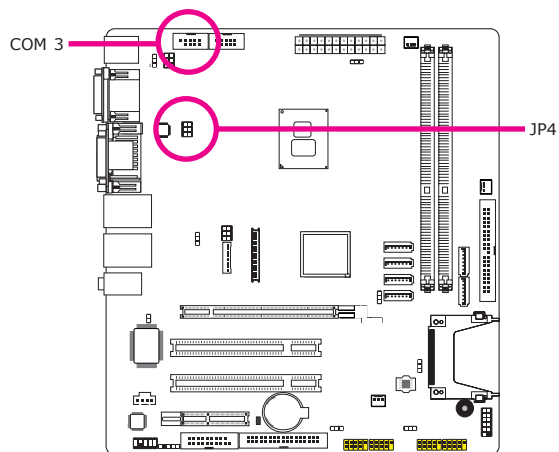


JP4 is used to configure COM 3 to RS232, RS422 (Half Duplex) or RS485.

The pin function of COM 3 will vary according to the jumper's setting.

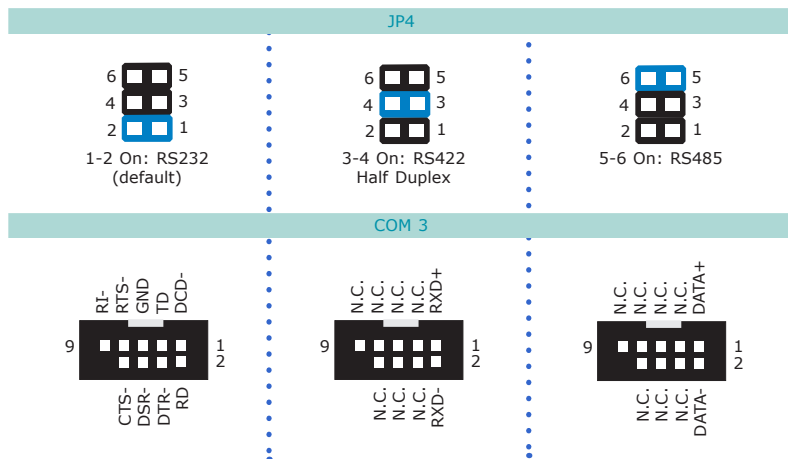

COM 2 RS232/Power Select


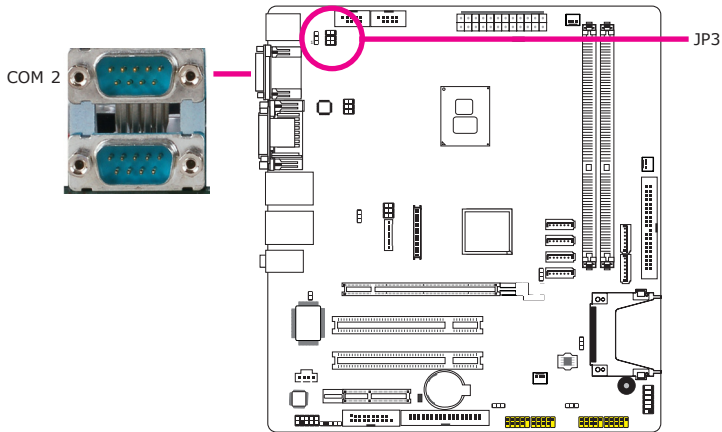


JP3


6 5
4 3
2 1
1-3, 2-4 On:
RS232 standard
(default)

6 5
4 3
2 1
3-5 (+12V),
4-6 (+5V) On:
RS232 with power

COM 2

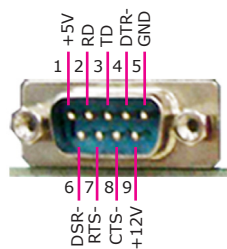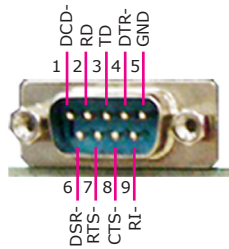

Power-on Select

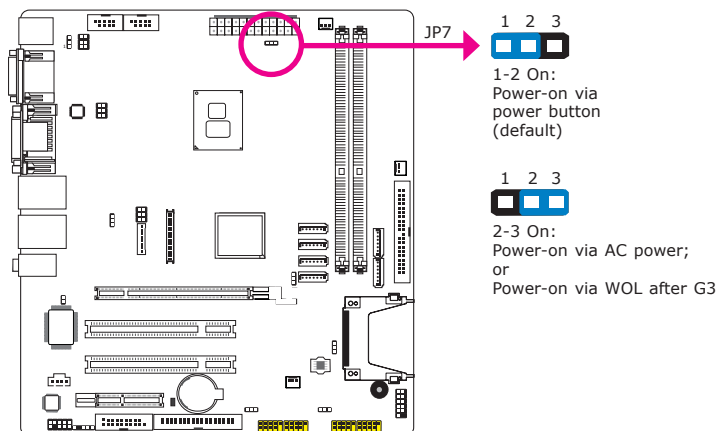

To power-on via WOL after G3:


1. Set JP7 pins 2 and 3 to On.
2. Set the "After G3" field to **Power Off/WOL**.
3. Set the "Wake On LAN From S5" to **Enabled**.

The BIOS fields are in the "South Bridge" submenu (Chipset menu) of the AMI BIOS utility.

To power-on via AC Power:

1. Set JP7 pins 2 and 3 to On.
2. Set the "After G3" field to **Power On**.

CompactFlash Card Setting

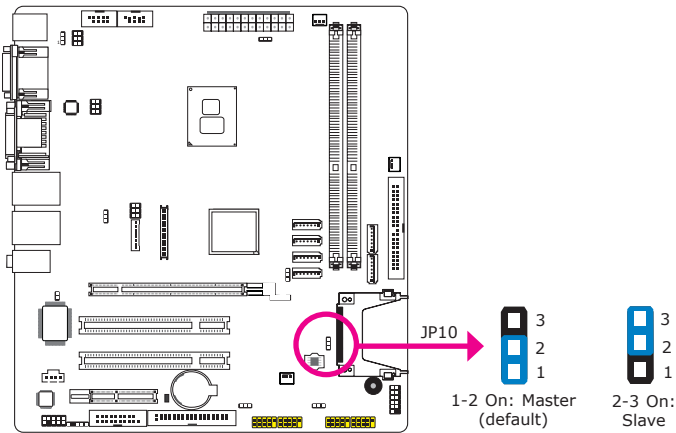


JP10 is used to set the CompactFlash card to Master or Slave mode.

**Note:**

We do not recommend using IDE devices and CF card at the same time.


Rear Panel I/O Ports

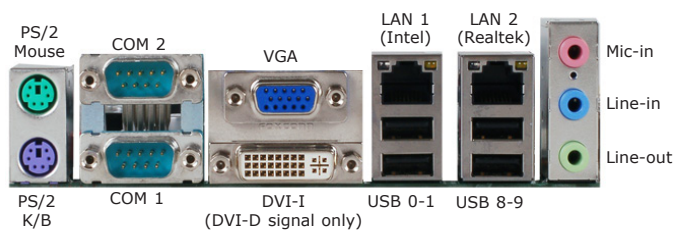

The rear panel I/O ports consist of the following:

- PS/2 mouse port
- PS/2 keyboard port
- 2 COM ports
- VGA port
- DVI-I port (DVI-D signal only)
- Intel LAN port
- Realtek LAN port
- 4 USB ports
- Mic-in jack
- Line-in jack
- Line-out jack

PS/2 Mouse and PS/2 Keyboard Ports

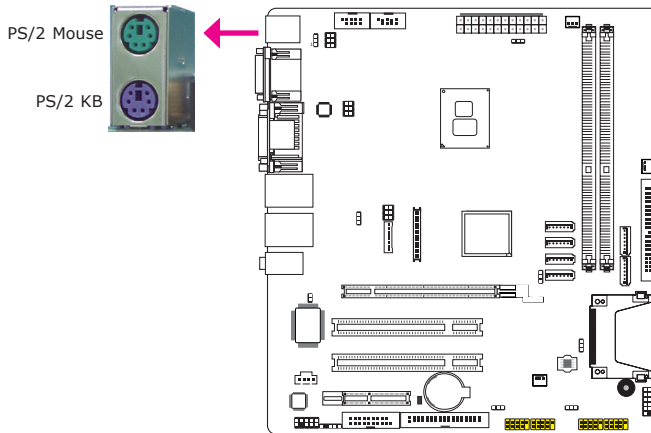

These ports are used to connect a PS/2 mouse and a PS/2 keyboard. The PS/2 mouse port uses IRQ12.



Important:

Make sure to turn off your computer prior to connecting or disconnecting a mouse or keyboard. Failure to do so may damage the system board.

Wake-On-PS/2 Keyboard/Mouse

The Wake-On-PS/2 Keyboard/Mouse function allows you to use the PS/2 keyboard or PS/2 mouse to power-on the system. To use this function:

- **Jumper Setting**

JP2 must be set to "2-3 On: +5V_standby". Refer to "PS/2 Power Select" in this chapter for more information.

- **BIOS Setting**


Configure the PS/2 keyboard/mouse wake up function in the Advanced menu ("ACPI Power Management Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.



Important:

The +5V_standby power source of your power supply must support $\geq 720\text{mA}$.

COM (Serial) Ports

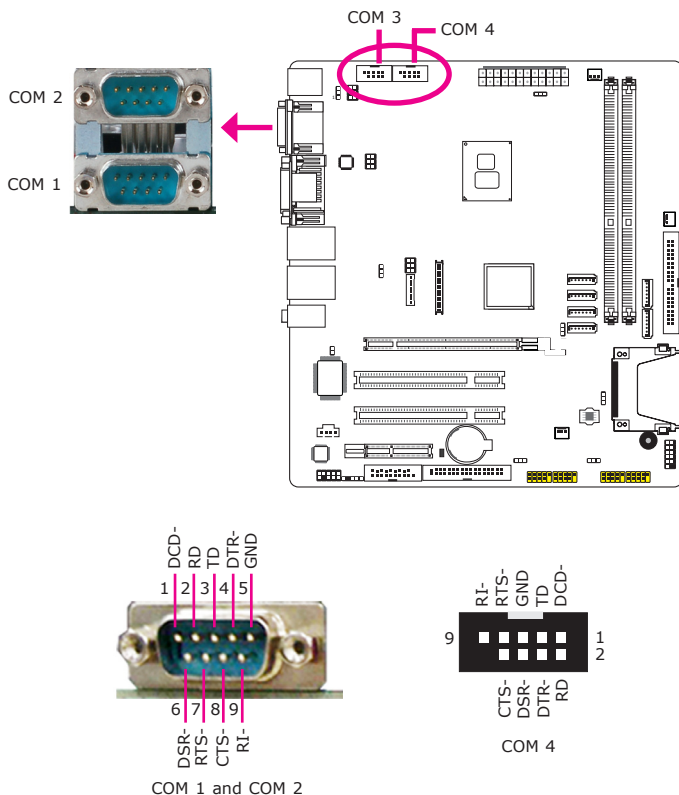

COM 1, COM 2 and COM 4 are fixed at RS232.

COM 3's pin definition will vary according to JP4's settings. Refer to "COM 3 RS232/RS422/RS485 Select" in this chapter for more information.

The serial ports are asynchronous communication ports with 16C550A-compatible UARTs that can be used with modems, serial printers, remote display terminals, and other serial devices.


Connecting External Serial Ports

Your COM port may come mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the serial port cable to the COM connector. Make sure the colored stripe on the ribbon cable is aligned with pin 1 of the COM connector.

BIOS Setting

Configure the serial ports in the Advanced menu ("UART Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

VGA Port

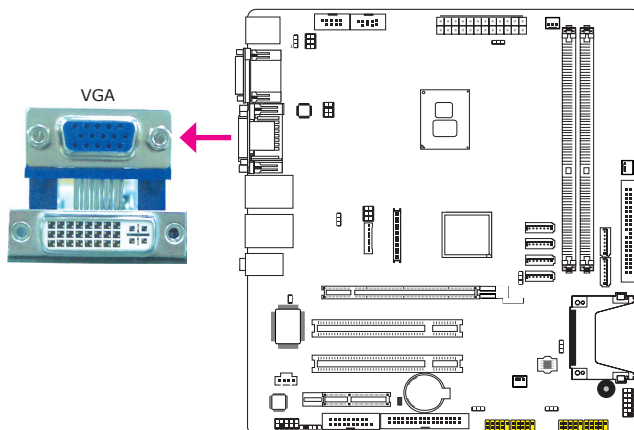

The VGA port is used for connecting a VGA monitor. Connect the monitor's 15-pin D-shell cable connector to the VGA port. After you plug the monitor's cable connector into the VGA port, gently tighten the cable screws to hold the connector in place.


BIOS Setting

Configure the onboard VGA in the Advanced menu ("Video Function Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

Install the graphics driver. Refer to chapter 4 for more information.

DVI-I Port

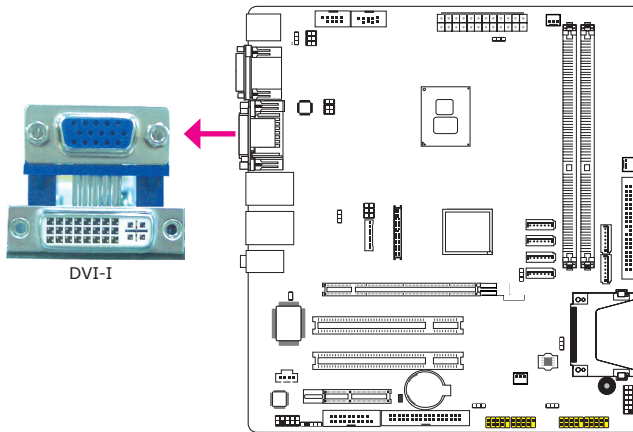


The DVI-I port is used to connect an LCD monitor. This port supports DVI-D signal only.

Connect the display device's cable connector to the DVI-I port. After you plug the cable connector into the port, gently tighten the cable screws to hold the connector in place.

BIOS Setting

Configure the display device in the Advanced menu ("Video Function Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

RJ45 LAN Ports

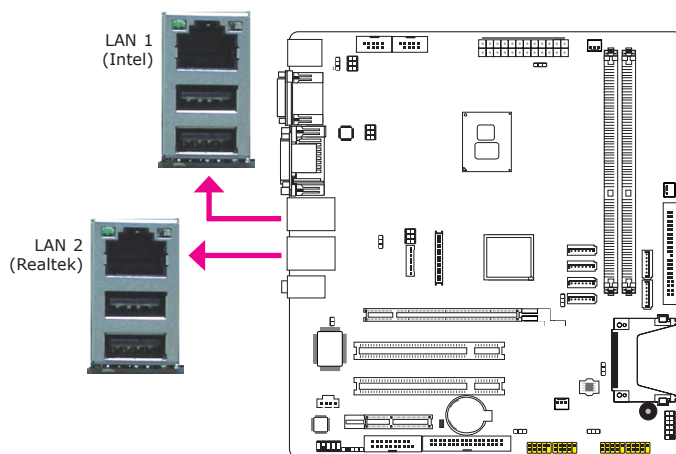

The LAN ports allow the system board to connect to a local area network by means of a network hub.


BIOS Setting

Configure the onboard LAN ports in the Chipset menu ("South Bridge" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

Install the LAN drivers. Refer to chapter 4 for more information.

USB Ports

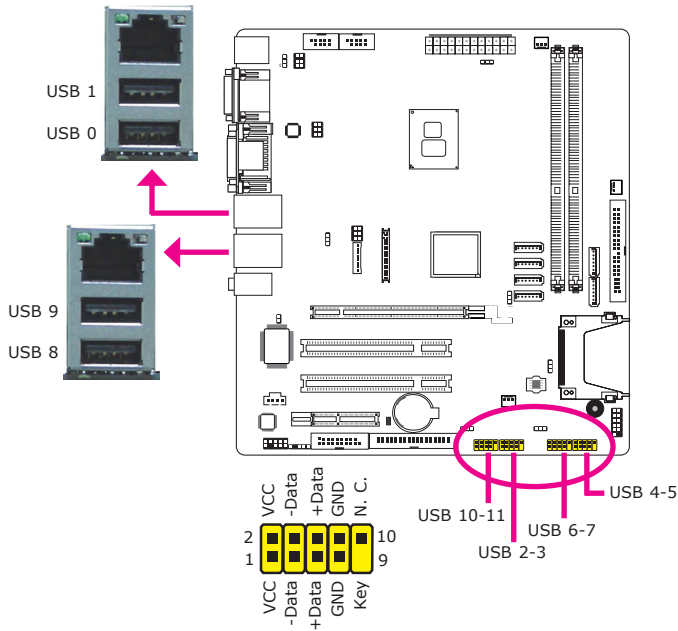

USB allows data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

The system board is equipped with four onboard USB 2.0/1.1 ports. The four 10-pin connectors allow you to connect 8 additional USB 2.0/1.1 ports. The USB ports may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the USB port cables to a connector.

BIOS Setting

Configure the onboard USB in the Chipset menu ("South Bridge" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use the USB device. Refer to your operating system's manual or documentation for more information.

Wake-On-USB Keyboard/Mouse

The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state. To use this function:

- Jumper Setting


JP5/JP6/JP8 must be set to "2-3 On: +5V_standby". Refer to "USB Power Select" in this chapter for more information.



Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

Audio

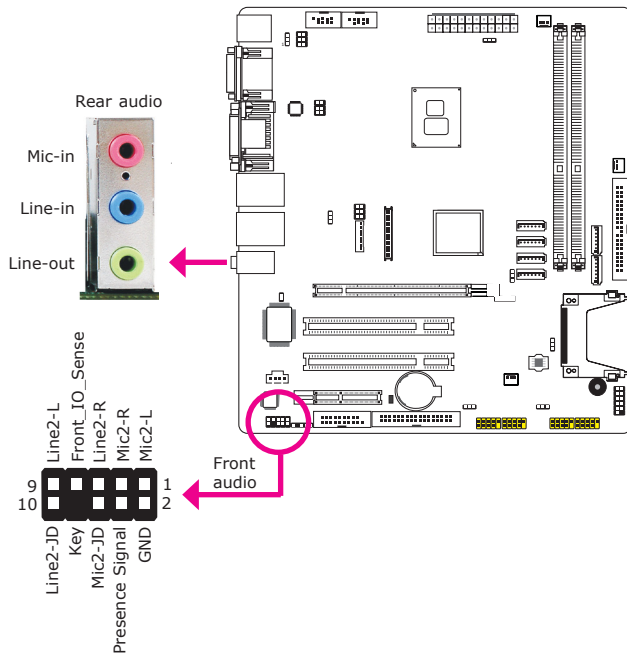

Rear Audio

The system board is equipped with 3 audio jacks. A jack is a one-hole connecting interface for inserting a plug.

- **Mic-in Jack (Pink)**
This jack is used to connect an external microphone.
- **Line-in Jack (Light Blue)**
This jack is used to connect any audio devices such as Hi-fi set, CD player, tape player, AM/FM radio tuner, synthesizer, etc.
- **Line-out Jack (Lime)**
This jack is used to connect a headphone or external speakers.

Front Audio

The front audio connector allows you to connect to the second line-out and mic-in jacks that are at the front panel of your system.

BIOS Setting


Configure the onboard audio in the Chipset menu ("South Bridge" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

Install the audio driver. Refer to chapter 4 for more information.


I/O Connectors

CD-in Internal Audio Connector

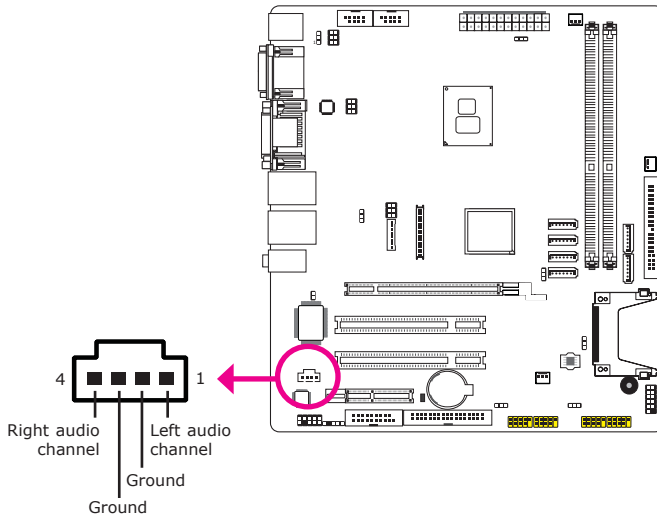


The CD-in connector is used to receive audio from a CD-ROM drive, TV tuner or MPEG card.

S/PDIF Connector

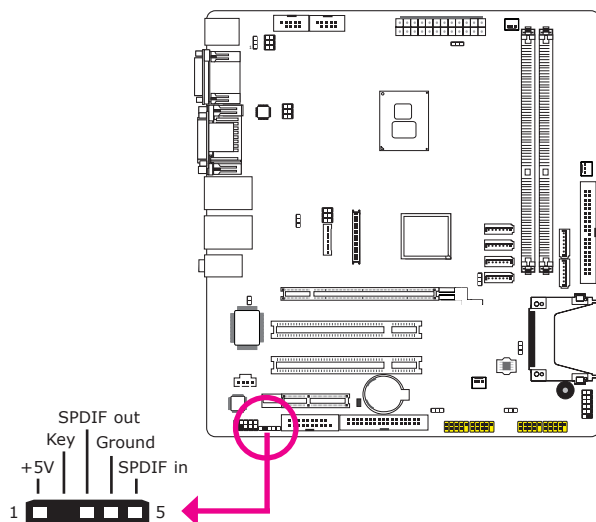

The S/PDIF connector is used to connect an external S/PDIF port. Your S/PDIF port may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then connect the audio cable to the S/PDIF connector. Make sure pin 1 of the audio cable is aligned with pin 1 of the S/PDIF connector.

LVDS LCD Panel Connector LCD/Inverter Power Connector

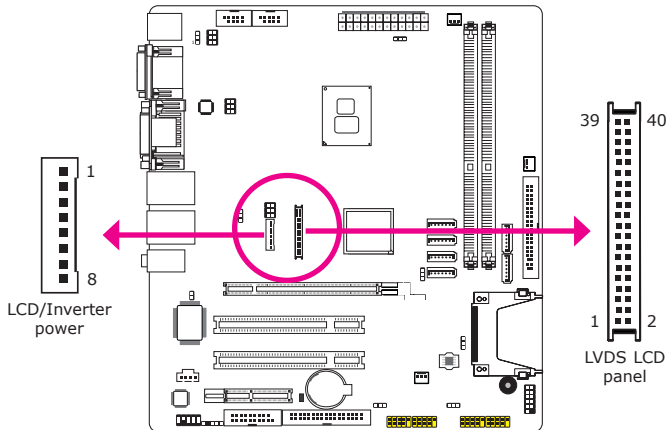

The system board allows you to connect a LCD Display Panel by means of the LVDS LCD panel connector and the LCD/Inverter power connector. These connectors transmit video signals and power from the system board to the LCD Display Panel.

Refer to the next page for the pin functions of these connectors.

BIOS Setting

Configure the LCD panel in the Chipset menu of the BIOS. Refer to chapter 3 for more information.


LVDS LCD Panel Connector

Pins	Function	Pins	Function
1	GND	2	GND
3	LVDS_Out3+	4	LVDS_Out7+
5	LVDS_Out3-	6	LVDS_Out7-
7	GND	8	GND
9	LVDS_Out2+	10	LVDS_Out6+
11	LVDS_Out2-	12	LVDS_Out6-
13	GND	14	GND
15	LVDS_Out1+	16	LVDS_Out5+
17	LVDS_Out1-	18	LVDS_Out5-
19	GND	20	GND
21	LVDS_Out0+	22	LVDS_Out4+
23	LVDS_Out0-	24	LVDS_Out4-
25	GND	26	GND
27	LVDS_CLK1+	28	LVDS_CLK2+
29	LVDS_CLK1-	30	LVDS_CLK2-
31	GND	32	GND
33	LVDS_DDCCLK	34	N. C.
35	LVDS_DDCDAA	36	N. C.
37	Panel Power	38	Panel Power
39	Panel Power	40	Panel Power

LCD/Inverter Power Connector

Pins	Function
1	GND
2	GND
3	Panel Inverter Brightness Voltage Control
4	Panel Power
5	+3.3V
6	Panel Backlight On/Off Control
7	+12V
8	+12V


Digital I/O Connector

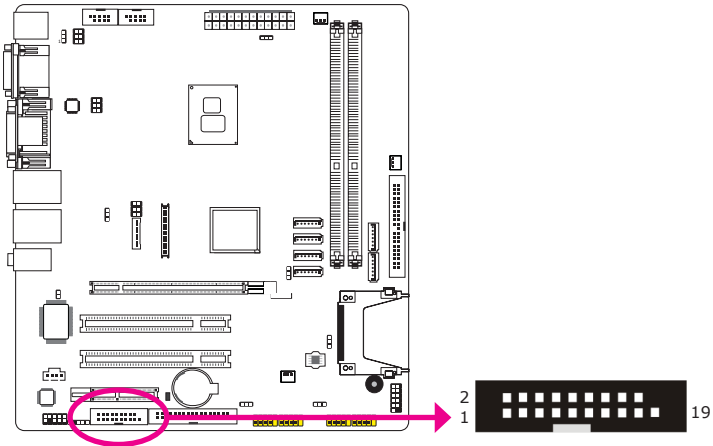

The Digital I/O connector provides powering-on function to an external device that is connected to this connector.

Pins	Function	Pins	Function
1	GND	2	+12V
3	DIO7	4	+12V
5	DIO6	6	GND
7	DIO5	8	VCC
9	DIO4	10	VCC
11	DIO3	12	GND
13	DIO2	14	V_5P0_STBY
15	DIO1	16	V_5P0_STBY
17	DIO0	18	GND
19	GND		

SATA (Serial ATA) Connectors

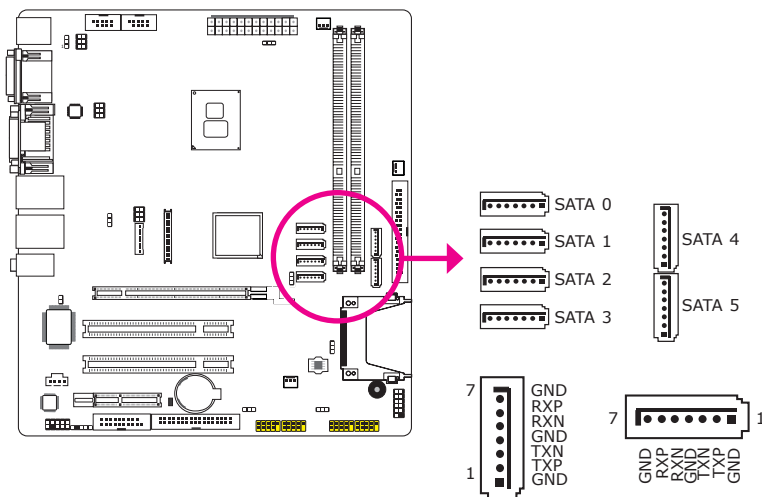

The Serial ATA connectors are used to connect Serial ATA devices. Connect one end of the Serial ATA cable to a SATA connector and the other end to your Serial ATA device.


BIOS Setting

Configure the Serial ATA drives in the Advanced menu ("SATA Configuration" sub-menu) of the BIOS. Refer to chapter 3 for more information.

Configuring RAID

The system board allows configuring RAID on Serial ATA drives. Refer to chapter 5 for steps in configuring RAID.

IDE Connector

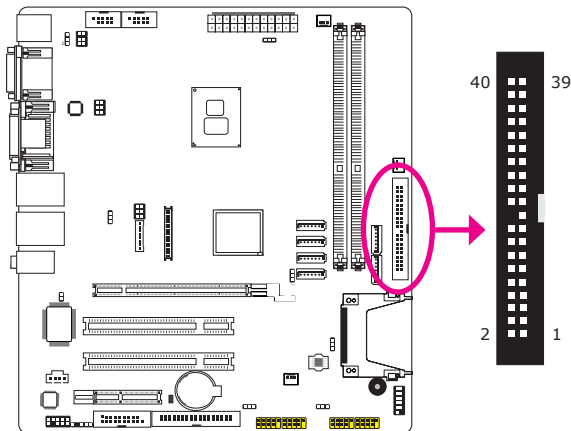

Important:

We do not recommend using IDE devices and CF card at the same time.

The IDE connector is used to connect hard drives. The connector on the IDE cable can be inserted into this connector only if pin 1 of the cable is aligned with pin 1 of this connector.

The IDE connector supports 2 devices, a Master and a Slave. Use an IDE ribbon cable to connect the drives to the system board. An IDE ribbon cable has 3 connectors on them, one that plugs into the IDE connector on the system board and the other 2 connects to IDE devices. The connector at the end of the cable is for the Master drive and the connector in the middle of the cable is for the Slave drive.



Note:

Refer to your disk drive user's manual for information about selecting proper drive switch settings.

Adding a Second IDE Disk Drive

When using two IDE drives, one must be set as the master and the other as the slave. Follow the instructions provided by the drive manufacturer for setting the jumpers and/or switches on the drives.

The system board supports Enhanced IDE or ATA-2, ATA/33, ATA/66 and ATA/100 hard drives. We recommend that you use hard drives from the same manufacturer. In a few cases, drives from two different manufacturers will not function properly when used together. The problem lies in the hard drives, not the system board.


**Important:**

If you encountered problems while using an ATAPI CD-ROM drive that is set in Master mode, please set the CD-ROM drive to Slave mode. Some ATAPI CD-ROMs may not be recognized and cannot be used if incorrectly set in Master mode.

BIOS Setting

Configure the onboard IDE in the Advanced menu ("Onboard ATA Controller Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

FDD Connector

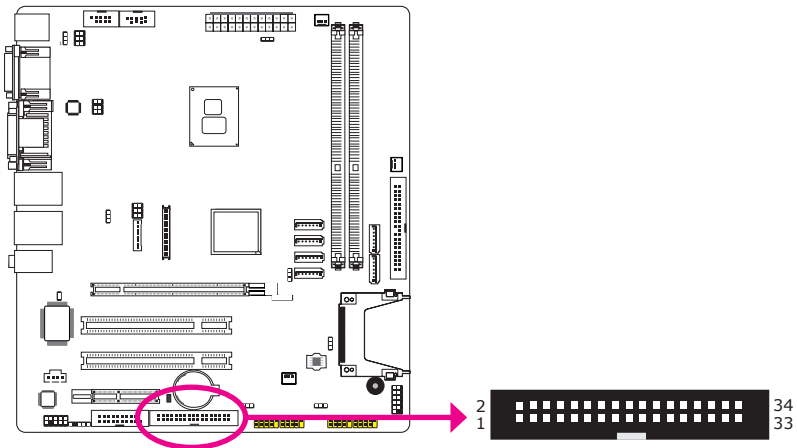

The FDD connector supports a standard floppy disk drive. The floppy cable can be inserted into this connector only if pin 1 of the cable is aligned with pin 1 of this connector.


Connecting the FDD Cable

Insert one end of the FDD cable into the FDD connector and the other end of the cable to the floppy drive. Pin 1 of the cable must align with pin 1 of the FDD connector.

BIOS Setting

Configure the onboard FDD in the Advanced menu ("Super IO Configuration" sub-menu) of the BIOS. Refer to chapter 3 for more information.

Cooling Fan Connectors

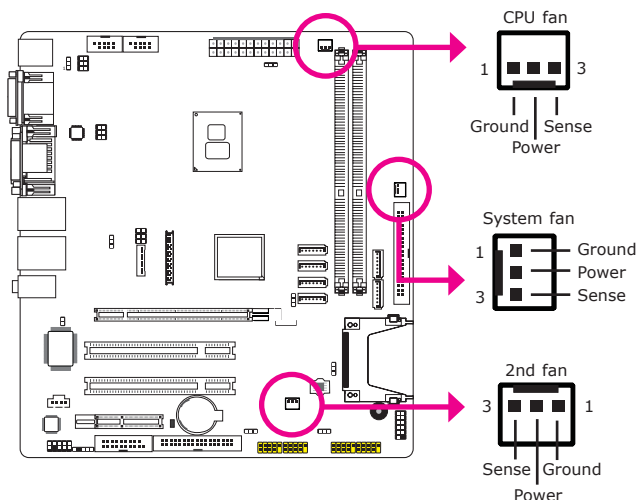


The fan connectors are used to connect cooling fans. The cooling fans will provide adequate airflow throughout the chassis to prevent overheating the CPU and system board components.

BIOS Setting

The Advanced menu ("PC Health Status" submenu) of the BIOS will display the current speed of the cooling fan. Refer to chapter 3 for more information.

Chassis Intrusion Connector

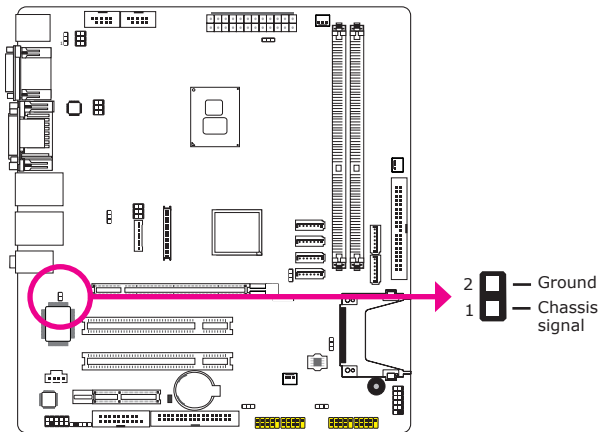


The board supports the chassis intrusion detection function. Connect the chassis intrusion sensor cable from the chassis to this connector. When the system's power is on and a chassis intrusion occurred, an alarm will sound. When the system's power is off and a chassis intrusion occurred, the alarm will sound only when the system restarts.

MyGuard Hardware Monitor

Install the "MyGuard Hardware Monitor" utility. By default, the chassis intrusion detection function is disabled. When enabled, a warning message will appear when the chassis is open. The utility can also be configured so that a beeping alarm will sound when the chassis is open. Refer to the "MyGuard Hardware Monitor" section in chapter 4 for more information.

Power Connector

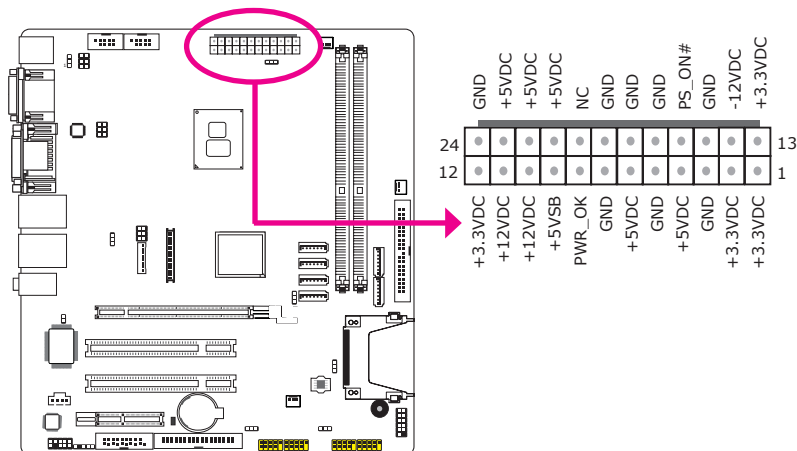


Connect a 24-pin ATX main power connector from the power supply unit to the 24-pin power connector. The connector from the power supply unit is designed to fit the 24-pin connector in only one orientation. Make sure to find the proper orientation before plugging the connector.

The system board requires a minimum of 120 Watt power supply to operate. We recommend that you use a power supply that complies with the ATX12V Power Supply Design Guide Version 1.1.

**Important**


The system board consumes a minimal amount of power. Due to its low power consumption, you only need a 120W to 150W power supply. Every power supply has its minimum load of power. If you use a greater than 150W power supply, the power consumed by the system board may not attain its minimum load causing instability to the entire system.

Standby Power LED

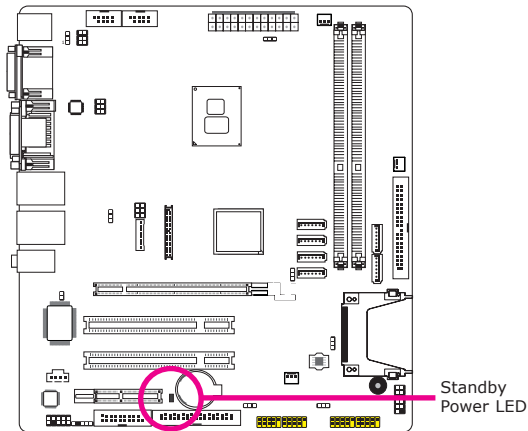

This LED will lit red when the system is in the standby mode. It indicates that there is power on the system board. Power-off the PC then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

Front Panel Connectors

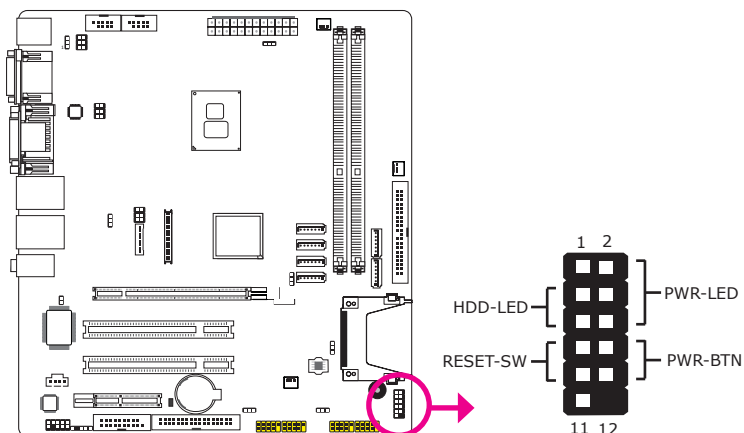

HDD-LED - HDD LED

This LED will light when the hard drive is being accessed.

RESET SW - Reset Switch

This switch allows you to reboot without having to power off the system.

PWR-BTN - Power Switch


This switch is used to power on or off the system.

PWR-LED - Power/Standby LED

When the system's power is on, this LED will light. When the system is in the S1 (POS - Power On Suspend) state, it will blink every second. When the system is in the S3 (STR - Suspend To RAM) state, it will blink every 4 seconds.

	Pin	Pin Assignment		Pin	Pin Assignment
N. C.	1	N. C.	PWR-LED	2	LED Power
				4	LED Power
				6	Signal
HDD-LED	3	HDD Power	PWR-BTN	8	GND
	5	Signal		10	Signal
RESET SW	7	Ground			
	9	RST Signal			
N. C.	11	N. C.	Key	12	Key

Expansion Slots

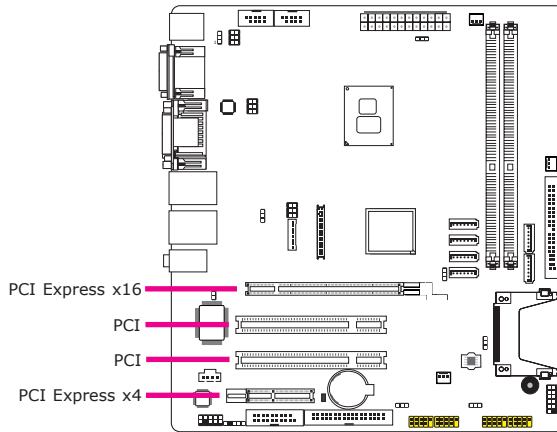

PCI Express x16 Slot

Install PCI Express x16 graphics card, that comply to the PCI Express specifications, into the PCI Express x16 slot. To install a graphics card into the x16 slot, align the graphics card above the slot then press it down firmly until it is completely seated in the slot. The retaining clip of the slot will automatically hold the graphics card in place.


PCI Express x4 Slot

Install PCI Express cards such as network cards or other cards that comply to the PCI Express specifications into the PCI Express x4 slot.

PCI Slots

The PCI slot supports expansion cards that comply with PCI specifications. You can install a PCI expansion card or a customized riser card designed for 1, 2 or 3 PCI slots expansion (for low profile PCI card only) into the PCI slot.

Battery

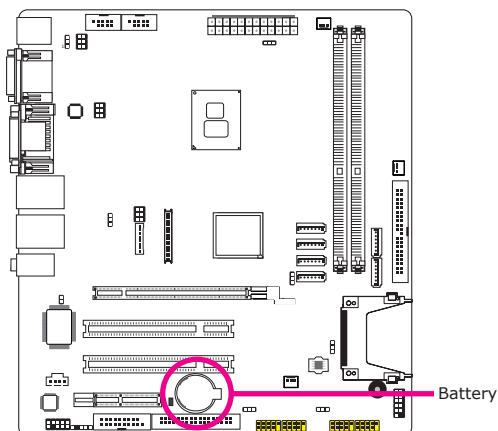


The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

CompactFlash Socket

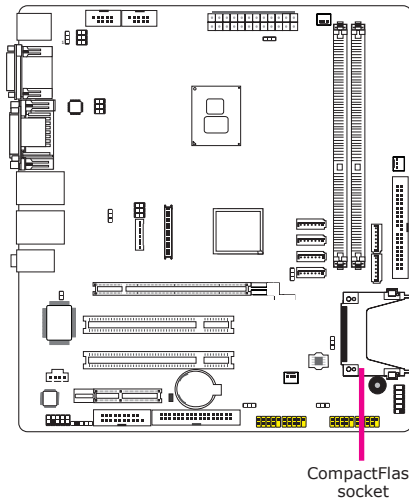

The CompactFlash™ socket is used for inserting a CompactFlash™ card. CompactFlash™ card is a small removable mass storage device designed with flash technology - a non-volatile storage solution that does not require a battery to retain data indefinitely. The CompactFlash™ technology is widely used in products such as portable and desktop computers, digital cameras, handheld data collection scanners, PDAs, Pocket PCs, handy terminals and personal communicators.

**Important:**

We do not recommend using IDE devices and CF card at the same time.

Chapter 3 - BIOS Setup

Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.



Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between submenus or fields.
<Esc>	Exits to the BIOS Setup Utility.
+ (plus key)	Scrolls forward through the values or options of the highlighted field.
- (minus key)	Scrolls backward through the values or options of the highlighted field.
Tab	Selects a field.
<F1>	Displays General Help.
<F4>	Saves and exits the Setup program.
<Enter>	Press <Enter> to enter the highlighted submenu.

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

AMI BIOS Setup Utility

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

BIOS SETUP UTILITY					
Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS Information BIOS Vendor: American Megatrends Core Version: 4.6.3.7 Project Version: 1ABPZ 0.15 x64 BIOS Name: 100401B000 (M782) Build Date: 04/01/2010 16:13:39		Set the Date. Use Tab to switch between Data elements.			
Memory Information Total Memory: 2048 MB (DDR3 1066)					
System Date: [Tue 04/20/2010] System Time: [16:11:05]					
Access Level: Administrator		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit			
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.					

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1980 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.


Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Important:

Setting incorrect field values may cause the system to malfunction.

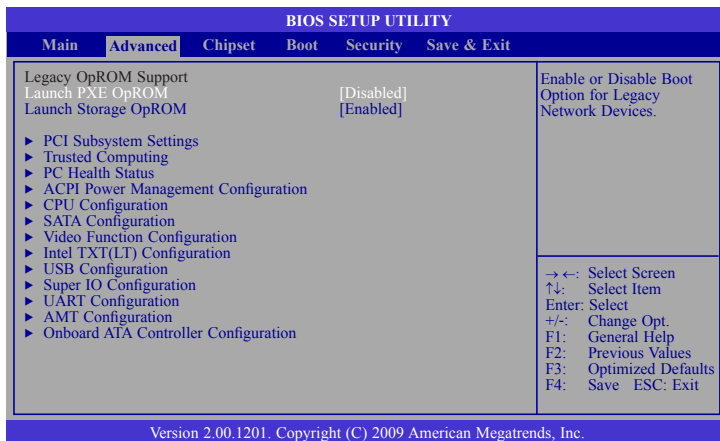

Launch PXE OpROM

Enables or disables the boot option for legacy network devices.

Launch Storage OpROM

Enables or disables the boot option for legacy mass storage devices with option ROM.

PCI Subsystem Settings

This section is used to configure the PCI, PCI-X and PCI Express settings.

BIOS SETUP UTILITY		
Advanced		
PCI Bus Driver Version	V 2.02.01	In case of multiple Option ROMs (Legacy and EFI Compatible), specifies what PCI Option ROM to launch.
PCI ROM Priority	[EFI Compatible ROM]	
PCI Common Settings Settings		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
PCI Latency Timer	[64 PCI Bus Clocks]	
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

PCI ROM Priority

Selects the PCI Option ROM to launch in case Multiple Option ROMs (Legacy ROM and EFI Compatible ROM) are present.

PCI Latency Timer

This feature is used to select the length of time each PCI device will control the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Since each access to the bus comes with an initial delay before any transaction can be made, low values for the PCI Latency Timer will reduce the effectiveness of the PCI bandwidth while higher values will improve it.

Trusted Computing (optional)

This section configures settings relevant to Trusted Computing innovations.

BIOS SETUP UTILITY	
Advanced	
TPM Configuration TPM Support [Disabled] Current TPM Status Information TPM Support Off	Enables or Disables TPM support. O.S. will not show TPM. Reset of platform is required. → ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.	

TPM Support

Enables or Disables TPM. O.S. will not show TPM. Resetting the platform is required.

PC Health Status

This section displays the SIO hardware health monitor.

BIOS SETUP UTILITY		
Advanced		
▶ Smart Fan Function		Smart Fan Function
Case Open Beep	[Disabled]	
System Hardware Monitor		
CPU Temperature	: +45 C	
System Temperature	: +32 C	
CPU FAN Speed	: 4761 RPM	
System FAN Speed (1)	: N/A	
System FAN Speed (2)	: N/A	
Vcore	: +0.912V	
+5.0V	: +5.040 V	
+1.05V	: +1.056V	
+1.5V	: +1.528 V	
+12V	: +11.968 V	
+3.3V	: +3.376 V	
VBAT	: +3.344 V	
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Smart Fan Function

BIOS SETUP UTILITY		
Advanced		
Smart Fan Function		Enable CPU SmartFan
CPU Smart Fan Control	[Automatic]	
Boundary 1	60	
Boundary 2	50	
Boundary 3	40	
Boundary 4	30	
Speed Count 1	100	
Speed Count 2	75	
Speed Count 3	50	
Speed Count 4	40	
Speed Count 5	30	
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

CPU Smart Fan Control

When this feature is set to Automatic, the CPU's fan speed will rotate according to the CPU's temperature. The higher the temperature, the faster the speed of rotation.

Boundary 1 to Boundary 4

The range is from 0-127.

Speed Count 1 to Speed Count 5

The range is from 1-100.

Case Open Beep

Set this field to Enabled to allow the system to alert you of a chassis intrusion event.

CPU Temperature to VBAT

These fields will show the temperature, fan speed and output voltage of the monitored devices or components.

ACPI Power Management Configuration

This section is used to configure the ACPI power management.

BIOS SETUP UTILITY		
Advanced		
ACPI Power Management Configuration		Enables or Disables BIOS ACPI Auto Configuration.
Enable ACPI Auto Configuration	[Disabled]	
ACPI Sleep State	[S3 (Suspend to R...)]	
Resume by PME	[Enabled]	
Resume by PS2 KB (S1,S3)	[Enabled]	
Resume by PS2 MS (S1,S3)	[Enabled]	
Resume by Ring	[Enabled]	
Resume by RTC Alarm	[Every Day]	
Hours 0-23	17	
Minutes 0-59	59	
Seconds 0-59	0	
		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Enable ACPI Auto Configuration

Enables or disables the BIOS ACPI auto configuration.

ACPI Sleep State

Selects the highest ACPI sleep state that the system will enter when the Suspend button is pressed. The options are Suspend Disabled, S1 (CPU Stop Clock) and S3 (Suspend to RAM).

Resume by PME

When Enabled, the system uses the PCI PME (Power Management Event) signal (PCI, PCIE, LAN) to remotely wake up the system.

Resume by PS2 KB (S1,S3)

When Enabled, it allows you to use the PS/2 keyboard to power-on the system.

Resume by PS2 MS (S1,S3)

When Enabled, it allows you to use the PS/2 mouse to power-on the system.

Resume by Ring

Set this field to Enabled to use the modem ring-on function. This will allow your system to power-on to respond to calls coming through an external or internal modem.

Resume by RTC Alarm

Selects the day you would like the Soft Power Down (Soft-Off) PC to power-on. However, if the system is being accessed by incoming calls or the network (Resume On Ring/LAN) prior to the alarm date and time, the system will give priority to the incoming calls or network.

Hours 0-23

Selects the hour you would like the Soft Power Down (Soft-Off) PC to power-on.

Minutes 0-59

Selects the minute you would like the Soft Power Down (Soft-Off) PC to power-on.

Seconds 0-59

Selects the second you would like the Soft Power Down (Soft-Off) PC to power-on.

CPU Configuration

This section is used to configure the CPU. It will also display the detected CPU information.

BIOS SETUP UTILITY		
Advanced		
CPU Configuration		Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Processor Type	Intel (R) Core (TM) i7 CPU	
EMT64	Supported	
Processor Speed	1995 MHz	
Processor Stepping	20652	
Microcode Revision	9	
Processor Cores	2	
Intel HT Technology	Supported	
Hyper-Threading	[Enabled]	
Active Processor Cores	[A11]	
Hardware Prefetcher	[Enabled]	
Intel Virtualization Technology	[Disabled]	
Power Technology	[Energy Efficient]	
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Hyper-Threading

Enable this field for Windows XP and Linux which are optimized for Hyper-Threading technology. Select disabled for other OSe not optimized for Hyper-Threading technology. When disabled, only one thread per enabled core is enabled.

Active Processor Cores

This field is used to enter the number of cores to enable in each processor package.

Hardware Prefetcher

Turns on or off the MLC streamer prefetcher.

Intel Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Power Technology

Configures the power management features.

SATA Configuration

This section is used to configure SATA functions.

BIOS SETUP UTILITY		
Advanced		
SATA Configuration		(1) IDE Mode. (2) AHCI Mode. (3) RAID Mode.
SATA Port 0	Not Present	
SATA Port 1	Not Present	
SATA Port 2	Not Present	
SATA Port 3	Not Present	
SATA Port 4	ST3160813AS (160.0GB)	
SATA Port 5	Not Present	
SATA Mode	[IDE Mode]	
Serial-ATA Controller 0	[Compatible]	
Serial-ATA Controller 1	[Enhanced]	
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

SATA Mode

IDE Mode

This option configures the Serial ATA drives as Parallel ATA storage devices.

AHCI Mode

This option allows the Serial ATA devices to use AHCI (Advanced Host Controller Interface).

RAID Mode

This option allows you to create RAID or Intel Matrix Storage configuration on Serial ATA devices.

Serial-ATA Controller 0

The options are Disable, Enhanced or Compatible.

Serial-ATA Controller 1

The options are Disable and Enhanced.

Video Function Configuration

BIOS SETUP UTILITY		
Advanced		
Intel IGD SWSCI OpRegion Configuration		Select DVMT/FIXED Mode Memory size used by Internal Graphics Device
DVMT/FIXED Memory	[256MB]	
IGD - Boot Type	[VBIOS Default]	
LCD Panel Type	[VBIOS Default]	
Panel Scaling	[Auto]	
Active LFP	[Int-LVDS]	
		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

DVMT/FIXED Memory

Selects the DVMT/FIXED mode memory size used by the internal graphics device.

IGD - Boot Type

Selects the video device that will be activated during POST. This will not affect any external graphics that may be present.

LCD Panel Type

Selects the LCD panel used by the internal graphics device.

Panel Scaling

Selects the LCD panel scaling used by the internal graphics device.

Active LFP

Selects the active LFP configuration.

No LVDS

VBIOS did not enable LVDS.

Int-LVDS

VBIOS will enable the LVDS driver via the integrated encoder.

SDVO LVDS

VBIOS will enable the LVDS driver via the SDVO encoder.

Intel TXT (LT) Configuration

This section is used to configure the Intel Trusted Execution technology.

BIOS SETUP UTILITY	
Advanced	
Intel Trusted Execution Technology Configuration	
Intel TXT(LT) Support	[Disabled]
<div>→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit</div>	
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.	

Intel TXT(LT) Support

The options are Enabled and Disabled.

USB Configuration

This section is used to configure USB.

BIOS SETUP UTILITY	
Advanced	
USB Configuration USB Devices: 2 Hubs Legacy USB Support [Enabled] EHCI Hand-off [Enabled] Device Reset Timeout [20 Sec]	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications. → ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.	

Legacy USB Support

Enabled

Enables legacy USB.

Auto

Disables support for legacy when no USB devices are connected.

Disabled

Keeps USB devices available only for EFI applications.

EHCI Hand-off


This is a workaround for OSe that does not support EHCI hand-off. The EHCI ownership change should be claimed by the EHCI driver.

Device Reset Timeout

Selects the USB mass storage device start unit command timeout.

Super IO Configuration

This section is used to configure the I/O functions supported by the onboard Super I/O chip.

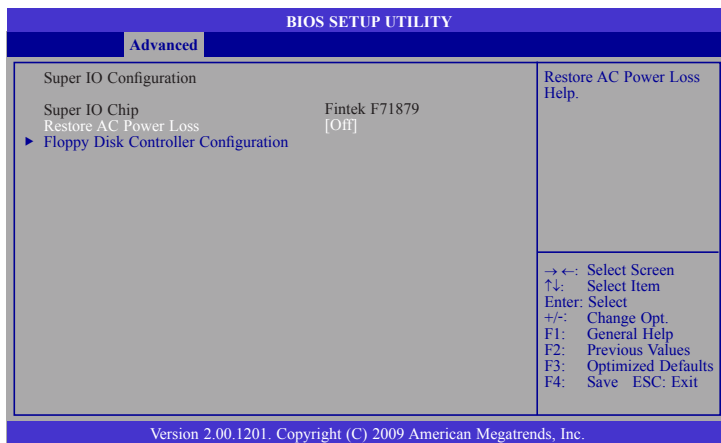

Restore AC Power Loss

Off

When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system.

On

When power returns after an AC power failure, the system will automatically power-on.

Last State

When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.

Floppy Disk Controller Configuration

BIOS SETUP UTILITY		
Advanced		
Floppy Disk Controller Configuration		Selects an optimal settings for Super IO Device
Floppy Disk Controller	[Enabled]	
Device Settings	Reset Required	
Change Settings	[Auto]	
		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Floppy Disk Controller

Enables or disables the floppy disk controller.

Change Settings

Selects the IO/IRQ/DMA setting of the floppy device.

UART Configuration

This section is used to configure the serial port functions.

BIOS SETUP UTILITY		
Advanced		
UART Configuration Super IO Chip ▶ Serial Port 1 Configuration ▶ Serial Port 2 Configuration ▶ Serial Port 3 Configuration ▶ Serial Port 4 Configuration	Fintek F81216	Set Parameters of Serial Port 1 (COMA) → ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Serial Port 1 Configuration to Serial Port 4 Configuration

BIOS SETUP UTILITY		
Advanced		
Serial Port 1 Configuration Serial Port Device Settings Change Settings	[Enabled] IO=3F8h; IRQ=4; [Auto]	Enable or Disable Serial Port (COM) → ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Serial Port

Enables or disables the serial port.

Change Settings

Selects the IO/IRQ setting of the I/O device.

AMT Configuration

BIOS SETUP UTILITY		
Advanced		
AMT Unconfigure AMT/ME	[Enabled] [Disabled]	AMT Help
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

AMT

Enables or disables the AMT function.

Unconfigure AMT/ME

Select Enabled to unconfigure the AMT/ME function without the need for a password.

Onboard ATA Controller Configuration


BIOS SETUP UTILITY		
Advanced		
PATA Primary Master	Not Present	Select an operative mode for ATA controller.
PATA Primary Slave	Not Present	
ATA Controller	[IDE Mode]	<div>→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit</div>
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

ATA Controller

Selects the ATA controller's mode.

Chipset

Configures relevant chipset functions.

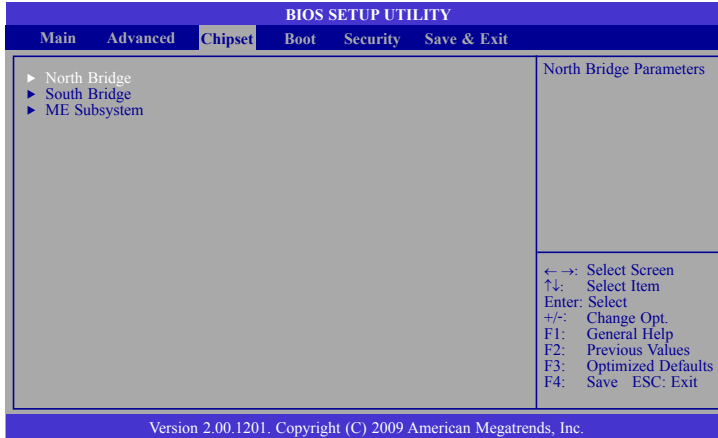

North Bridge

BIOS SETUP UTILITY		
Chipset		
Memory Information		Low MMIO resources align at 64MB/1024MB
CPU Type	Arrandale	
Total Memory	2048 MB (DDR3 1066)	
Memory Slot 0	2048 MB (DDR3 1066)	
Memory Slot 1	0 MB (DDR3 1066)	
CAS# Latency (tCL)	7	
RAS# Active Time (tRAS)	20	
Row Precharge Time (tRP)	7	
RAS# to CAS# Delay (tRCD)	7	
Write Recovery Time (tWR)	8	
Row Refresh Cycle Time (tRFC)	60	
Write to Read Delay (tWTR)	4	
Active to Active Delay (tRRD)	4	
Read CAS# Precharge (tRTP)	5	
Low MMIO Align	[64M]	
Initiate Graphic Adapter	[PEG/IGD]	
VT-d	[Disabled]	
PCI Express Port	[Auto]	
IGD Memory	[64M]	
PAVP Mode	[Disabled]	
Display Present	[PCIe x16]	
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

Low MMIO Align

Selects the low MMIO resources align at 64MB or 1024MB.

Initiate Graphic Adapter

Selects the graphics controller to use as the primary boot device.

VT-d

The options are Enabled and Disabled.

PCI Express Port

These field is used to enable or disable the PCI Express port function.

IGD Memory

Selects the internal graphics device's shared memory size.

PAVP Mode

Selects the PAVP mode.

Display Present

Selects the display mode. The options are PCIe x16 and SDVO/HDMI/DP.

South Bridge

BIOS SETUP UTILITY		
Chipset		
SB Chipset Configuration		
GbE Controller	[Enable]	Wake on Lan from S5 help.
Wake On Lan From S5	[Disable]	
After G3	[Power On]	
Audio Configuration		
Azalia HD Audio	[Enabled]	
High Precision Event Timer Configuration		
High Precision Timer	[Enabled]	
▶ USB Configuration		
		→ ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

GbE Controller

Enables or disables the Gigabit LAN controller.

Wake On Lan From S5

When enabled, it allows the system to wake up from S5 via the network LAN.

After G3

Power Off / WOL

Power-on the system via WOL after G3.

Power On

Power-on the system after G3.

Azalia HD Audio

Enables or disables the Azalia HD audio.

High Precision Timer

Enables or disables the high precision event timer.

USB Configuration

BIOS SETUP UTILITY	
Chipset	
USB Configuration	
All USB Devices	[Enabled]
EHCI Controller 1	[Enabled]
EHCI Controller 2	[Enabled]
Enable/Disable All USB Devices	
→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit	
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.	

All USB Devices

Enables or disables all USB devices.

EHCI Controller 1 and EHCI Controller 2

These fields are used to enable or disable USB 2.0.

ME Subsystem

BIOS SETUP UTILITY		
Chipset		
Intel ME Subsystem Configuration		ME Subsystem Help
ME Version	6.0.3.1195	
ME Subsystem	[Enabled]	
End of Post Message	[Enabled]	
Execute MEBx	[Enabled]	
		→ ←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.		

ME Subsystem

The options are Enabled and Disabled.


End of the POST Message

The options are Enabled and Disabled.

Execute MEBx

The options are Enabled and Disabled.

Boot

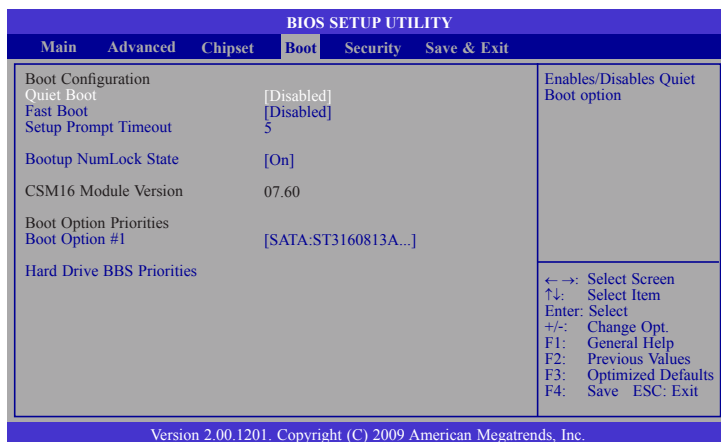

Quiet Boot

Enables or disables the quiet boot function.

Fast Boot

Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. This doesn't affect the BBS boot options.

Setup Prompt Timeout

Selects the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Boot Option #1

Selects the boot sequence of the hard drives.

Hard Drive BBS Priorities

Sets the order of the legacy devices in this group.

Security

BIOS SETUP UTILITY					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Password Description If only the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If only the User's password is set, then this is a power on password and must be entered to boot or enter setup. In Setup the User will have Administrator rights. Administrator Password User Password HDD Security Configuration: HDD 0: ST3160813AS			Set Setup Administrator Password. → ←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save ESC: Exit		
Version 2.00.1201. Copyright (C) 2009 American Megatrends, Inc.					


Administrator Password

Sets the administrator password.

User Password

Sets the user password.

Save & Exit

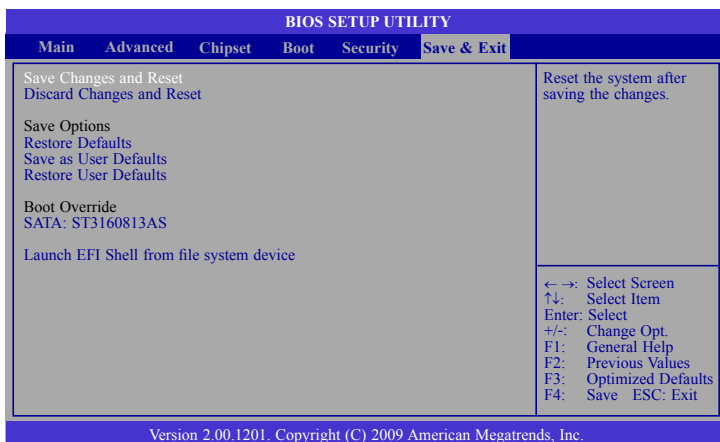

Save Changes and Reset

To save the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system after saving all changes made.

Discard Changes and Reset

To discard the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system setup without saving any changes.

Restore Defaults

To restore and load the optimized default values, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore the default values of all the setup options.

Save as User Defaults

To save changes done so far as user default, select this field and then press <Enter>. A dialog box will appear. Select Yes to save values as user default.

Restore User Defaults

To restore user default to all the setup options, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore user default.

Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility, AFUDOS.EXE. Please contact technical support or your sales representative for the files.

To execute the utility, type:

```
A:> AFUDOS BIOS_File_Name /b /p /n
```

then press <Enter>.

```
C:\AFU\AFUDOS>afudos filename /B /P /N
```

```
-----+-----  
|               AMI Firmware Update Utility(APTIO) v2.25               |  
|               Copyright (C)2008 American Megatrends Inc. All Rights Reserved.               |  
+-----+-----
```

```
Reading file ..... done  
Erasing flash ..... done  
Writing flash ..... done  
Verifying flash ..... done  
Erasing BootBlock ..... done  
Writing BootBlock ..... done  
Verifying BootBlock ..... done
```

```
C:\AFU\AFUDOS>
```

Chapter 4 - Supported Software

The CD that came with the system board contains drivers, utilities and software applications required to enhance the performance of the system board.

Insert the CD into a CD-ROM drive. The autorun screen (Mainboard Utility CD) will appear. If after inserting the CD, "Autorun" did not automatically start (which is, the Mainboard Utility CD screen did not appear), please go directly to the root directory of the CD and double-click "Setup".



Microsoft .NET Framework 3.5 (for Windows XP only)


**Note:**

Before installing Microsoft .NET Framework 3.5, make sure you have updated your Windows XP operating system to Service Pack 3.


To install the driver, click "Microsoft .NET Framework 3.5" on the main menu.

1. Read the license agreement carefully.


Click "I have read and accept the terms of the License Agreement" then click Install.

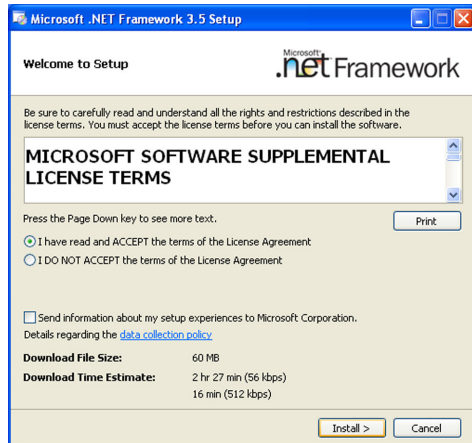

2. Setup is now installing the driver.

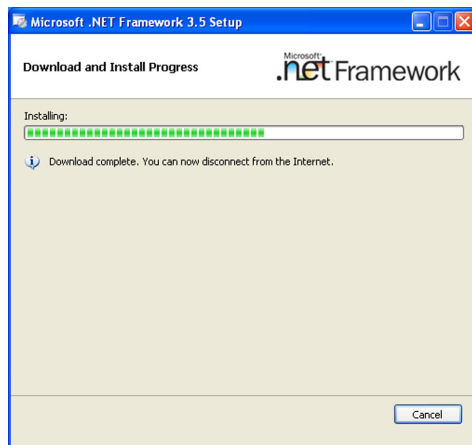

3. Click Exit.

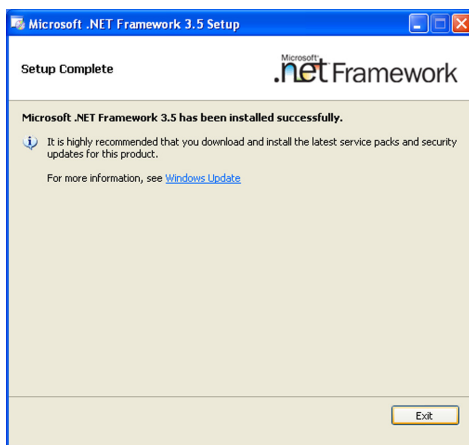


Microsoft DirectX 9.0C Driver (for Windows XP only)

To install the driver, click "Microsoft DirectX 9.0C Driver" on the main menu.


1. Click "I accept the agreement" then click Next.



2. To start installation, click Next.

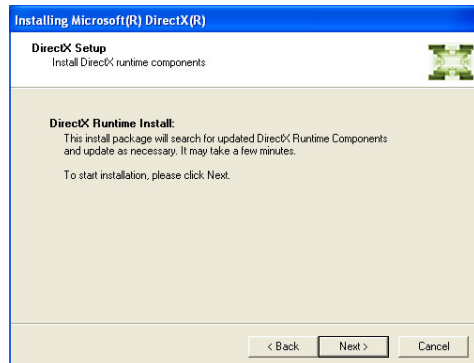

3. Click Finish. Reboot the system for DirectX to take effect.

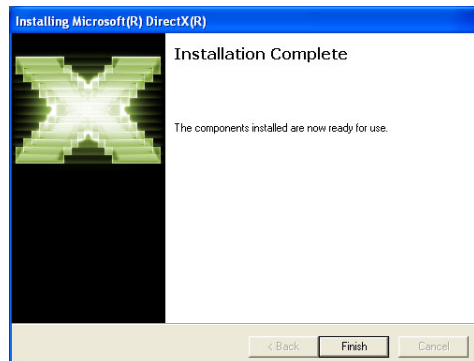

Intel Chipset Software Installation Utility

The Intel Chipset Software Installation Utility is used for updating Windows[®] INF files so that the Intel chipset can be recognized and configured properly in the system.

To install the utility, click "Intel Chipset Software Installation Utility" on the main menu.


1. Setup is ready to install the utility. Click Next.




2. Read the license agreement then click Yes.



3. Go through the readme document for more installation tips then click Next.

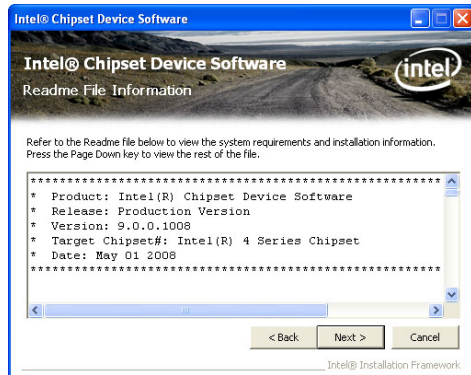

4. After all setup operations are done, click Next.

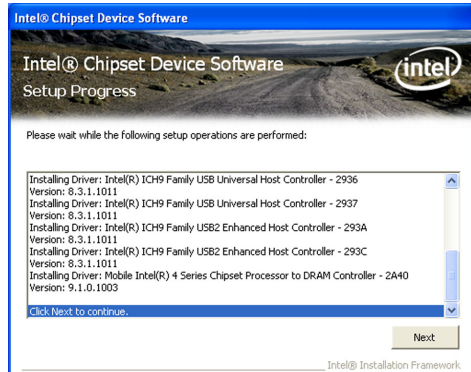


5. Click Finish to exit setup.



Intel Graphics Drivers (for Windows 7 / Vista)


To install the driver, click "Intel Graphics Drivers" on the main menu.

1. Setup is now ready to install the graphics driver. Click Next.

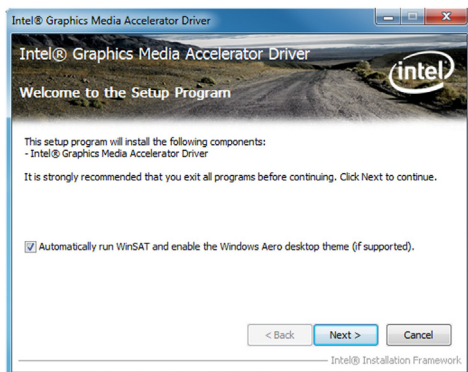

By default, the "Automatically run WinSAT and enable the Windows Aero desktop theme" is enabled. With this enabled, after installing the graphics driver and the system rebooted, the screen will turn blank for 1 to 2 minutes (while WinSAT is running) before the Windows Vista desktop appears. The "blank screen" period is the time Windows is testing the graphics performance.


We recommend that you skip this process by disabling this function then click Next.

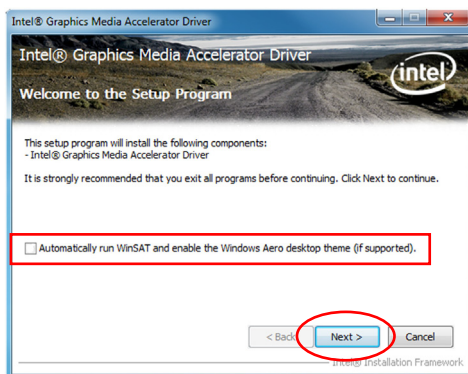


2. Read the license agreement then click Yes.



3. Go through the readme document for system requirements and installation tips then click Next.

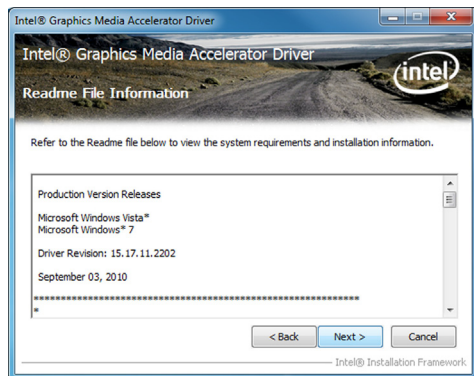

4. Setup is currently installing the driver. After installation has completed, click Next.

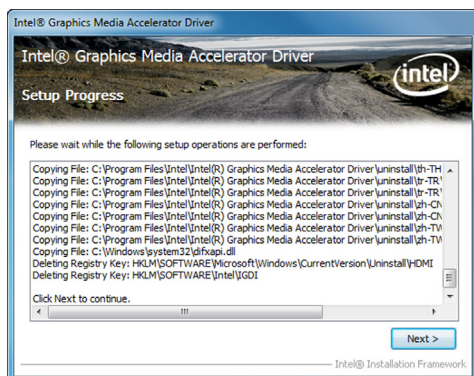

5. Click "Yes, I want to restart this computer now" then click Finish.

Restarting the system will allow the new software installation to take effect.




Intel Graphics Drivers (for Windows XP)

To install the driver, click "Intel Graphics Drivers" on the main menu.


1. Setup is ready to install the graphics driver. Click Next.




2. Read the license agreement then click Yes.

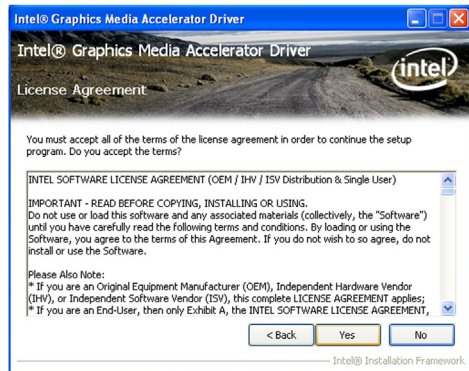

3. Go through the readme document for more installation tips then click Next.

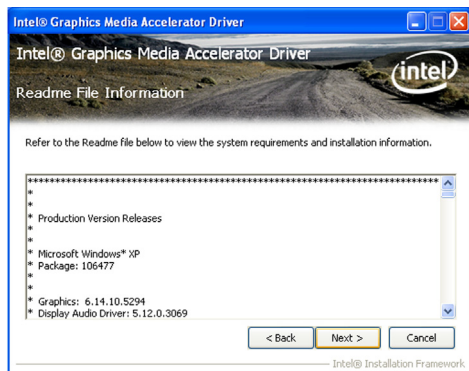


4. Setup is currently installing the driver. After installation has completed, click Next.

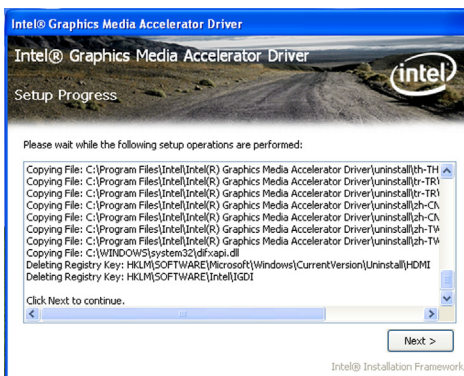

5. Click "Yes, I want to restart this computer now." then click Finish.

Restarting the system will allow the new software installation to take effect.

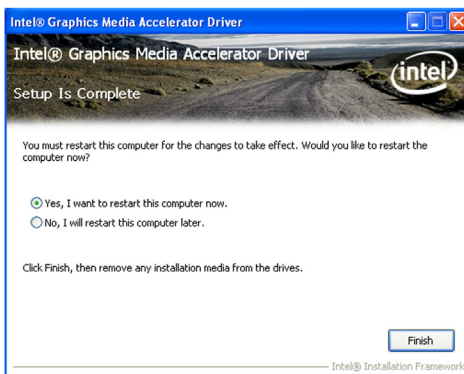


Intel Management Engine Drivers

To install the driver, click "Management Engine Interface Drivers" on the main menu.


1. Setup is ready to install the driver. Click Next.




2. Read the license agreement then click Yes.

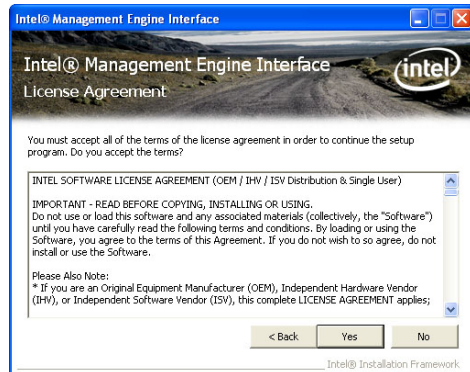


3. Go through the readme document for more installation tips then click Next.

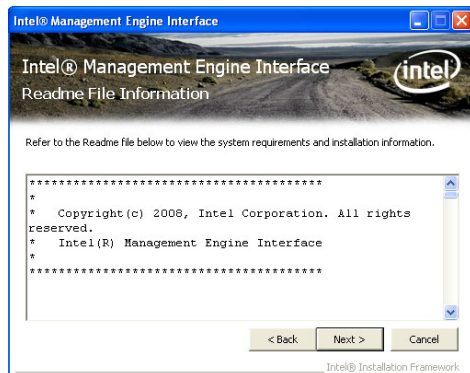

4. Setup is currently installing the driver. After installation has completed, click Next.

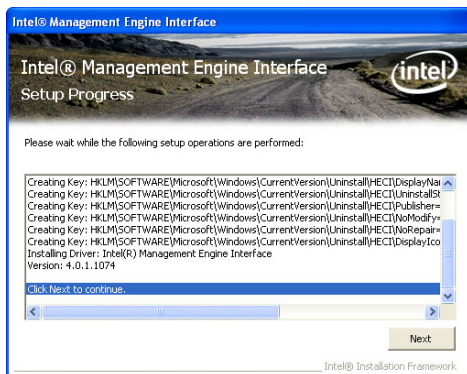


5. After completing installation, click Finish.

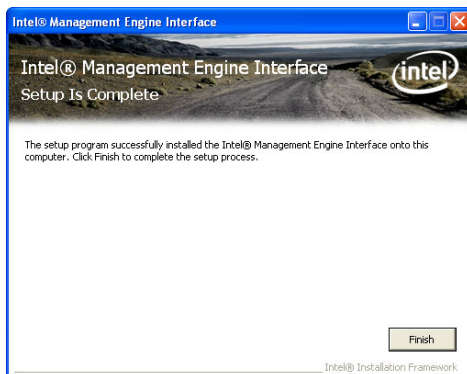

Audio Drivers


To install the driver, click "Audio Drivers" on the main menu.

1. Setup is now ready to install the audio driver. Click Next.
2. Follow the remainder of the steps on the screen; clicking "Next" each time you finish a step.

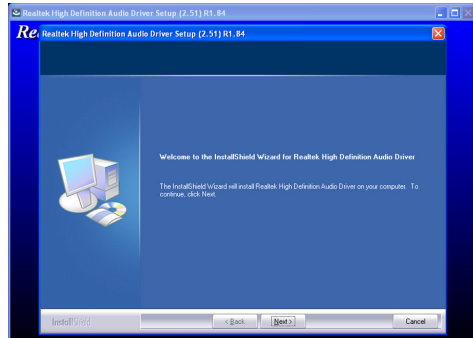

3. Click "Yes, I want to restart my computer now" then click Finish.

Restarting the system will allow the new software installation to take effect.

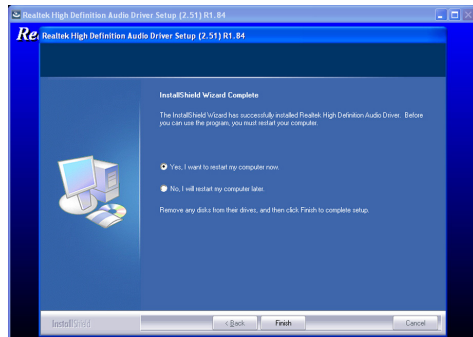


Intel LAN Drivers

To install the driver, click "Intel LAN Drivers" on the main menu.


1. Setup is ready to install the driver. Click Next.




2. Click "I accept the terms in the license agreement" then click "Next".

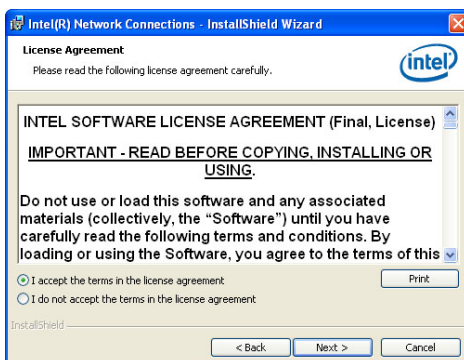


3. Select the program features you want installed then click Next.

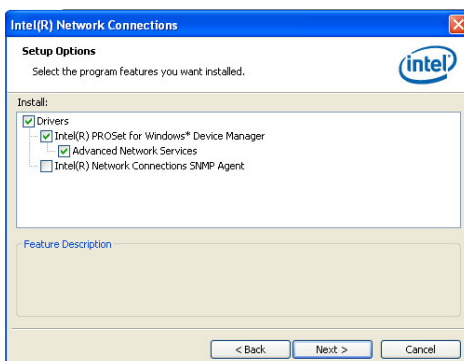

- Click Install to begin the installation.

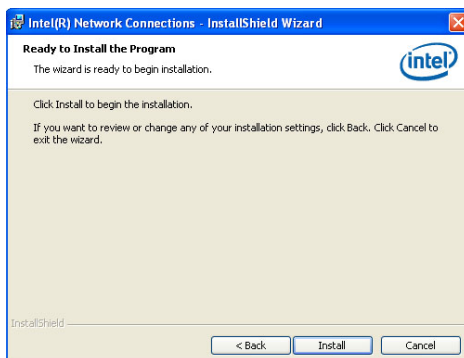


- After completing installation, click Finish.

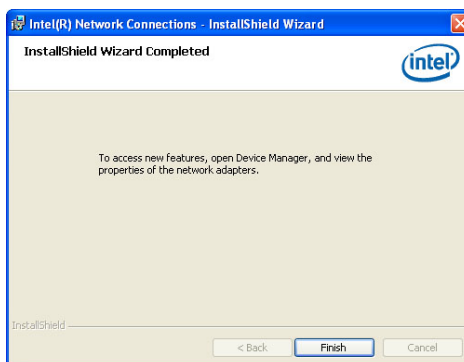


Realtek LAN Drivers

To install the driver, click “Realtek LAN Drivers” on the main menu.


1. Setup is ready to install the driver. Click Next.

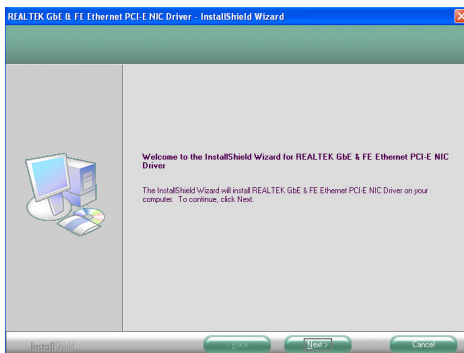

2. Click Install to begin the installation.

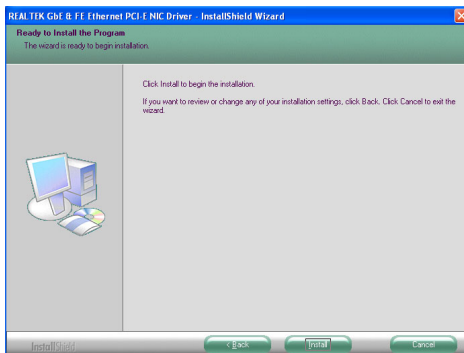

3. After completing installation, click Finish.

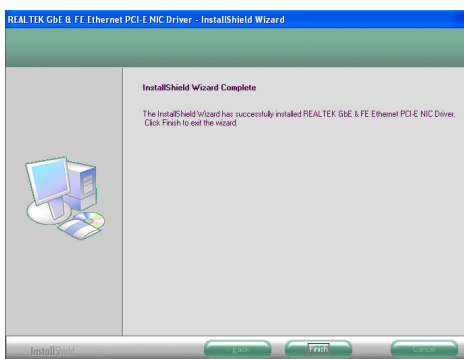

F6 Floppy Configuration Utility

This is used to create a floppy driver diskette needed when you install Windows® XP using the F6 installation method. This will allow you to install the operating system onto a hard drive when in AHCI mode.

1. Insert a blank floppy diskette.
2. Locate for the drivers in the CD then copy them to the floppy diskette. The CD includes drivers for both 32-bit and 64-bit operating systems. The path to the drivers are shown below.

32-bit

CD Drive:\AHCI_RAID\F6FLOPPY\f6flpy32


64-bit

CD Drive:\AHCI_RAID\F6FLOPPY\f6flpy64


MyGuard Hardware Monitor

1. Locate for the MyGuard folder in the provided disc.
2. In the MyGuard folder, right-click on the "setup" file.
3. Select Run As Administrator.
4. Double-click Setup.


Important:
Perform steps 1-3 only when using Windows 7 or Windows Vista.

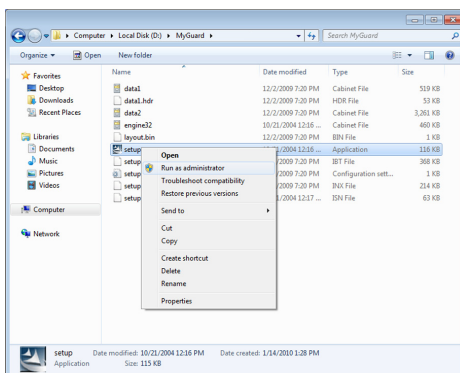


5. Setup is ready to install the utility. Click Next.

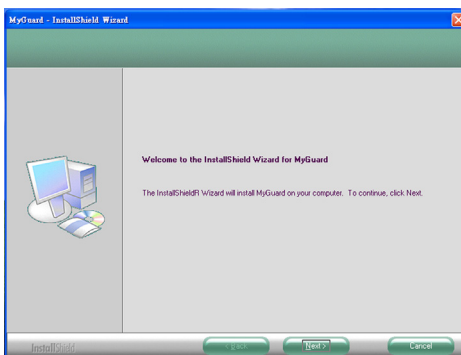


6. Click Install to begin installation.

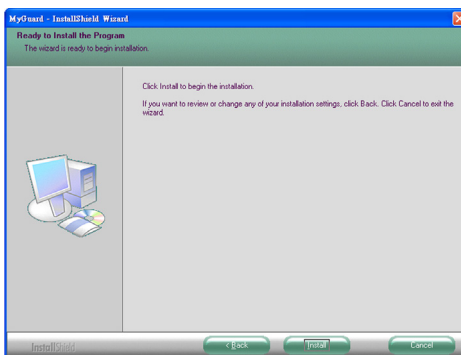

7. Setup is currently installing the utility.

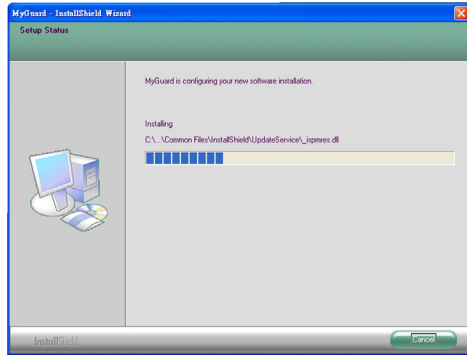


8. After completing installation, click Finish to exit setup.

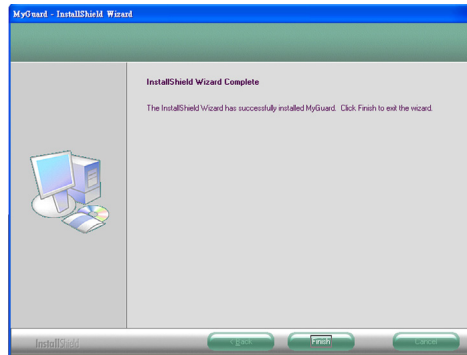


Adobe Acrobat Reader 9.3

To install the reader, click "Adobe Acrobat Reader 9.3" on the main menu.


1. Click Next to install or click Change Destination Folder to select another folder.

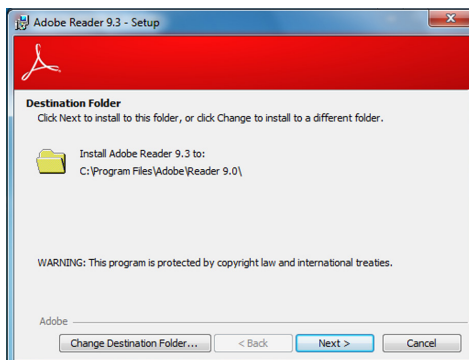

2. Click Install to begin installation.

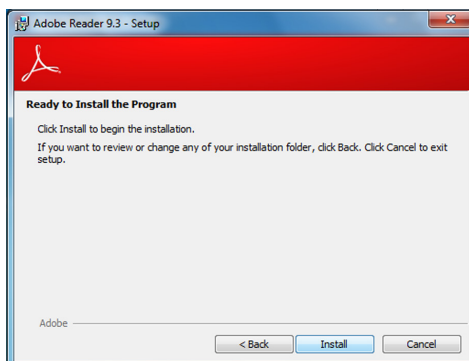


3. Click Finish to exit installation.

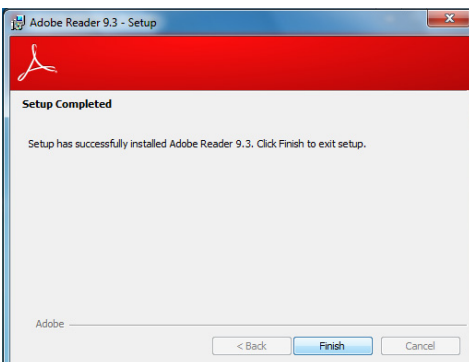


Infineon TPM Driver and Tool (optional)

To install the driver, click "Infineon TPM driver and tool (option)" on the main menu.

1. TPM requires installing the Microsoft Visual C++ package prior to installing the driver. Click Install.

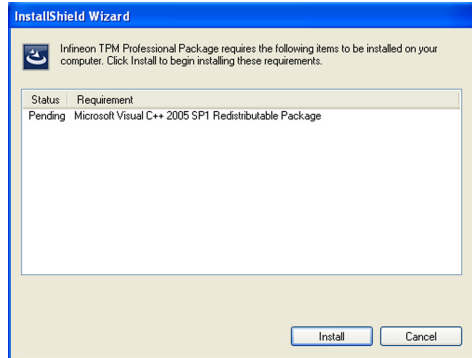


2. The setup program is preparing to install the driver.

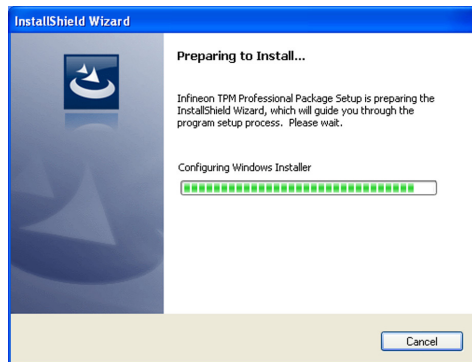


3. The setup program is ready to install the driver. Click Next.




- Click "I accept the terms in the license agreement" and then click "Next".

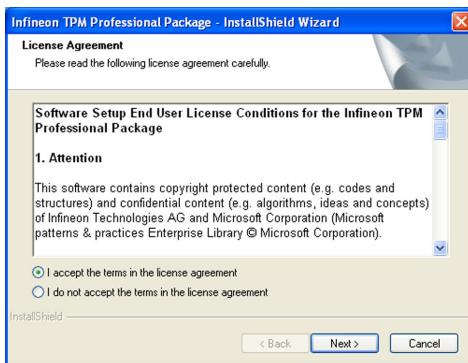


- Enter the necessary information and then click Next.

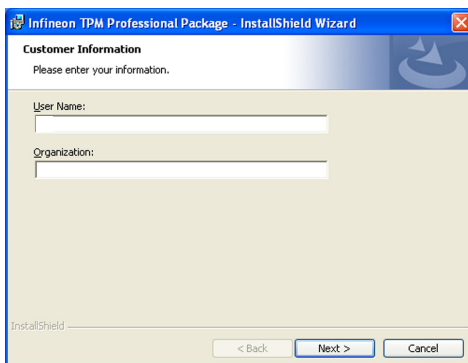


- Select a setup type and then click Next.

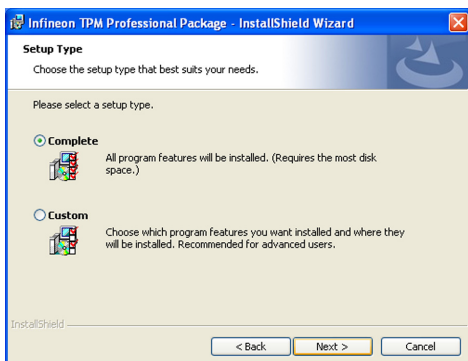


- Click Install.

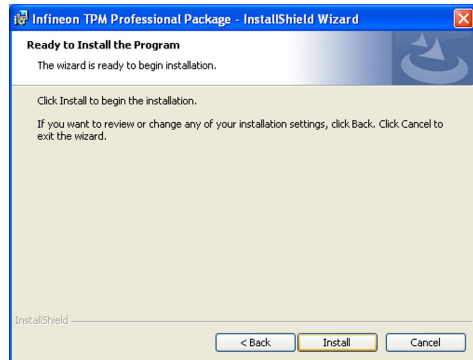

- The setup program is currently installing the driver.

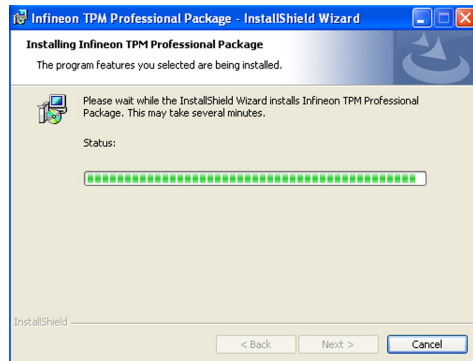


- Click Finish.

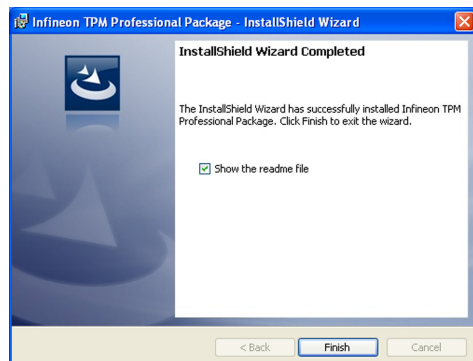

10. Click Yes to restart the system.

Restarting the system will allow the new software installation to take effect.

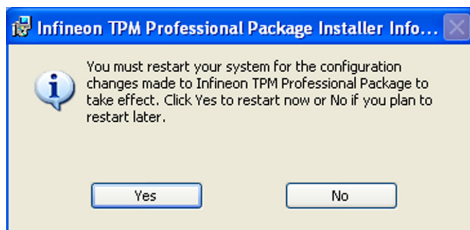

Chapter 5 - RAID

The system board allows configuring RAID on Serial ATA drives. It supports RAID 0, RAID 1, RAID 5 and RAID 10.

RAID Levels

RAID 0 (Striped Disk Array without Fault Tolerance)

RAID 0 uses two new identical hard disk drives to read and write data in parallel, interleaved stacks. Data is divided into stripes and each stripe is written alternately between two disk drives. This improves the I/O performance of the drives at different channel; however it is not fault tolerant. A failed disk will result in data loss in the disk array.

RAID 1 (Mirroring Disk Array with Fault Tolerance)

RAID 1 copies and maintains an identical image of the data from one drive to the other drive. If a drive fails to function, the disk array management software directs all applications to the other drive since it contains a complete copy of the drive's data. This enhances data protection and increases fault tolerance to the entire system. Use two new drives or an existing drive and a new drive but the size of the new drive must be the same or larger than the existing drive.

RAID 5

RAID 5 stripes data and parity information across hard drives. It is fault tolerant and provides better hard drive performance and more storage capacity.

RAID 10 (Mirroring and Striping)

RAID 10 is a combination of data striping and data mirroring providing the benefits of both RAID 0 and RAID 1. Use four new drives or an existing drive and three new drives for this configuration.

Settings

To enable the RAID function, the following settings are required.

1. Connect the Serial ATA drives.
2. Configure Serial ATA in the AMI BIOS.
3. Configure RAID in the RAID BIOS.
4. Install the RAID driver during OS installation.
5. Install the Intel Rapid Storage Drivers.

Step 1: Connect the Serial ATA Drives

Refer to chapter 2 for details on connecting the Serial ATA drives.



Important:

1. Make sure you have installed the Serial ATA drives and connected the data cables otherwise you won't be able to enter the RAID BIOS utility.
2. Treat the cables with extreme caution especially while creating RAID. A damaged cable will ruin the entire installation process and operating system. The system will not boot and you will lost all data in the hard drives. Please give special attention to this warning because there is no way of recovering back the data.

Step 2: Configure Serial ATA in the AMI BIOS

1. Power-on the system then press to enter the main menu of the AMI BIOS.
2. Configure Serial ATA in the appropriate fields.
3. Save the changes in the Save & Exit menu.
4. Reboot the system.

Step 3: Configure RAID in the RAID BIOS

When the system powers-up and all drives have been detected, the Intel RAID BIOS status message screen will appear. Press the <Ctrl> and <I> keys simultaneously to enter the utility. The utility allows you to build a RAID system on Serial ATA drives.

Step 4: Install the RAID Driver During OS Installation

The RAID driver must be installed during the Windows® XP or Windows® 2000 installation using the F6 installation method. This is required in order to install the operating system onto a hard drive or RAID volume when in RAID mode or onto a hard drive when in AHCI mode.

1. Start Windows Setup by booting from the installation CD.
2. Press <F6> when prompted in the status line with the 'Press F6 if you need to install a third party SCSI or RAID driver' message.
3. Press <S> to "Specify Additional Device".
4. At this point you will be prompted to insert a floppy disk containing the RAID driver. Insert the RAID driver diskette.
5. Locate for the drive where you inserted the diskette then select RAID or AHCI controller that corresponds to your BIOS setup. Press <Enter> to confirm.

You have successfully installed the driver. However you must continue installing the OS. Leave the floppy disk in the floppy drive until the system reboots itself because Windows setup will need to copy the files again from the floppy disk to the Windows installation folders. After Windows setup has copied these files again, remove the floppy diskette so that Windows setup can reboot as needed.

Step 5: Install the Intel Rapid Storage Drivers

The Intel Rapid Storage Drivers can be installed from within Windows. It allows RAID volume management (create, delete, migrate) from within the operating system. It will also display useful SATA device and RAID volume information. The user interface, tray icon service and monitor service allow you to monitor the current status of the RAID volume and/or SATA drives. It enables enhanced performance and power management for the storage subsystem.

1. Insert the provided CD into an optical drive.
2. Click "Intel Rapid Storage Drivers" on the main menu.
3. Setup is ready to install the utility. Click Next.




4. Read the warning carefully then click Next.




5. Read the license agreement then click Yes.



6. Go through the readme document to view system requirements and installation information then click Next.

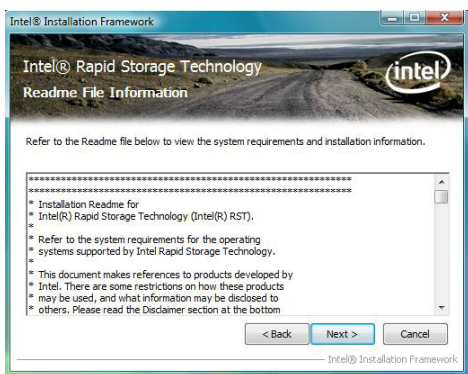

7. Setup is currently installing the driver. After installation has completed, click Next.

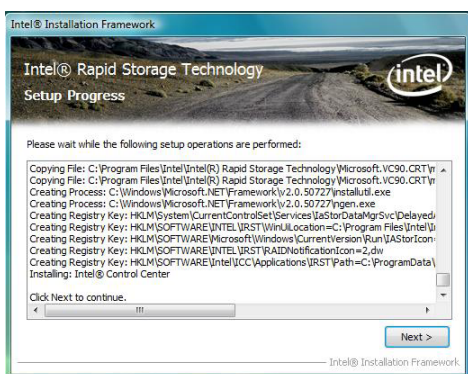

8. Click "Yes, I want to restart my computer now" then click Finish.



Chapter 6 - Intel AMT Settings (CP337-NRM series only)

Overview

Intel Active Management Technology (Intel® AMT) combines hardware and software solution to provide maximum system defense and protection to networked systems.

The hardware and software information are stored in non-volatile memory. With its built-in manageability and latest security applications, Intel® AMT provides the following functions.

- Discover

Allows remote access and management of networked systems even while PCs are powered off; significantly reducing desk-side visits.

- Repair


Remotely repair systems after OS failures. Alerting and event logging help detect problems quickly to reduce downtime.

- Protect


Intel AMT's System Defense capability remotely updates all systems with the latest security software. It protects the network from threats at the source by proactively blocking incoming threats, reactively containing infected clients before they impact the network, and proactively alerting when critical software agents are removed.

Enable Intel® AMT in the AMI BIOS


1. Power-on the system then press to enter the main menu of the AMI BIOS.
2. In the **Advanced** menu, select **AMT Configuration**.

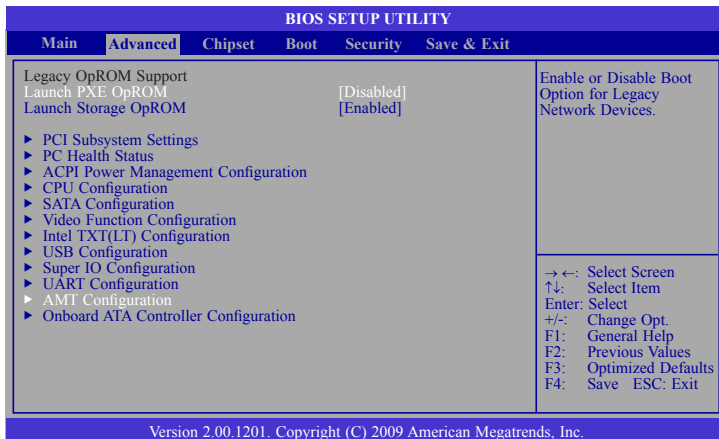


3. In the **AMT** field, select **Enabled**.

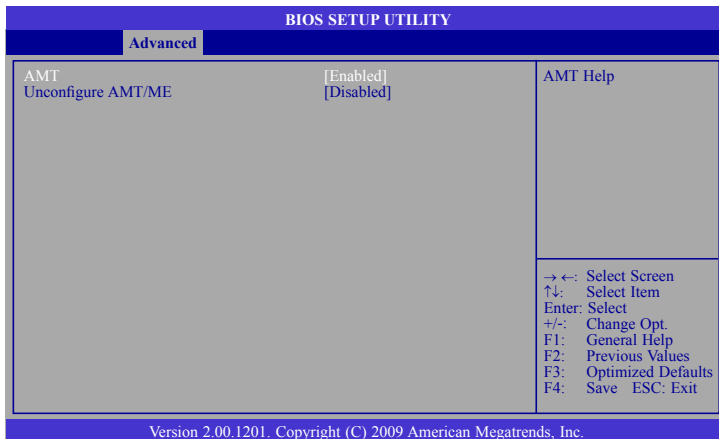


4. In the **Chipset** menu, select **ME Subsystem**.

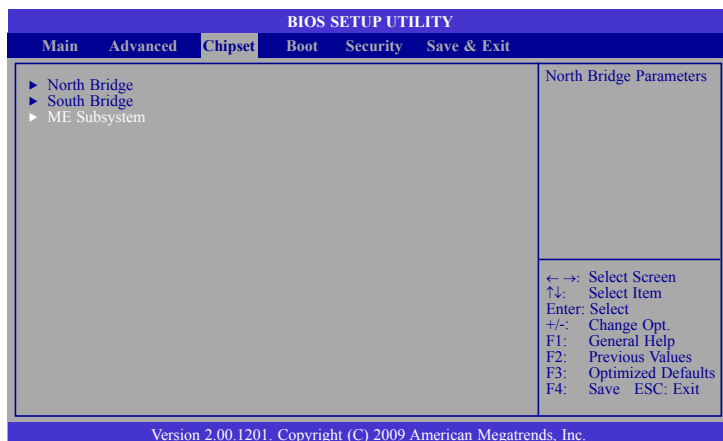

5. In the **ME Subsystem** field, select **Enabled**.

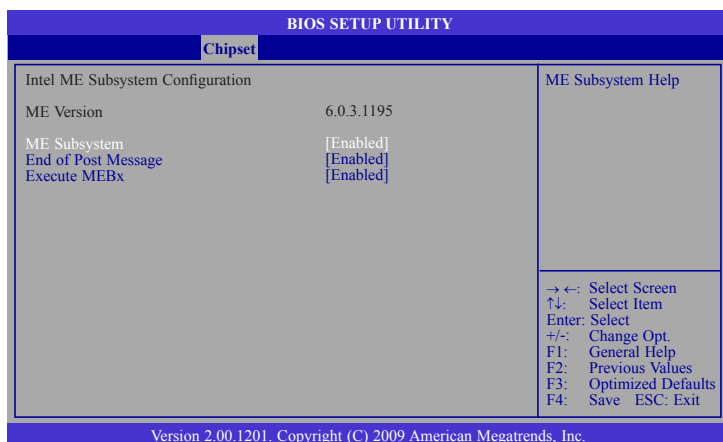


6. In the **Save & Exit** menu, select **Save Changes and Reset** then select **OK**.

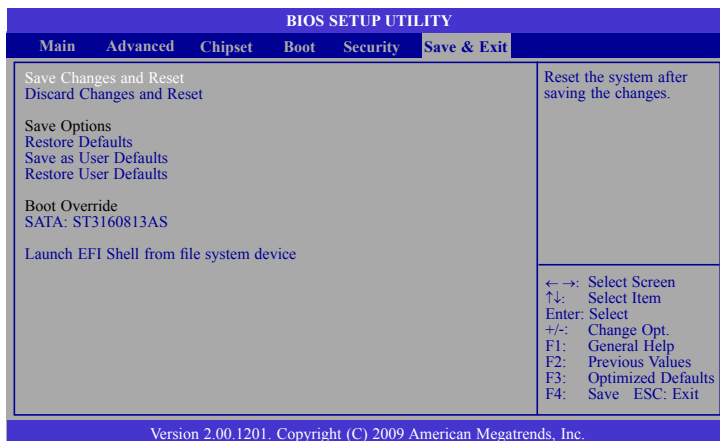

Enable Intel® AMT in the Intel® Management Engine BIOS Extension (MEBX) Screen


1. When the system reboots, the following message will be displayed. Press **<Ctrl-P>** as soon as the message is displayed; as this message will be displayed for only a few seconds.

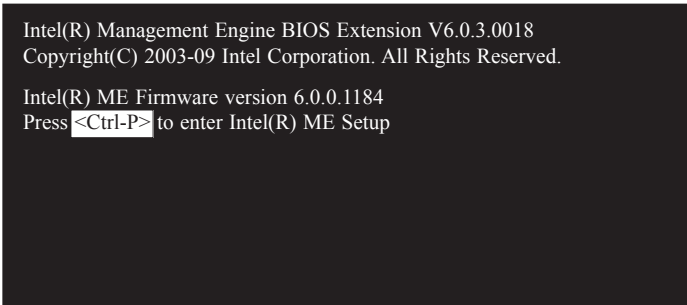

Intel(R) Management Engine BIOS Extension V6.0.3.0018
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

Intel(R) ME Firmware version 6.0.0.1184
Press **<Ctrl-P>** to enter Intel(R) ME Setup

2. You will be prompted for a password. The default password is "**admin**". Enter the default password in the space provided under Intel(R) ME Password then press Enter.

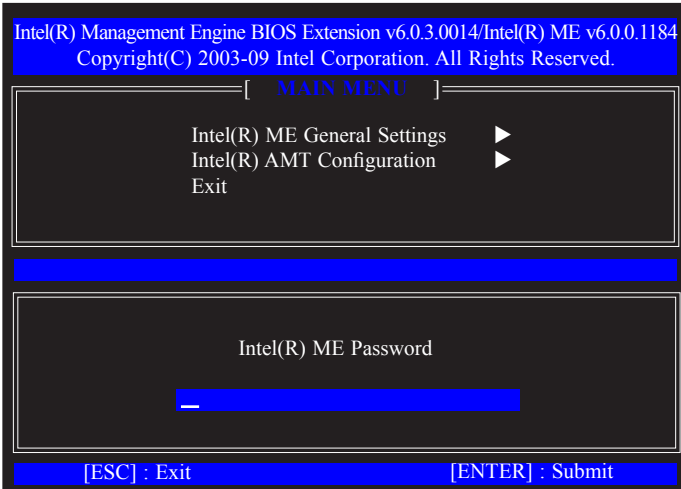

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.


[MAIN MENU]

Intel(R) ME General Settings ▶
Intel(R) AMT Configuration ▶
Exit

Intel(R) ME Password

[ESC] : Exit [ENTER] : Submit

3. Enter a new password in the space provided under Intel(R) ME New Password then press Enter. The password must include:
- 8-32 characters
 - Strong 7-bit ASCII characters excluding : , and " characters
 - At least one digit character (0, 1, ...9)
 - At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
 - Both lower case and upper case characters

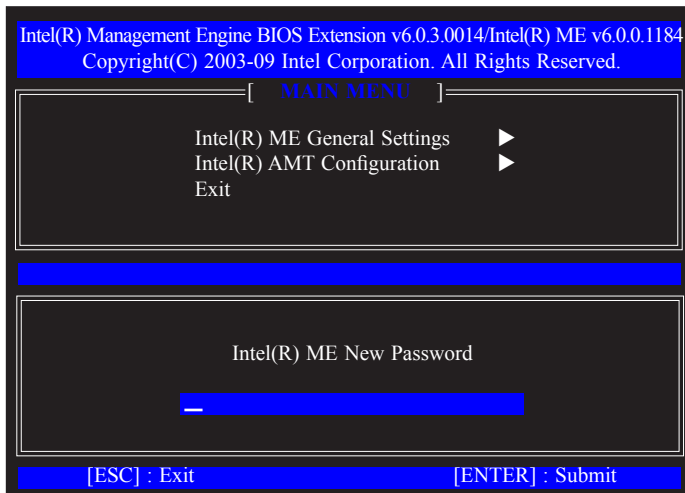

4. You will be asked to verify the password. Enter the same new password in the space provided under Verify Password then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[MAIN MENU]

Intel(R) ME General Settings ▶
Intel(R) AMT Configuration ▶
Exit

Verify Password

[ESC] : Exit [ENTER] : Submit

5. Select **Intel(R) ME General Settings** then press Enter.


Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[MAIN MENU]


Intel(R) ME General Settings ▶
Intel(R) AMT Configuration ▶
Exit

[ESC] : Exit [↑↓] : Select [ENTER] : Access

6. Select **Intel(R) ME State Control** then press Enter.

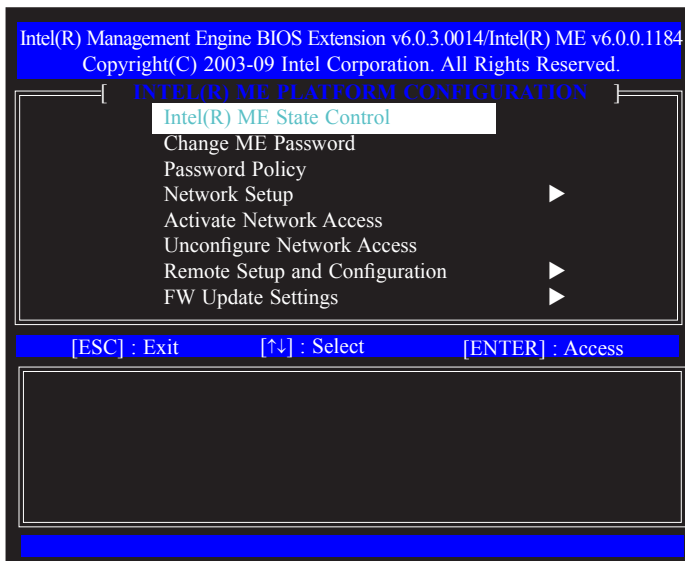


7. Select **Enabled** then press Enter.

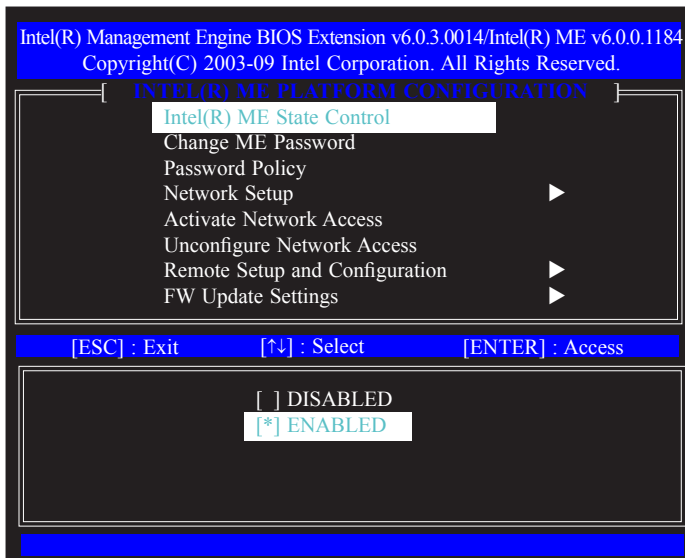

8. Select **Change ME Password** then press Enter.


You will be prompted for a password. The default password is "**admin**". Enter the default password in the space provided under Intel(R) ME Password then press Enter.

- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

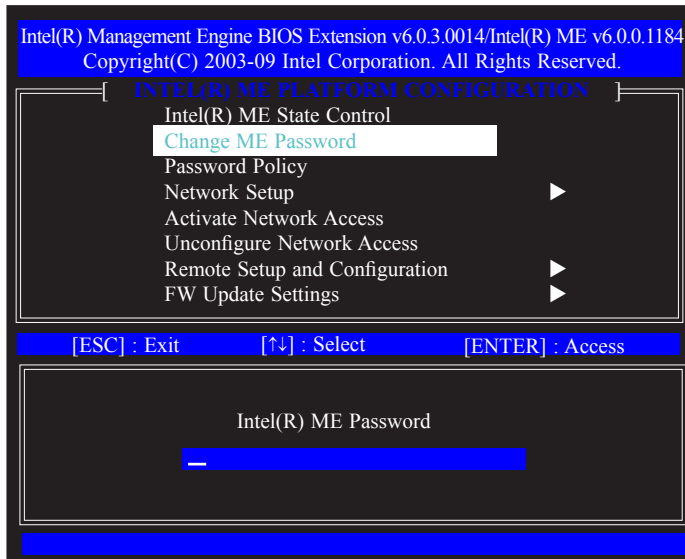


9. Select **Password Policy** then press Enter.


You may choose to use a password only during setup and configuration or to use a password anytime the system is being accessed.

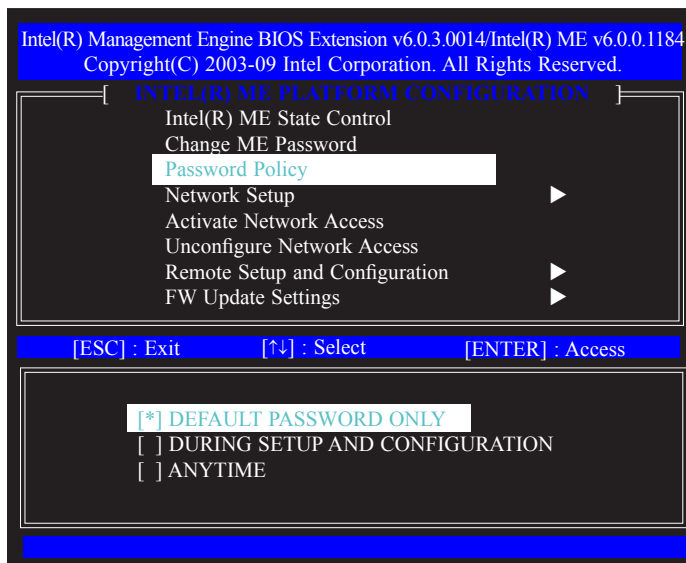


10. Select **Network Setup** then press Enter.

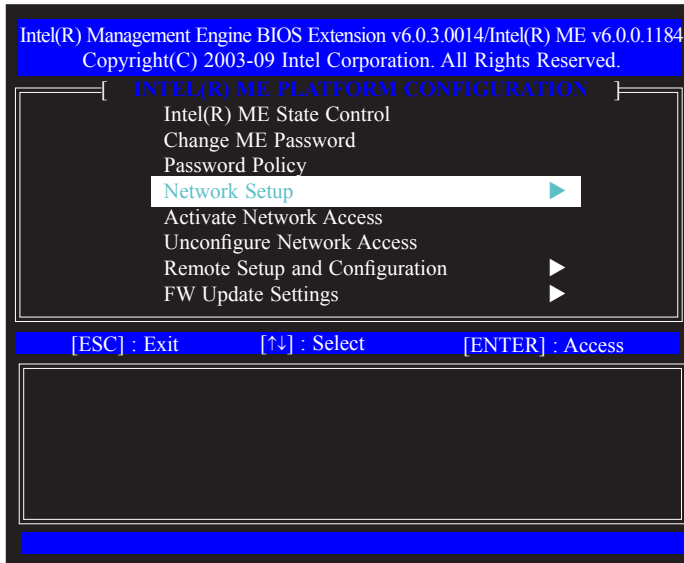


11. In the **Intel(R) Network Setup** menu, select **Intel(R) ME Network Name Settings** then press Enter.

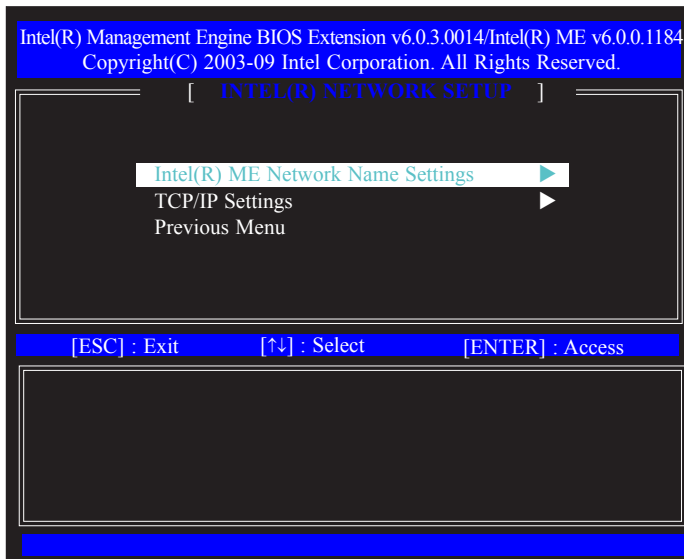

12. In the **Intel(R) ME Network Name Settings** menu, select **Host Name** then press Enter.

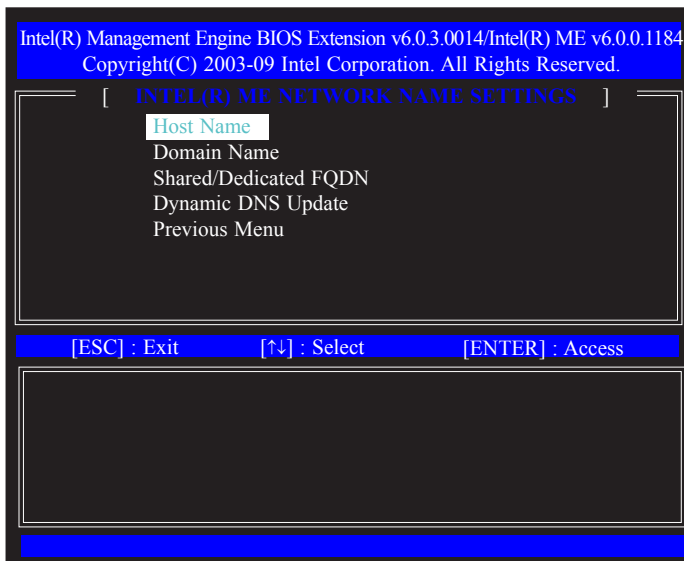

13. Enter the computer's host name then press Enter.

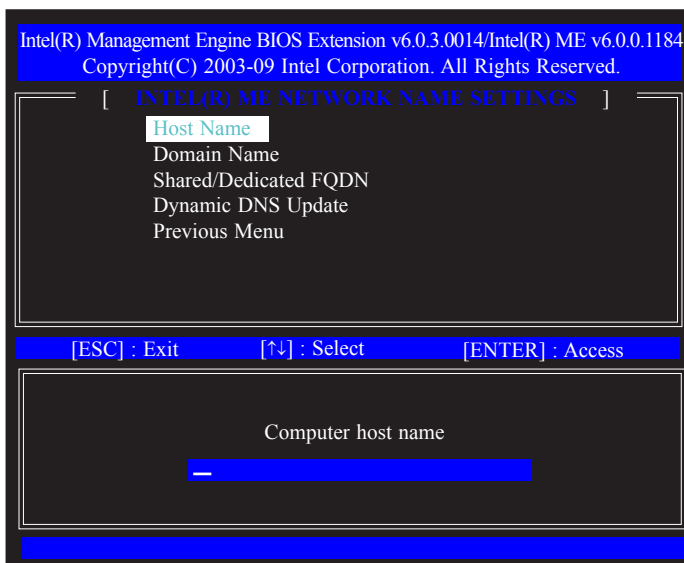

14. Select **Domain Name** then press Enter. Enter the domain name then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[INTEL(R) ME NETWORK NAME SETTINGS]

Host Name
Domain Name
Shared/Dedicated FQDN
Dynamic DNS Update
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

Computer Domain name

15. Select **Shared/Dedicated FQDN** then press Enter. Select Shared or Dedicated then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.


[INTEL(R) ME NETWORK NAME SETTINGS]

Host Name
Domain Name
Shared/Dedicated FQDN
Dynamic DNS Update
Previous Menu


[ESC] : Exit [↑↓] : Select [ENTER] : Access

[] DEDICATED
[*] SHARED


16. Select **Dynamic DNS Update** then press Enter. Select Enabled or Disabled then press Enter.

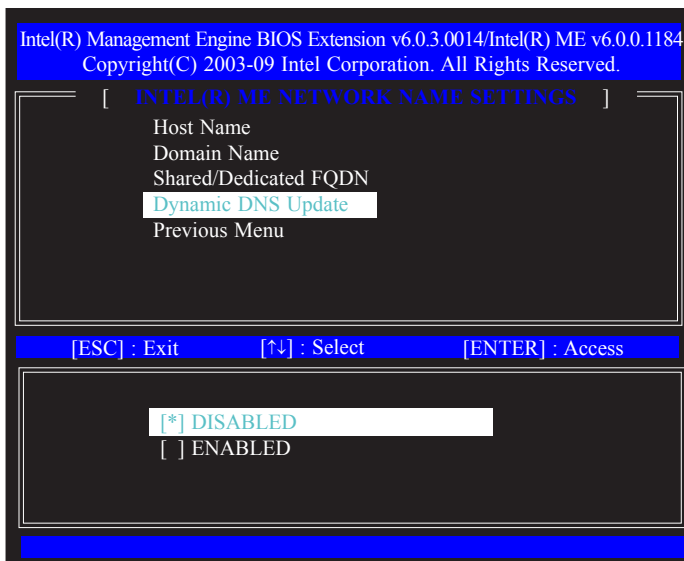


17. Select Previous Menu until you return to the **Network Setup** menu. Select **TCP/IP Settings** then press Enter.

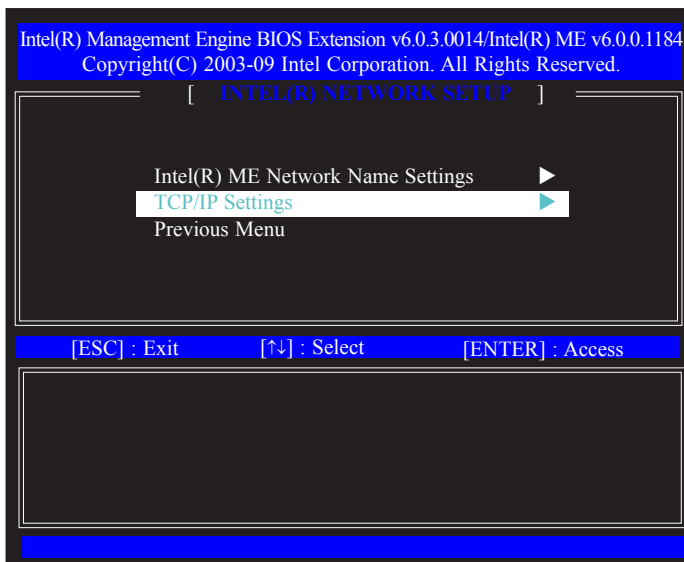


18. In the **TCP/IP Settings** menu, select **Wired LAN IPV4 Configuration** then press Enter.

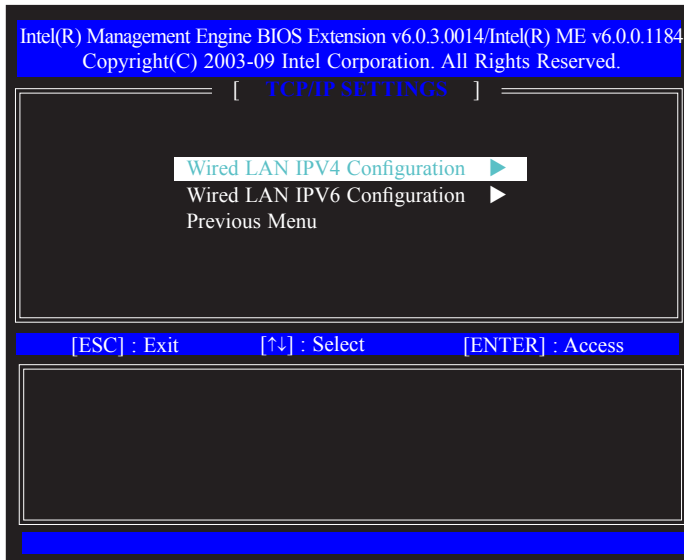


19. In the **Wired LAN IPV4 Configuration** menu, select **DHCP Mode** then press Enter. Select Enabled then press Enter.

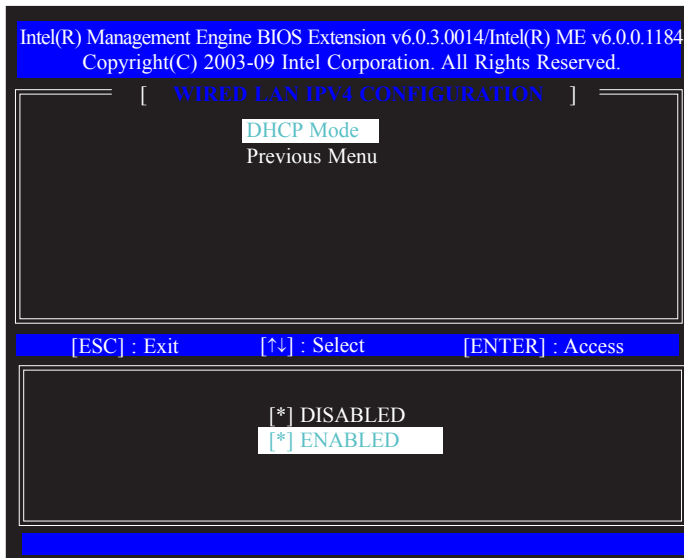

20. A list of options in the **Wired LAN IPv4 Configuration** menu will appear.

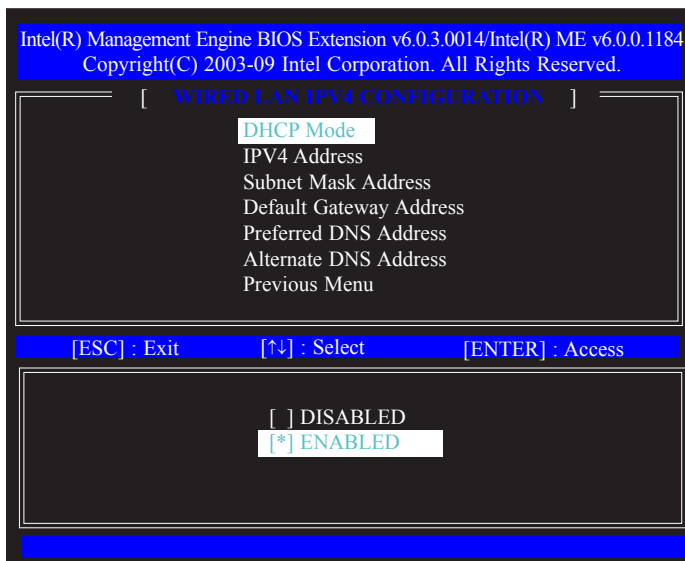

21. Select **IPV4 Address** then press Enter. Enter an IP Address then press Enter.

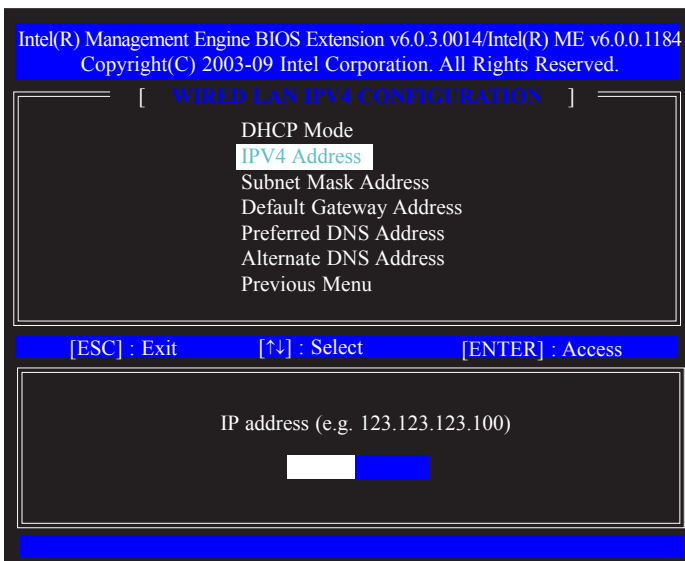

22. Select **Subnet Mask Address** then press Enter. Enter the subnet mask address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV4 CONFIGURATION]

DHCP Mode
IPV4 Address
Subnet Mask Address
Default Gateway Address
Preferred DNS Address
Alternate DNS Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

Subnet mask (e.g. 255.255.255.100)

23. Select **Default Gateway Address** then press Enter. Enter the default gateway address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV4 CONFIGURATION]

DHCP Mode
IPV4 Address
Subnet Mask Address
Default Gateway Address
Preferred DNS Address
Alternate DNS Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

Default Gateway Address

24. Select **Preferred DNS Address** then press Enter. Enter the preferred DNS address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV4 CONFIGURATION]

DHCP Mode
IPV4 Address
Subnet Mask Address
Default Gateway Address
Preferred DNS Address
Alternate DNS Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

Preferred DNS Address

25. Select **Alternate DNS Address** then press Enter. Enter the alternate DNS address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.


[WIRED LAN IPV4 CONFIGURATION]

DHCP Mode
IPV4 Address
Subnet Mask Address
Default Gateway Address
Preferred DNS Address
Alternate DNS Address
Previous Menu


[ESC] : Exit [↑↓] : Select [ENTER] : Access

Alternate DNS Address


26. Select Previous Menu until you return to the **TCP/IP Settings** menu. Select **Wired LAN IPv6 Configuration** then press Enter.

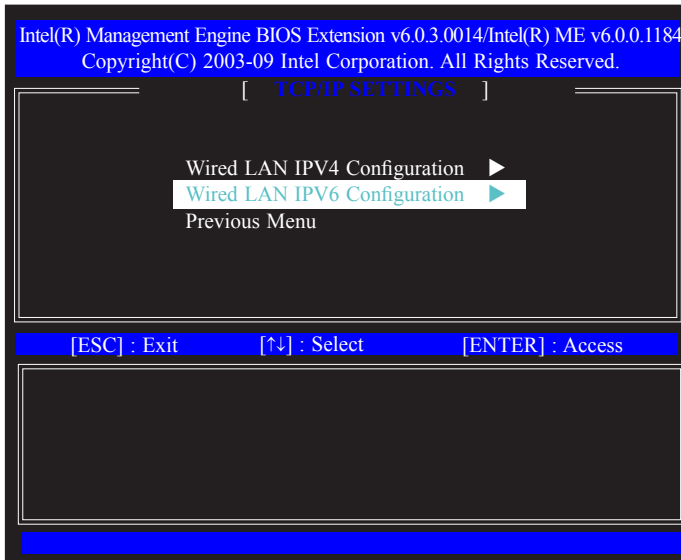


27. In the **Wired LAN IPv6 Configuration** menu, select **IPv6 Feature Selection** then press Enter. Select Enabled then press Enter.

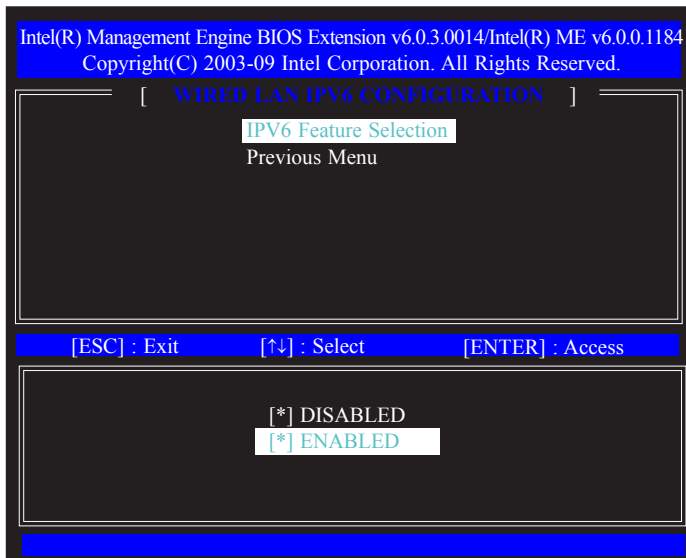

28. A list of options in the **Wired LAN IPv6 Configuration** menu will appear.

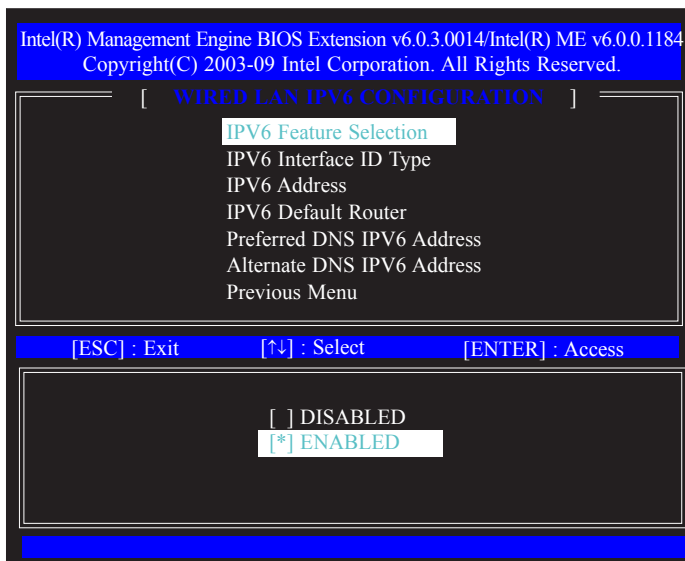

29. Select **IPV6 Interface ID Type** then press Enter. Select the ID type then press Enter.

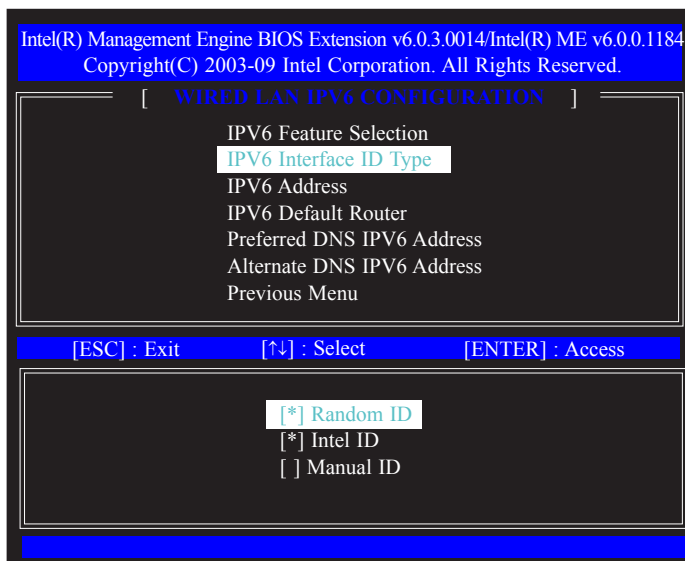

30. Select **IPv6 Address** then press Enter. Enter the IPv6 address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV6 CONFIGURATION]

IPV6 Feature Selection
IPV6 Interface ID Type
IPV6 Address
IPV6 Default Router
Preferred DNS IPV6 Address
Alternate DNS IPV6 Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

IPV6 Address (e.g. 2001:db8:1428:57ab or any other valid IPV6 Address)

31. Select **IPv6 Default Router** then press Enter. Enter the IPv6 default router address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV6 CONFIGURATION]

IPV6 Feature Selection
IPV6 Interface ID Type
IPV6 Address
IPV6 Default Router
Preferred DNS IPV6 Address
Alternate DNS IPV6 Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

IPV6 Address (e.g. 2001:db8:1428:57ab or any other valid IPV6 Address)

32. Select **Preferred DNS IPv6 Address** then press Enter. Enter the preferred DNS IPv6 address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV6 CONFIGURATION]

IPV6 Feature Selection
IPV6 Interface ID Type
IPV6 Address
IPV6 Default Router
Preferred DNS IPV6 Address
Alternate DNS IPV6 Address
Previous Menu

[ESC] : Exit [↑↓] : Select [ENTER] : Access

IPV6 Address (e.g. 2001:db8:1428:57ab or any other valid IPV6 Address)

33. Select **Alternate DNS IPv6 Address** then press Enter. Enter the alternate DNS IPv6 address then press Enter.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[WIRED LAN IPV6 CONFIGURATION]

IPV6 Feature Selection
IPV6 Interface ID Type
IPV6 Address
IPV6 Default Router
Preferred DNS IPV6 Address
Alternate DNS IPV6 Address
Previous Menu


[ESC] : Exit [↑↓] : Select [ENTER] : Access

IPV6 Address (e.g. 2001:db8:1428:57ab or any other valid IPV6 Address)


34. Select Previous Menu until you return to the **Intel(R) ME Platform Configuration** menu.

Select **Activate Network Access** then press Enter.


Type **Y** then press Enter.

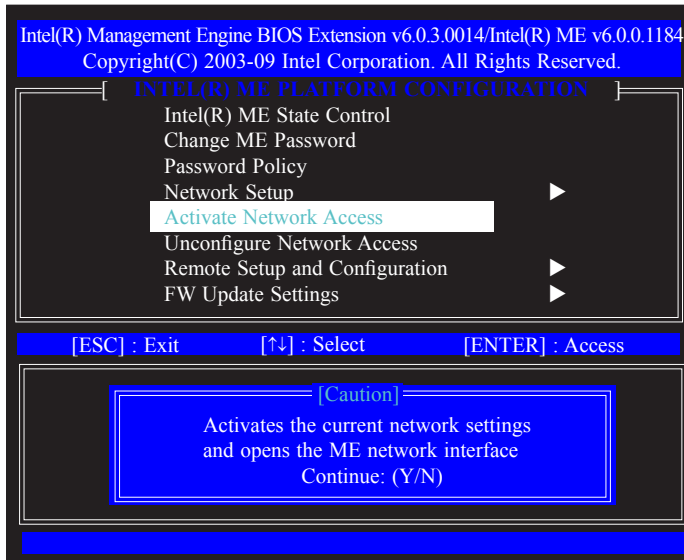


35. In the **Intel(R) ME Platform Configuration** menu, select **Unconfigure Network Access** then press Enter. Type **Y** then press Enter.

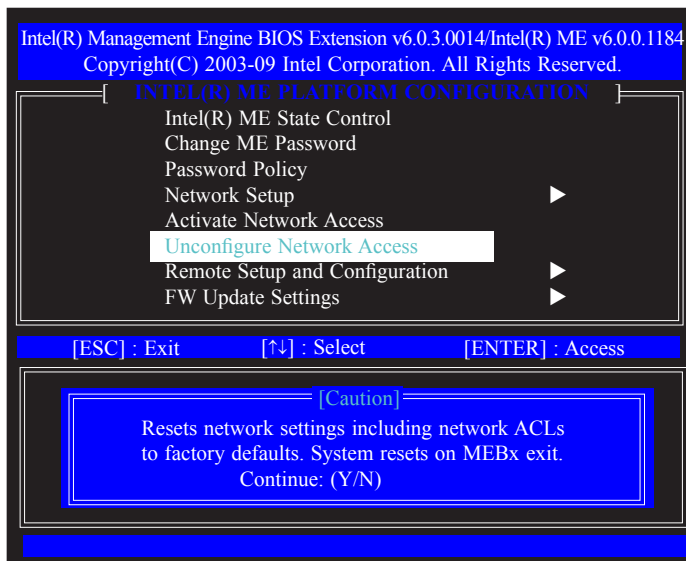


36. In the **Intel(R) ME Platform Configuration** menu, select **Remote Setup and Configuration** then press Enter.

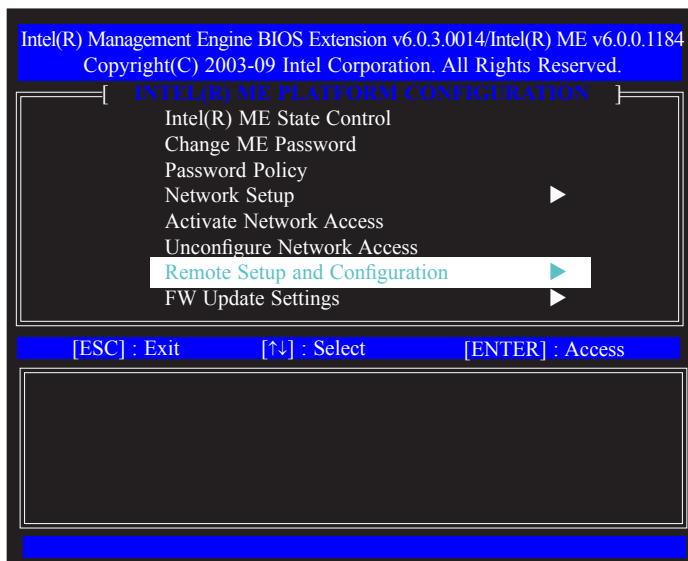


37. Select Previous Menu until you return to the **Intel(R) ME Platform Configuration** menu. Select **FW Update Settings** then press Enter.

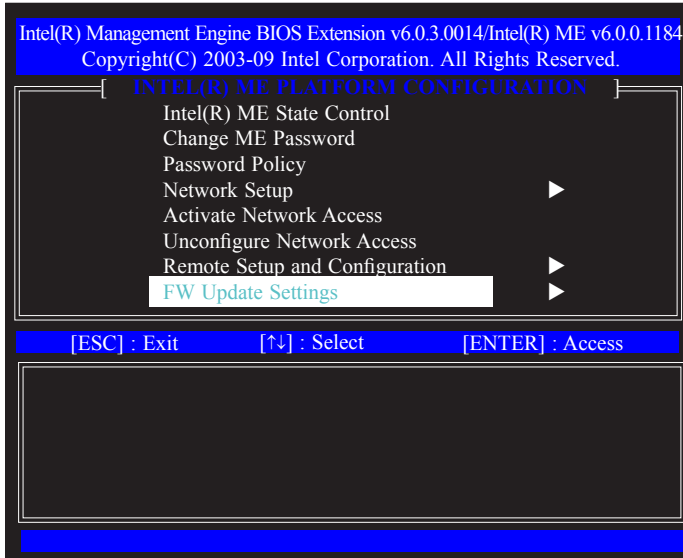


38. In the **FW Update Settings** menu, select **Local FW Update** then press Enter. Select **Enabled** then press Enter.

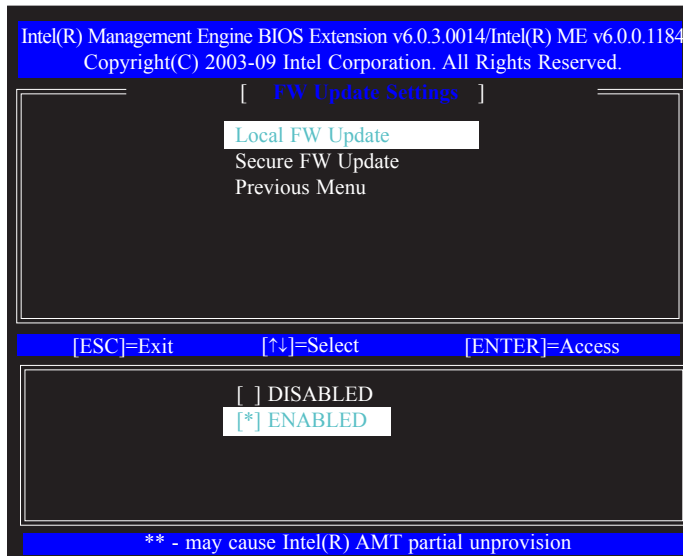

39. In the **FW Update Settings** menu, select **Secure FW Update** then press Enter. Select **Enabled** then press Enter.

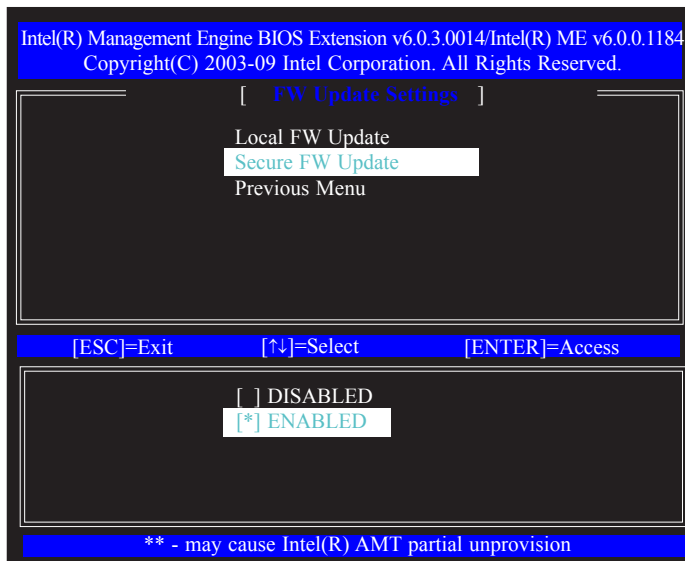

40. Select Previous Menu until you return to the **Intel(R) ME Platform Configuration** menu. Select **Set PRTC** then press Enter.

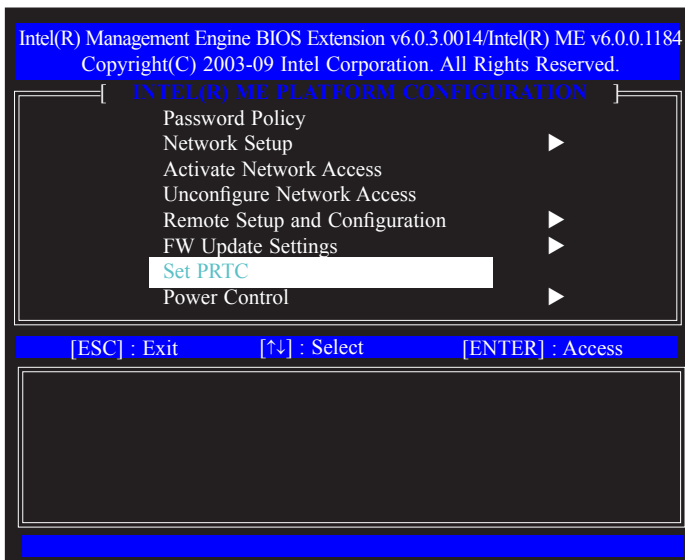

41. Enter the PRTC in GMT(UTC) format.

Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[INTEL(R) ME PLATFORM CONFIGURATION]

- Password Policy
- Network Setup ▶
- Activate Network Access
- Unconfigure Network Access
- Remote Setup and Configuration ▶
- FW Update Settings ▶
- Set PRTC**
- Power Control ▶

Enter PRTC in GMT(UTC) format (YYYY:MM:DD:HH:MM:SS)

—

[ESC]=Exit [ENTER]=Submit

42. In the **Intel(R) ME Platform Configuration** menu, select **Power Control** then press Enter.


Intel(R) Management Engine BIOS Extension v6.0.3.0014/Intel(R) ME v6.0.0.1184
Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.

[INTEL(R) ME PLATFORM CONFIGURATION]


- Password Policy
- Network Setup ▶
- Activate Network Access
- Unconfigure Network Access
- Remote Setup and Configuration ▶
- FW Update Settings ▶
- Set PRTC
- Power Control** ▶

[ESC] : Exit [↑↓] : Select [ENTER] : Access


43. In the **Intel(R) ME Power Control** menu, select **Intel(R) ME ON in Host Sleep States** then press Enter. Select an option then press Enter.

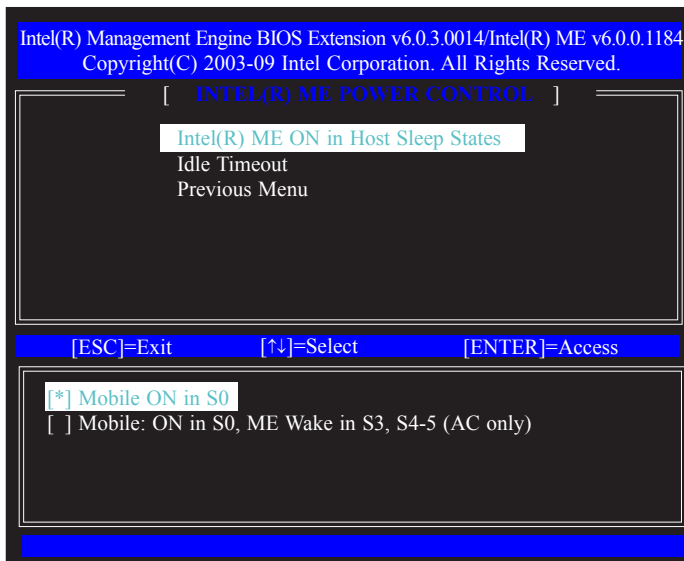


44. In the **Intel(R) ME Power Control** menu, select **Idle Timeout** then press Enter. Enter the timeout value.

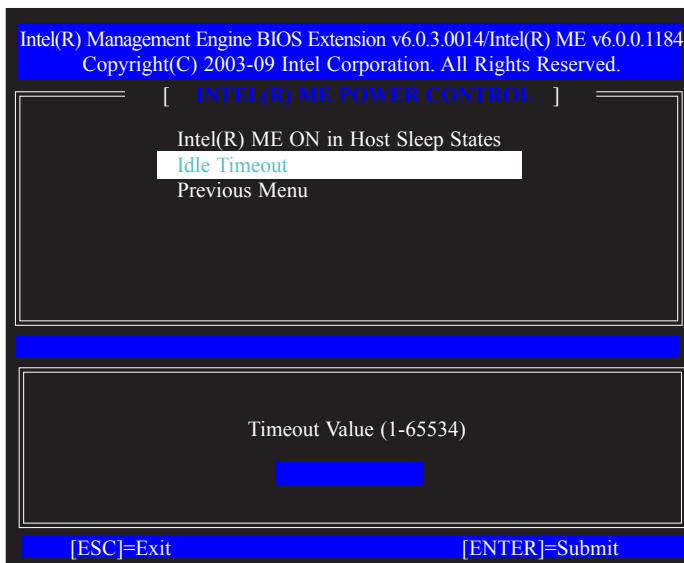


45. Select Previous Menu until you return to the **Main Menu**. Select **Intel(R) AMT Configuration**.

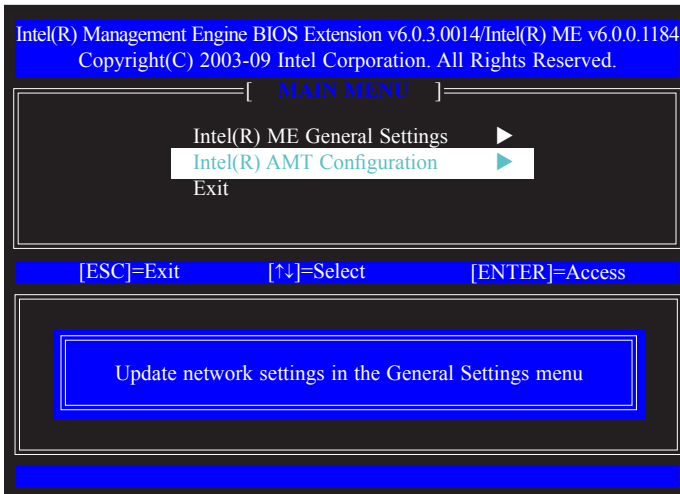


46. In the **Intel(R) AMT Configuration** menu, select **Manageability Feature Selection** then press Enter.

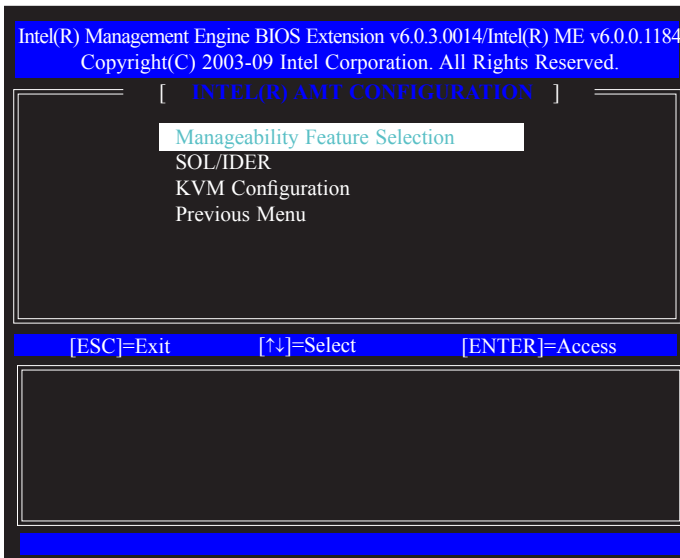


47. Type **Y** then press Enter.

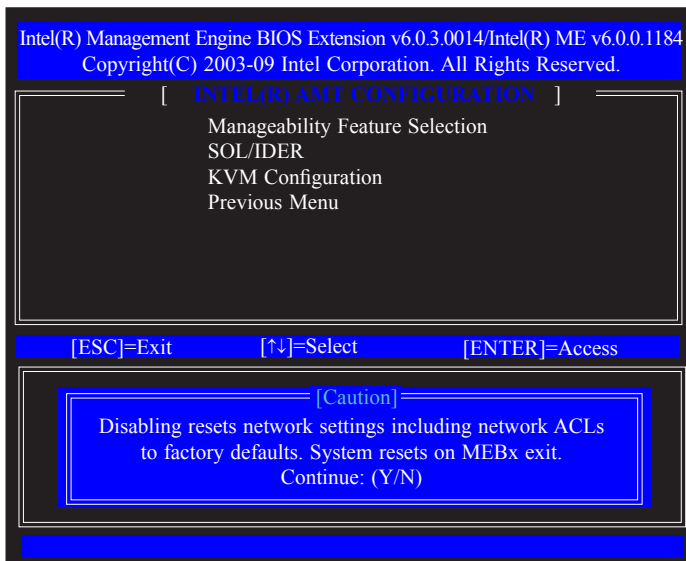


48. In the **Intel(R) AMT Configuration** menu, select **SOL/IDER** then press Enter.

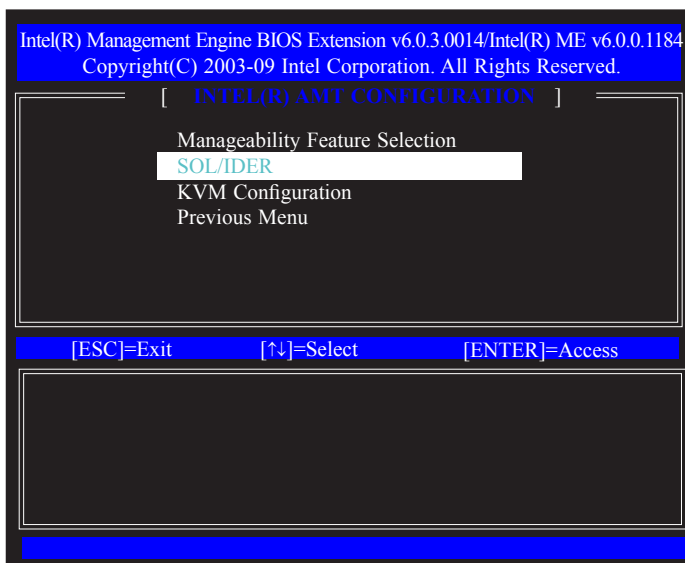


49. In the **SOL/IDER** menu, select **Username & Password** then press Enter. Select Enabled then press Enter.

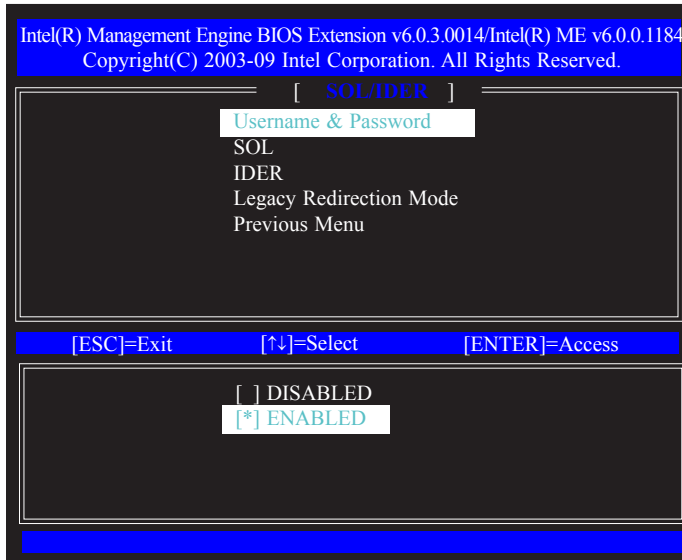


50. In the **SOL/IDER** menu, select **SOL** then press Enter. Select Enabled then press Enter.

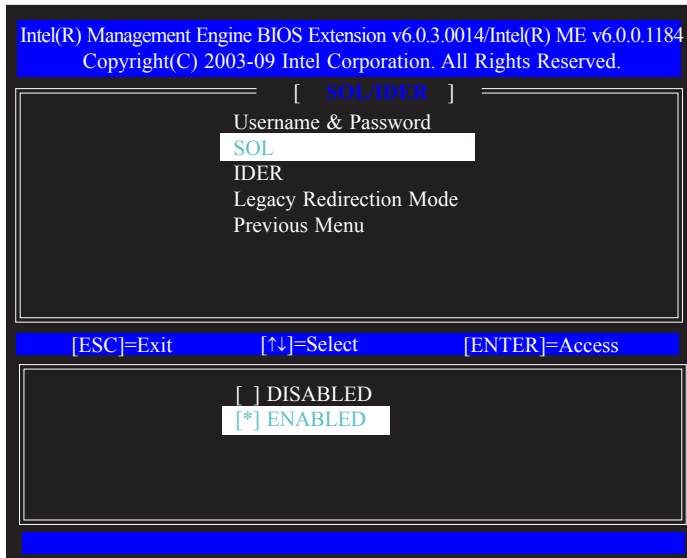


51. In the **SOL/IDER** menu, select **IDER** then press Enter. Select Enabled then press Enter.

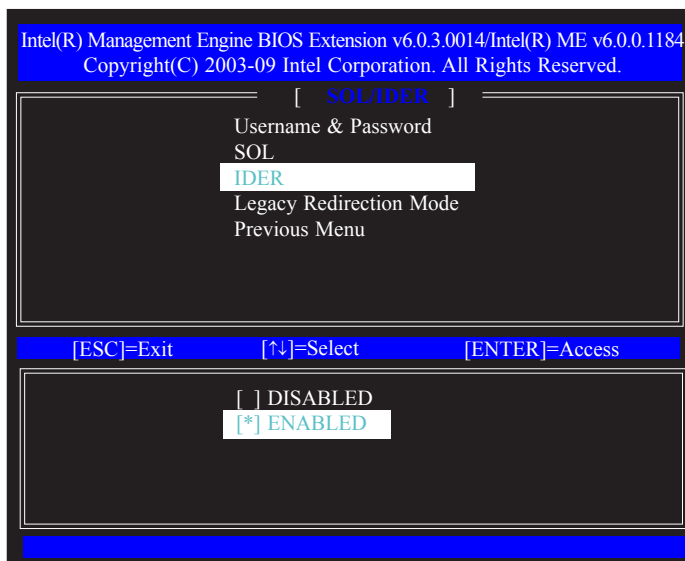


52. In the **SOL/IDER** menu, select **Legacy Redirection Mode** then press Enter.

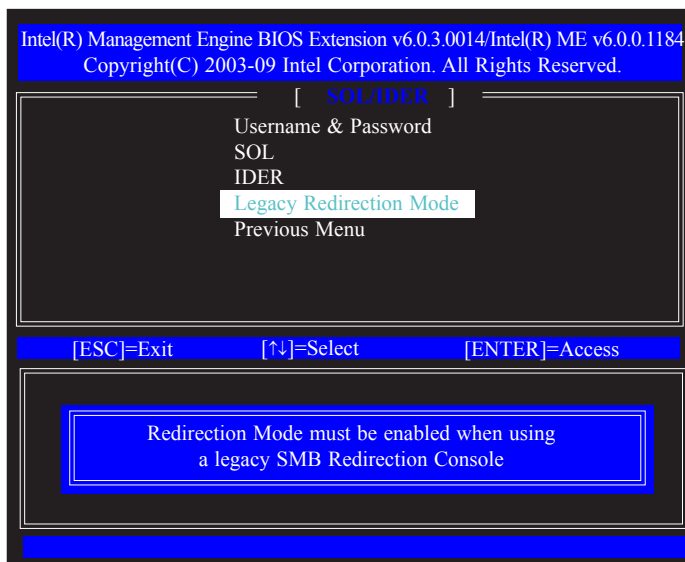


53. Select Previous Menu until you return to the **Intel(R) AMT Configuration** menu. Select **KVM Configuration** then press Enter.

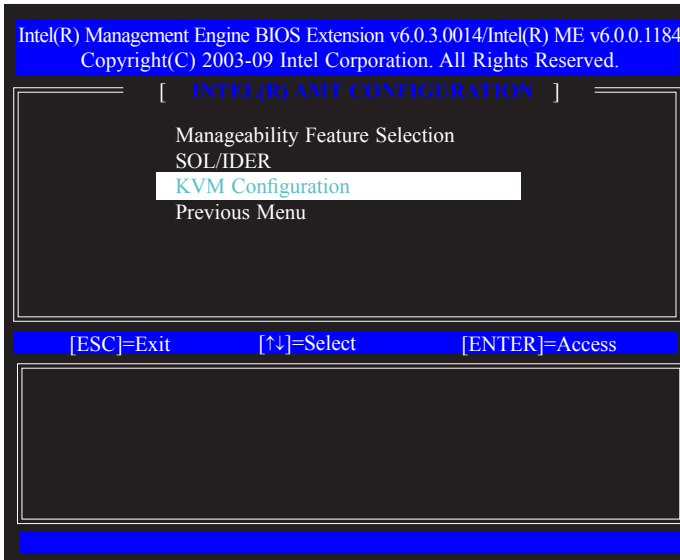


54. In the **KVM Configuration** menu, select **KVM Feature Selection** then press Enter. Select Enabled then press Enter.

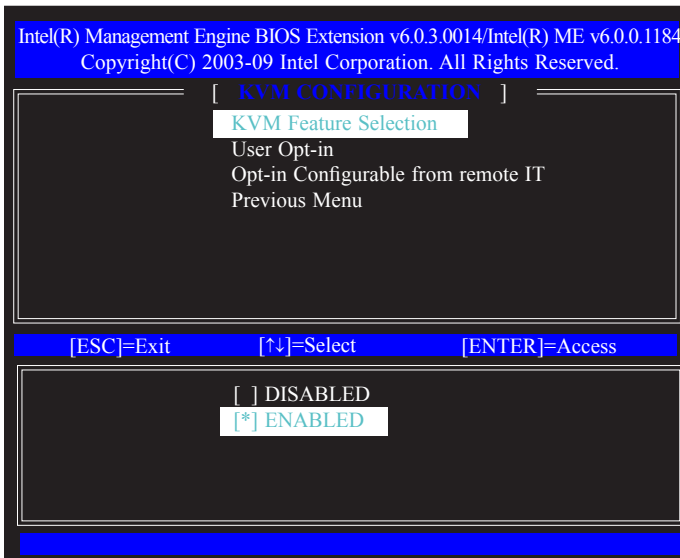


55. In the **KVM Configuration** menu, select **User Opt-in** then press Enter. Select **User Consent is required for KVM Session** then press Enter.

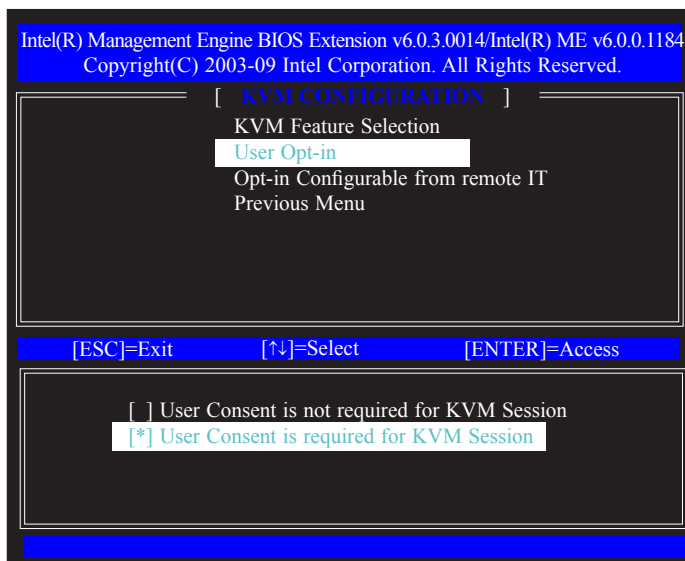

56. In the **KVM Configuration** menu, select **Opt-in Configurable from Remote IT** then press Enter. Select **Enable Remote Control of KVM Opt-in Policy** then press Enter.

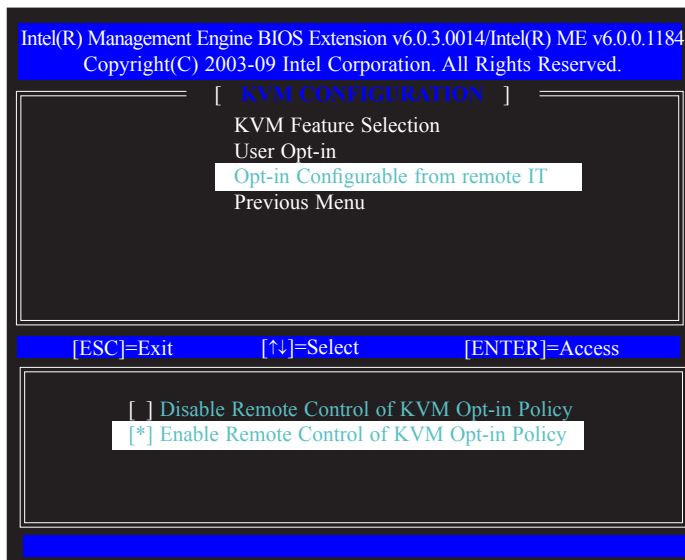


57. Select Previous Menu until you return to the **Main Menu**. Select Exit then press Enter.

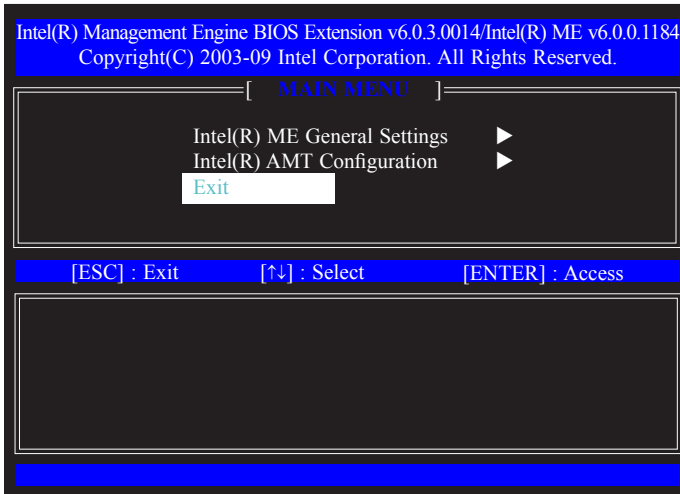

58. The following message will be displayed on the screen.

[CONFIRM EXIT]
Are you sure you want to exit? (Y/N):

Press **Y**.

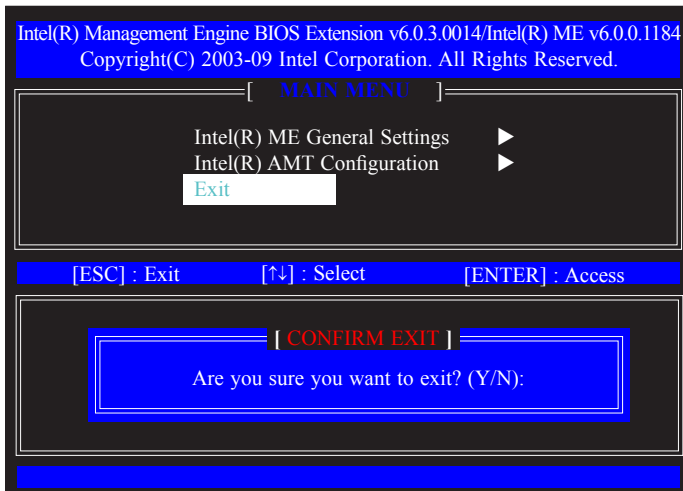

Appendix A - NLITE and AHCI Installation Guide

nLite

nLite is an application program that allows you to customize your XP installation disc by integrating the RAID/AHCI drivers into the disc. By using nLite, the F6 function key usually required during installation is no longer needed.



Note:

The installation steps below are based on nLite version 1.4.9. Installation procedures may slightly vary if you're using another version of the program.

1. Download the program from nLite's official website.

<http://www.nliteos.com/download.html>

2. Install nLite.




Important:


Due to it's coding with Visual.Net, you may need to first install .NET Framework prior to installing nLite.

3. Download relevant RAID/AHCI driver files from Intel's website. The drivers you choose will depend on the operating system and chipset used by your computer.

The downloaded driver files should include iaahci.cat, iaAHCI.inf, iastor.cat, iaStor.inf, IaStor.sys, license.txt and TXTSETUP.OEM.

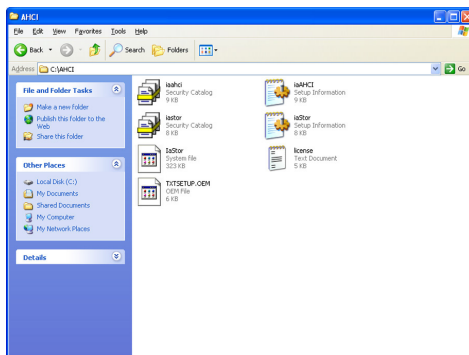


4. Insert the XP installation disc into an optical drive.
5. Launch nLite. The Welcome screen will appear. Click **Next**.

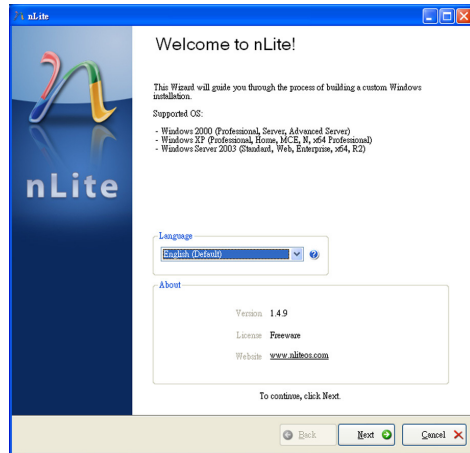


6. Click **Next** to temporarily save the Windows installation files to the designated default folder.


If you want to save them in another folder, click **Browse**, select the folder and then click **Next**.

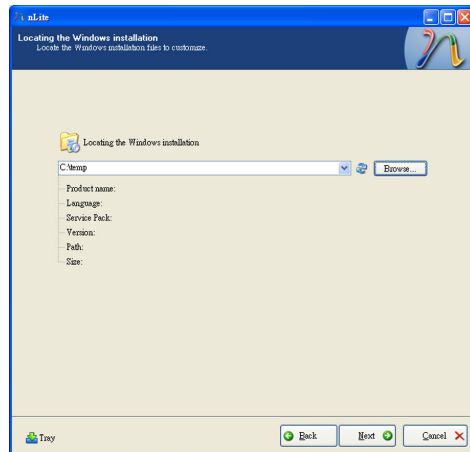


7. Click **Next**.

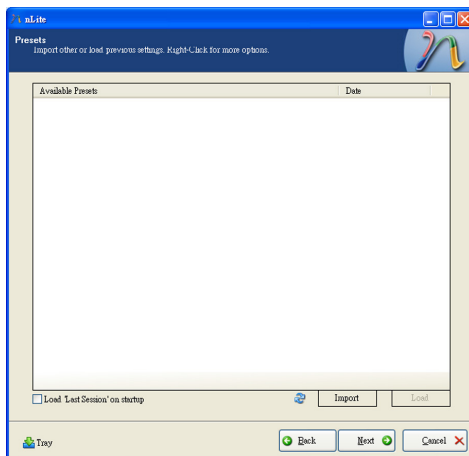

8. In the Task Selection dialog box, click **Drivers** and **Bootable ISO**. Click **Next**.

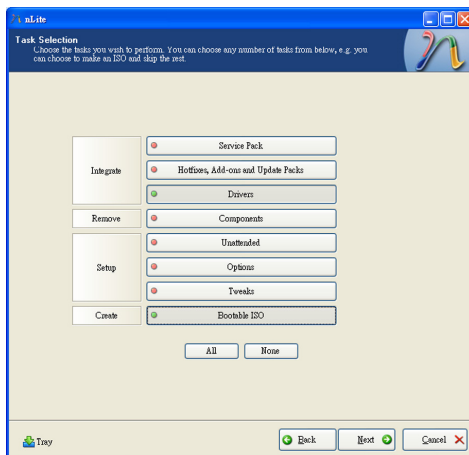


9. Click **Insert** and then select **Multiple driver folder** to select the drivers you will integrate. Click **Next**.

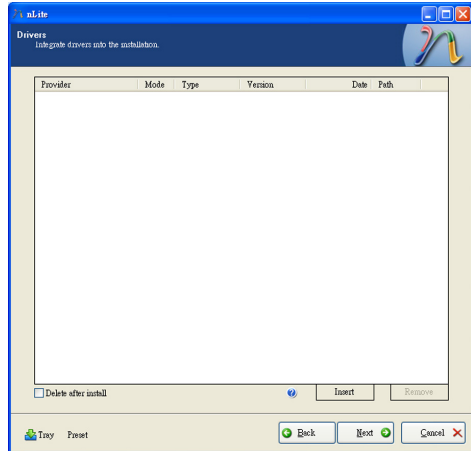


10. Select only the drivers appropriate for the Windows version that you are using and then click **OK**.


Integrating 64-bit drivers into 32-bit Windows or vice versa will cause file load errors and failed installation.

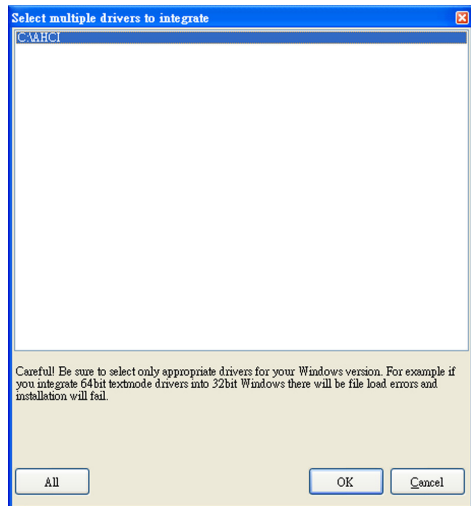


11. If you are uncertain of the southbridge chip used on your motherboard, select all RAID/AHCI controllers and then click **OK**.

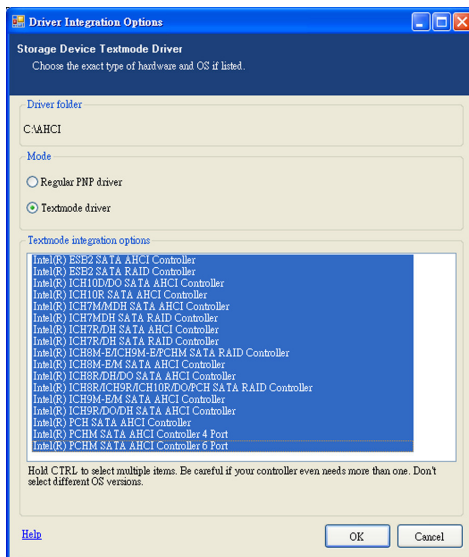


12. Click **Next**.

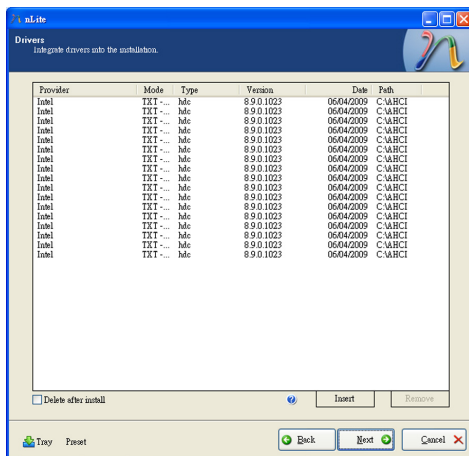


13. The program is currently integrating the drivers and applying changes to the installation.

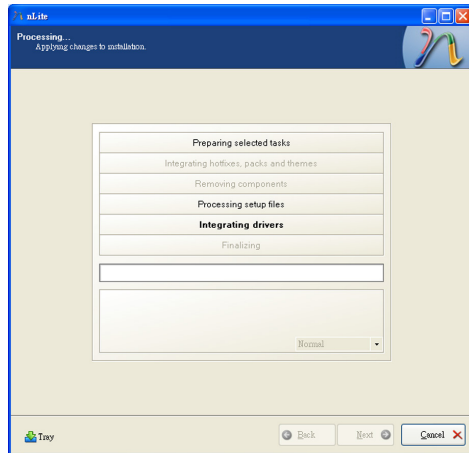

14. When the program is finished applying the changes, click **Next**.

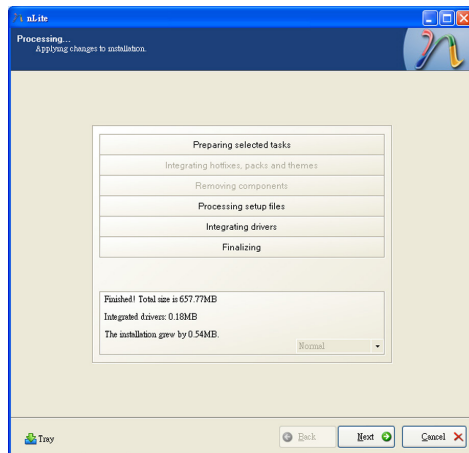


15. To create an image, select the **Create Image** mode under the General section and then click **Next**.

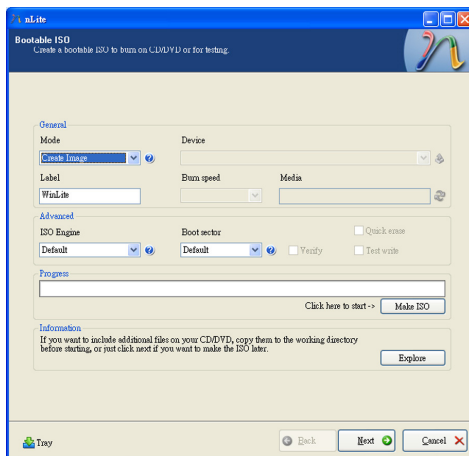


16. Or you can choose to burn it directly to a disc by selecting the **Direct Burn** mode under the General section.

Select the optical device and all other necessary settings and then click **Next**.

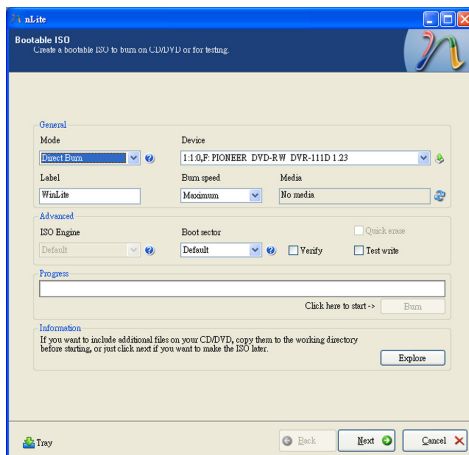

17. You have finished customizing the Windows XP installation disc. Click **Finish**.

Enter the BIOS utility to configure the SATA controller to RAID/AHCI. You can now install Windows XP.

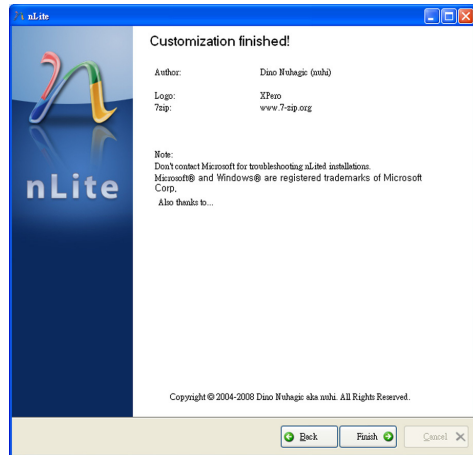


AHCI

The installation steps below will guide you in configuring your SATA drive to AHCI mode.


1. Enter the BIOS utility and configure the SATA controller to IDE mode.
2. Install Windows XP but do not press F6.
3. Download relevant RAID/AHCI driver files supported by the motherboard chipset from Intel's website.

Transfer the downloaded driver files to C:\AHCI.

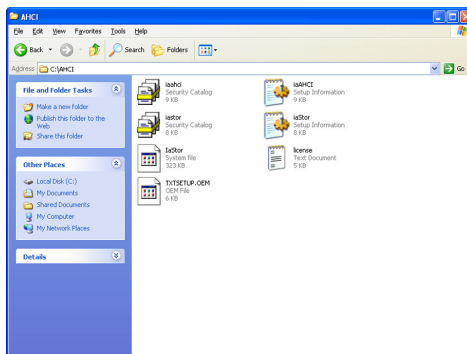


4. Open Device Manager and right click on one of the Intel Serial ATA Storage Controllers, then select **Update Driver**.


If the controller you selected did not work, try selecting another one.

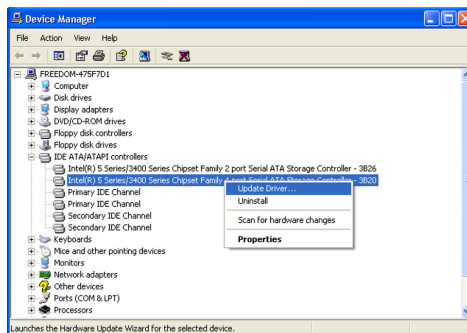


5. In the Hardware Update Wizard dialog box, select **"No, not this time"** then click **Next**.

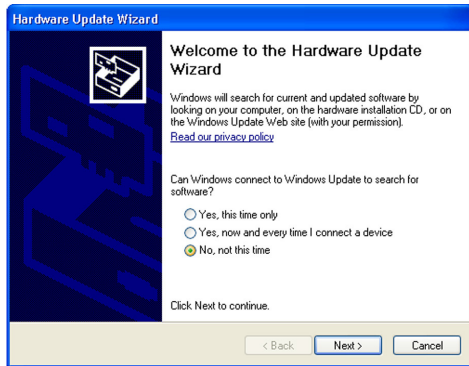


6. Select **"Install from a list or specific location (Advanced)"** and then click **Next**.

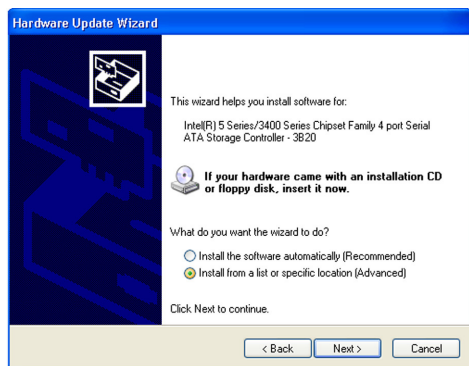


7. Select **"Don't search. I will choose the driver to install"** and then click **Next**.

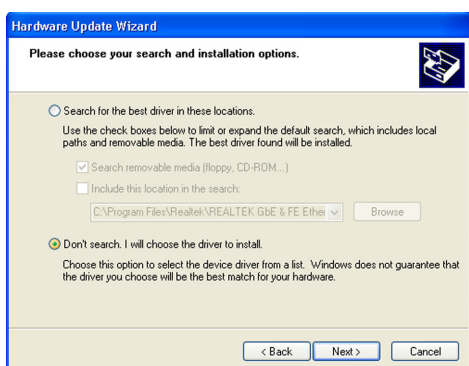


8. Click **"Have Disk"**.

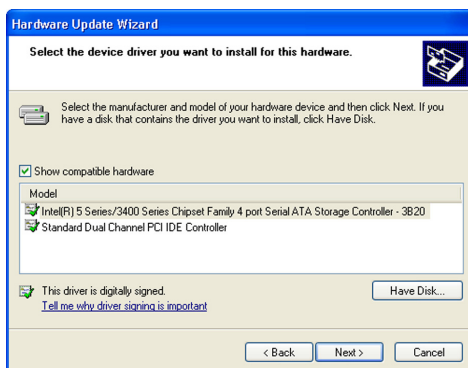


9. Select C:\AHCI\iaAHCI.inf and then click **Open**.

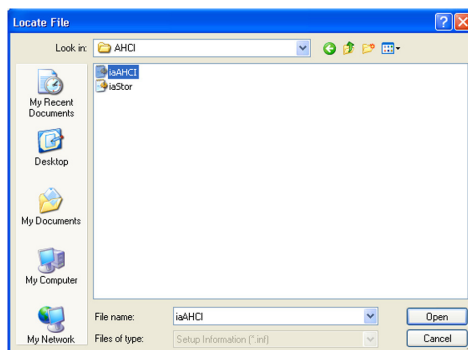

10. Select the appropriate AHCI Controller of your hardware device and then click **Next**.

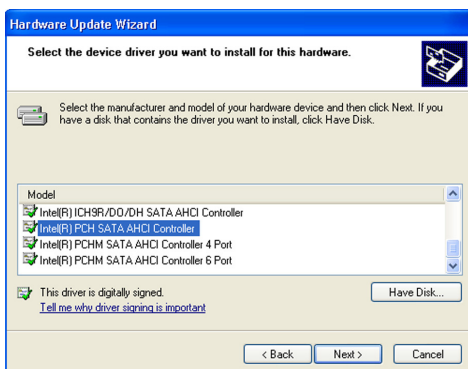


11. A warning message appeared because the selected SATA controller did not match your hardware device.




Ignore the warning and click **Yes** to proceed.


12. Click **Finish**.

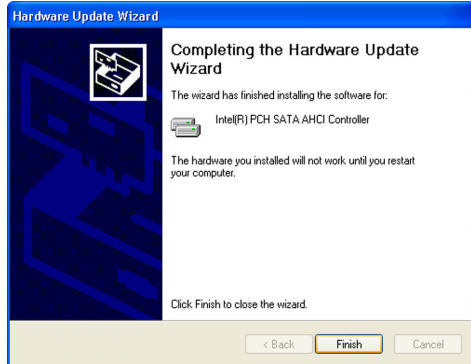

13. The system's settings have been changed. Windows XP requires that you restart the computer. Click **Yes**.



14. Enter the BIOS utility and modify the SATA controller from IDE to AHCI. By doing so, Windows will work normally with the SATA controller that is in AHCI mode.

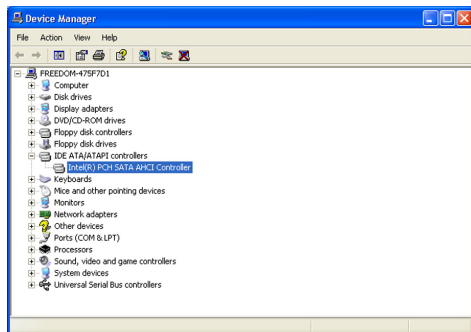

Appendix B - Watchdog Sample Code

;Software programming example:

```
-----  
;(1) Enter Super IO Configuration mode  
-----  
MOV     DX,2EH  
MOV     AL,87H  
OUT     DX,AL  
OUT     DX,AL  
  
-----  
;(2) Configuration Logical Device 7, register CRF5/CRF6 (WDT Control /WDT  
timer)  
-----  
MOV     DX,2EH  
MOV     AL,07H           ;Ready to Program Logical Device  
OUT     DX,AL  
  
MOV     DX,2FH  
MOV     AL,07H           ;Select Logical Device 7  
OUT     DX,AL  
  
MOV     DX,2EH  
MOV     AL, F6H           ;Select watchdog timer register  
OUT     DX,AL  
  
MOV     DX,2FH  
MOV     AL,10H           ;Set watchdog timer value  
OUT     DX,AL  
  
MOV     DX,2EH  
MOV     AL, F5H           ;Select watchdog Control Register  
OUT     DX,AL  
  
MOV     DX,2FH  
MOV     AL,61H           ;Set Watchdog Control Value  
OUT     DX,AL  
  
-----  
;(1) Exit extended function mode  
-----  
MOV     DX,2EH  
MOV     AL,AAH  
OUT     DX,AL
```


Appendix C - System Error Message

When the BIOS encounters an error that requires the user to correct something, either a beep code will sound or a message will be displayed in a box in the middle of the screen and the message, PRESS F1 TO CONTINUE, CTRL-ALT-ESC or DEL TO ENTER SETUP, will be shown in the information box at the bottom. Enter Setup to correct the error.

Error Messages

One or more of the following messages may be displayed if the BIOS detects an error during the POST. This list indicates the error messages for all Awards BIOSes:

CMOS BATTERY HAS FAILED

The CMOS battery is no longer functional. It should be replaced.



Important

Danger of explosion if battery incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the battery manufacturer's instructions.

CMOS CHECKSUM ERROR

Checksum of CMOS is incorrect. This can indicate that CMOS has become corrupt. This error may have been caused by a weak battery. Check the battery and replace if necessary.

DISPLAY SWITCH IS SET INCORRECTLY

The display switch on the motherboard can be set to either monochrome or color. This indicates the switch is set to a different setting than indicated in Setup. Determine which setting is correct, either turn off the system and change the jumper or enter Setup and change the VIDEO selection.

FLOPPY DISK(S) fail (80)

Unable to reset floppy subsystem.

FLOPPY DISK(S) fail (40)

Floppy type mismatch.

Hard Disk(s) fail (80)

HDD reset failed.

Hard Disk(s) fail (40)

HDD controller diagnostics failed.

Hard Disk(s) fail (20)

HDD initialization error.

Hard Disk(s) fail (10)

Unable to recalibrate fixed disk.

Hard Disk(s) fail (08)

Sector Verify failed.

Keyboard is locked out - Unlock the key

The BIOS detects that the keyboard is locked. Keyboard controller is pulled low.

Keyboard error or no keyboard present

Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are being pressed during the boot.

Manufacturing POST loop

System will repeat POST procedure infinitely while the keyboard controller is pulled low. This is also used for the M/B burn in test at the factory.

BIOS ROM checksum error - System halted

The checksum of ROM address F0000H-FFFFFH is bad.

Memory test fail

The BIOS reports memory test fail if the memory has error(s).

Appendix D - Troubleshooting

Troubleshooting Checklist

This chapter of the manual is designed to help you with problems that you may encounter with your personal computer. To efficiently troubleshoot your system, treat each problem individually. This is to ensure an accurate diagnosis of the problem in case a problem has multiple causes.

Some of the most common things to check when you encounter problems while using your system are listed below.

1. The power switch of each peripheral device is turned on.
2. All cables and power cords are tightly connected.
3. The electrical outlet to which your peripheral devices are connected is working. Test the outlet by plugging in a lamp or other electrical device.
4. The monitor is turned on.
5. The display's brightness and contrast controls are adjusted properly.
6. All add-in boards in the expansion slots are seated securely.
7. Any add-in board you have installed is designed for your system and is set up correctly.

Monitor/Display

If the display screen remains dark after the system is turned on:

1. Make sure that the monitor's power switch is on.
2. Check that one end of the monitor's power cord is properly attached to the monitor and the other end is plugged into a working AC outlet. If necessary, try another outlet.
3. Check that the video input cable is properly attached to the monitor and the system's display adapter.
4. Adjust the brightness of the display by turning the monitor's brightness control knob.

The picture seems to be constantly moving.

1. The monitor has lost its vertical sync. Adjust the monitor's vertical sync.
2. Move away any objects, such as another monitor or fan, that may be creating a magnetic field around the display.
3. Make sure your video card's output frequencies are supported by this monitor.

The screen seems to be constantly wavering.

1. If the monitor is close to another monitor, the adjacent monitor may need to be turned off. Fluorescent lights adjacent to the monitor may also cause screen wavering.

Power Supply

When the computer is turned on, nothing happens.

1. Check that one end of the AC power cord is plugged into a live outlet and the other end properly plugged into the back of the system.
2. Make sure that the voltage selection switch on the back panel is set for the correct type of voltage you are using.
3. The power cord may have a "short" or "open". Inspect the cord and install a new one if necessary.

Floppy Drive

The computer cannot access the floppy drive.

1. The floppy diskette may not be formatted. Format the diskette and try again.
2. The diskette may be write-protected. Use a diskette that is not write-protected.
3. You may be writing to the wrong drive. Check the path statement to make sure you are writing to the targeted drive.
4. There is not enough space left on the diskette. Use another diskette with adequate storage space.

Hard Drive

Hard disk failure.

1. Make sure the correct drive type for the hard disk drive has been entered in the BIOS.
2. If the system is configured with two hard drives, make sure the bootable (first) hard drive is configured as Master and the second hard drive is configured as Slave. The master hard drive must have an active/bootable partition.

Excessively long formatting period.

If your hard drive takes an excessively long period of time to format, it is likely a cable connection problem. However, if your hard drive has a large capacity, it will take a longer time to format.

Serial Port

The serial device (modem, printer) doesn't output anything or is outputting garbled characters.

1. Make sure that the serial device's power is turned on and that the device is on-line.
2. Verify that the device is plugged into the correct serial port on the rear of the computer.
3. Verify that the attached serial device works by attaching it to a serial port that is working and configured correctly. If the serial device does not work, either the cable or the serial device has a problem. If the serial device works, the problem may be due to the onboard I/O or the address setting.
4. Make sure the COM settings and I/O address are configured correctly.

Keyboard

Nothing happens when a key on the keyboard was pressed.

1. Make sure the keyboard is properly connected.
2. Make sure there are no objects resting on the keyboard and that no keys are pressed during the booting process.

System Board

1. Make sure the add-in card is seated securely in the expansion slot. If the add-in card is loose, power off the system, re-install the card and power up the system.
2. Check the jumper settings to ensure that the jumpers are properly set.
3. Verify that all memory modules are seated securely into the memory sockets.
4. Make sure the memory modules are in the correct locations.
5. If the board fails to function, place the board on a flat surface and seat all socketed components. Gently press each component into the socket.
6. If you made changes to the BIOS settings, re-enter setup and load the BIOS defaults.